

AD-A054 496

ARINC RESEARCH CORP ANNAPOLIS MD

DEVELOPMENT OF AIR FORCE FLIGHT SAFETY MODELS. VOLUME 15. F-15 --ETC(U)

SEP 76

F09603-72-A-1132

NL

UNCLASSIFIED

C54-01-1-1406-VOL-15

1 of 2
AD
A054496



FOR FURTHER TRAN ~~IT~~ APSO

Final Report ~~AS4495~~

DEVELOPMENT OF AIR FORCE
FLIGHT SAFETY MODELS

Volume 15

F-15

AIRCRAFT

September 1976

Prepared for

SERVICE ENGINEERING DIVISION
SAN ANTONIO AIR LOGISTICS CENTER
Kelly Air Force Base, Texas

Under Contract F09603-72-A-1132-SA01

Publication C54-01-1-1406

ARINC RESEARCH CORPORATION

This document has been approved
for public release and sale; its
distribution is unlimited.

AD A 054496

AD No.
DDC FILE COPY

DDC
MAY 31 1976
RECEIVED
F

DISCLAIMER NOTICE

**THIS DOCUMENT IS BEST QUALITY
PRACTICABLE. THE COPY FURNISHED
TO DDC CONTAINED A SIGNIFICANT
NUMBER OF PAGES WHICH DO NOT
REPRODUCE LEGIBLY.**

UNCLASSIFIED

SECURITY CLASSIFICATION OF THIS PAGE (When Data Entered)

REPORT DOCUMENTATION PAGE		READ INSTRUCTIONS BEFORE COMPLETING FORM
1. REPORT NUMBER C54-01-1-1406 ✓	2. GOVT ACCESSION NO.	3. RECIPIENT'S CATALOG NUMBER
4. TITLE (and Subtitle) DEVELOPMENT OF AIR FORCE FLIGHT SAFETY MODELS VOLUME 15		5. TYPE OF REPORT & PERIOD COVERED
		6. PERFORMING ORG. REPORT NUMBER C54-01-1-1406
7. AUTHOR(s) Not Listed		8. CONTRACT OR GRANT NUMBER(s) ✓ F09603-72-A-1132-SA01
9. PERFORMING ORGANIZATION NAME AND ADDRESS ARINC Research Corporation ✓ 2551 Riva Road Annapolis, Maryland 21401		10. PROGRAM ELEMENT, PROJECT, TASK AREA & WORK UNIT NUMBERS
11. CONTROLLING OFFICE NAME AND ADDRESS SERVICE ENGINEERING DIVISION SAN ANTONIO AIR LOGISTICS CENTER Kelly Air Force Base, Texas		12. REPORT DATE September 1976
14. MONITORING AGENCY NAME & ADDRESS (If different from Controlling Office) SERVICE ENGINEERING DIVISION SAN ANTONIO AIR LOGISTICS CENTER Kelly Air Force Base, Texas		13. NUMBER OF PAGES 81
		15. SECURITY CLASS. (of this report) UNCLASSIFIED
		15a. DECLASSIFICATION/DOWNGRADING SCHEDULE
16. DISTRIBUTION STATEMENT (of this Report) UNCLASSIFIED/UNLIMITED		
17. DISTRIBUTION STATEMENT (of the abstract entered in Block 20, if different from Report)		
18. SUPPLEMENTARY NOTES		
19. KEY WORDS (Continue on reverse side if necessary and identify by block number)		
20. ABSTRACT (Continue on reverse side if necessary and identify by block number) A general description of the Flight Safety Prediction Technique, and the documentation associated with its specific application to the F-15A aircraft, are presented.		

DD FORM 1 JAN 73 1473

EDITION OF 1 NOV 65 IS OBSOLETE

UNCLASSIFIED

SECURITY CLASSIFICATION OF THIS PAGE (When Data Entered)

<p>SEP-01-1-1406</p>	<p>DEVELOPMENT OF AIR FORCE FLIGHT SAFETY MODELS VOLUME 15</p>
<p>SEP-01-1-1406</p>	<p>Not Listed</p>
<p>700603-72-A-1132-2A01</p>	<p>APING Research Corporation 2521 Rive Road Annapolis, Maryland 21401</p>
<p>September 1976</p>	<p>SERVICE ENGINEERING DIVISION SAN ANTONIO AIR LOGISTICS CENTER Kelly Air Force Base, Texas</p>
<p>UNCLASSIFIED</p>	<p>SERVICE ENGINEERING DIVISION SAN ANTONIO AIR LOGISTICS CENTER Kelly Air Force Base, Texas</p>
<p>UNCLASSIFIED</p>	<p>UNCLASSIFIED/UNLIMITED</p>
<p>UNCLASSIFIED</p>	<p>UNCLASSIFIED/UNLIMITED</p>
<p>UNCLASSIFIED</p>	<p>A general description of the Flight Safety Prediction Technique, and the documentation associated with its specific application to the F-15A aircraft, are presented.</p>


9

Final Report

6

DEVELOPMENT OF AIR FORCE
FLIGHT SAFETY MODELS
Volume 15, F-15 AIRCRAFT

4

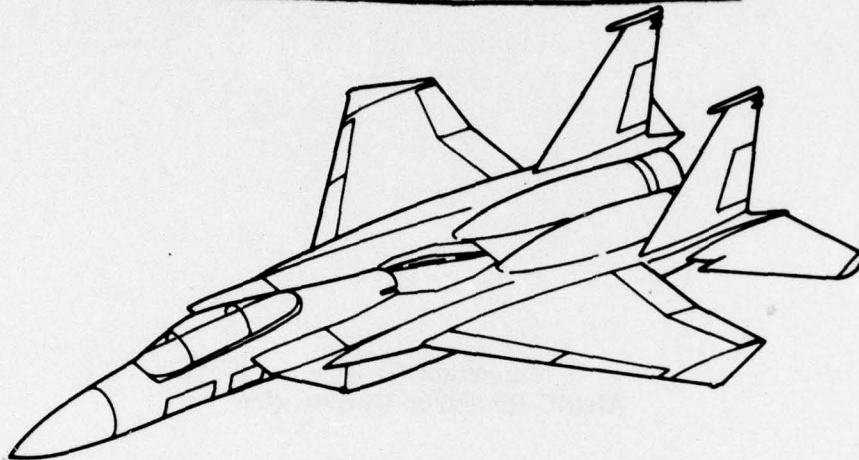

12 145 p.

11

September 1976

Prepared for
SERVICE ENGINEERING DIVISION
SAN ANTONIO AIR LOGISTICS CENTER
Kelly Air Force Base, Texas
Under Contract F09603-72-A-1132-SA01

DDC
RECEIVED
MAY 31 1978
REGISTERED

15

ARINC RESEARCH CORPORATION

HEADQUARTERS
2551 Riva Road
Annapolis, Maryland 21401

SANTA ANA BRANCH
1222 E. Normandy Place
Santa Ana, California 92702

Publication C54-01-1-1406-VOL-15

This document has been approved
for public release and sale; its
distribution is unlimited.

400 247

set

Copyright © 1976
ARINC Research Corporation

Prepared under Contract F09603-72-A-1132-SA01,
which grants to the U. S. Government a license
to use any material in this publication for govern-
ment purposes.

ABSTRACT

A general description of the Flight Safety Prediction Technique, and the documentation associated with its specific application to the F-15A aircraft, are presented.

ACCESSION for	
NTIS	White Section <input checked="" type="checkbox"/>
DDC	Buff Section <input type="checkbox"/>
UNANNOUNCED	<input type="checkbox"/>
JUSTIFICATION	
BY	
DISTRIBUTION/AVAILABILITY CODES	
Dist.	SPECIAL
A	23 E.L.

GLOSSARY

This glossary presents general definitions of terms used in this report. The reader will find certain of these terms defined in somewhat different words in the text, depending on the context of the discussion; but the meaning will be consistent with the definitions given here.

- | | |
|---------------------|--|
| Criticality | - A numerical index of the significance of equipment failure history relative to aircraft safety. As an analysis parameter, it can be considered proportional to the likelihood that an item will fail and thereby cause an accident. It is the product of the failure probability and the sensitivity of an equipment item. |
| Dependency | - See link dependency. |
| FSPT | - Flight Safety Prediction Technique |
| Flight Phases | - Discrete segments of the aircraft mission profile. For present purposes, the flight phases are defined as 1) startup and taxi, 2) takeoff, 3) climb, 4) cruise, 5) tactics, 6) cruise, 7) descend, 8) land, and 9) taxi and shutdown. |
| Functional Analysis | - The determination of equipment relationships to aircraft functions performed, and the interrelationships of these functions. |
| Functional Link | - The simplest form of functional relationship in which one function is dependent upon the next lower function. |
| Functional Path | - The compilation of functional links, in sequence, through which a function is identified as being dependent upon another. |
| Link Dependency | - The conditional probability of a dependent function failing, given that a particular function it is dependent upon has failed. |
| Provisory Condition | - Operation of an aircraft in a mode or environment such that the safety-related importance of certain equipments is increased. Provisory conditions include icing, night flight, supersonic flight, etc. |
| Provisory Factor | - The probability that a provisory condition exists. Also used to describe the coded notation used to indicate that a functional relationship is dependent on a particular provisory condition. |
| Safety Sensitivity | - Same as "sensitivity". |

Sensitivity

- A quantitative indication of the degree of safety degradation to be expected if a function or piece of equipment fails. The more specific terms are "functional sensitivity" or "equipment item sensitivity".

Sensitivity Path

- A particular sequence of functional dependencies (beginning at the top level in the hierarchical structure) through which a function or piece of equipment derives a sensitivity value. Equipment and functional sensitivity values are often derived through several such sensitivity paths.

FOREWORD

This document is part of a 16-volume report describing the application to specific aircraft types of ARINC Research Corporation's Flight Safety Prediction Technique (FSPT). The technique was developed under previous Air Force contracts (see Appendix A). The present effort, undertaken in 1972 under Contract F09603-72-A-1132-SA01, has led to further refinement of the FSPT through its broad application to many different types of aircraft. The flight safety models generated for these aircraft are presented in individual volumes of this report as follows:

<u>Volume</u>	<u>Aircraft</u>	<u>Volume</u>	<u>Aircraft</u>
2	T-38	10	B-52G, H
3	F-111A, FB-111A	11	C-130E
4	A-7D	12	KC-135
5	F-4D, E; and RF-4C	13	C-5A
6	C-141	14	T-39
7	A-37	15	F-15
8	O-2	16	UH-1N Helicopter
9	OV-10		

Volume 16 will document the results of a feasibility study of extending the FSPT to rotary-wing aircraft.

Volume 1, an overall summary of the contractual effort, will be issued at the end of the contract period.

CONTENTS

	<u>Page</u>
ABSTRACT	iii
GLOSSARY	v
FOREWORD	vii
1. INTRODUCTION	1-1
2. METHODOLOGY UNDERLYING FSPT	2-1
2.1 Definition of Safe Aircraft	2-1
2.2 Mathematical Basis of FSPT	2-1
2.3 Sensitivity Assignments	2-2
3. MODEL DEVELOPMENT	3-1
3.1 Functional Analysis	3-1
3.2 Major-Function Sensitivity Assignment	3-2
3.2.1 Assignment Method	3-2
3.2.2 Link Dependency Assignment	3-5
3.2.3 Provisory Factors	3-5
3.2.4 Computer Processing	3-5
3.2.5 Model Maintenance	3-7
4. F-15A MODEL DEVELOPMENT	4-1
APPENDIX A: Historical Summary of FSPT	A-1
APPENDIX B: Formulation of Criticality-Assessment Technique	B-1
APPENDIX C: FSPT Documentation Methods	C-1
APPENDIX D: FSPT Documentation of F-15A Aircraft	D-1

ILLUSTRATIONS AND TABLES

<u>Figure</u>		<u>Page</u>
1-1	Example of Criticality Ranking Process	1-2
3-1	Activities and Data Inputs to Flight Safety Criticality Assessment . .	3-1
3-2	Hierarchical Structure of Aircraft Functions	3-3
3-3	Phases of Aircraft Mission	3-4

<u>Table</u>		
3-1	Provisory Factor Codes	3-6
4-1	F-15A System Documentation	4-1

1

INTRODUCTION

The Flight Safety Prediction Technique developed by ARINC Research Corporation provides for assessment of the impact on flight safety of the failure of specific items of equipment within an aircraft. In the FSPT, mathematical modeling procedures are applied for processing aircraft-equipment failure data to yield a quantified index ranking safety-related problems on the basis of their likelihood of occurrence and the resulting degradation in the aircraft's capability to fly.

The ranking factor is called "criticality", which in its simplest form is the product of the failure probability and flight-safety sensitivity of an equipment. (A more detailed definition appears in Section 2 and Appendix B.) The failure probability inputs are from basic failure-data sources, AFM 66-1 and 65-110. The sensitivity estimates are derived by the following process:

- a. Systematic analysis of aircraft functions to determine those essential to flight safety
- b. Identification of the hardware required to perform these functions
- c. Evaluation of the safety significance of the hardware in performing these essential aircraft functions.

The criticality values resulting from this approach provide a relative ranking of all malfunctions with respect to their safety significance. Figure 1-1 is a simplified example of how three equipment items would be ranked on the combined basis of their failure probability and safety sensitivity. This figure illustrates an example in which item A has the highest failure probability, but due to the low sensitivity value is ranked below item B in criticality.

The methodology has the ability to rank malfunction problems currently and continuously by their accident potential. This ranking, based on criticality assessment, can provide the basic parameters necessary for:

- a. Identifying equipment items whose failure history and application pose a threat to aircraft safety
- b. Quantifying the degree of threat associated with each equipment item
- c. Evaluating and tracking the effectiveness of modifications to the aircraft
- d. Assessing safety benefits versus the cost of proposed aircraft modifications, changes in maintenance or flight operations, or alternative aircraft designs.

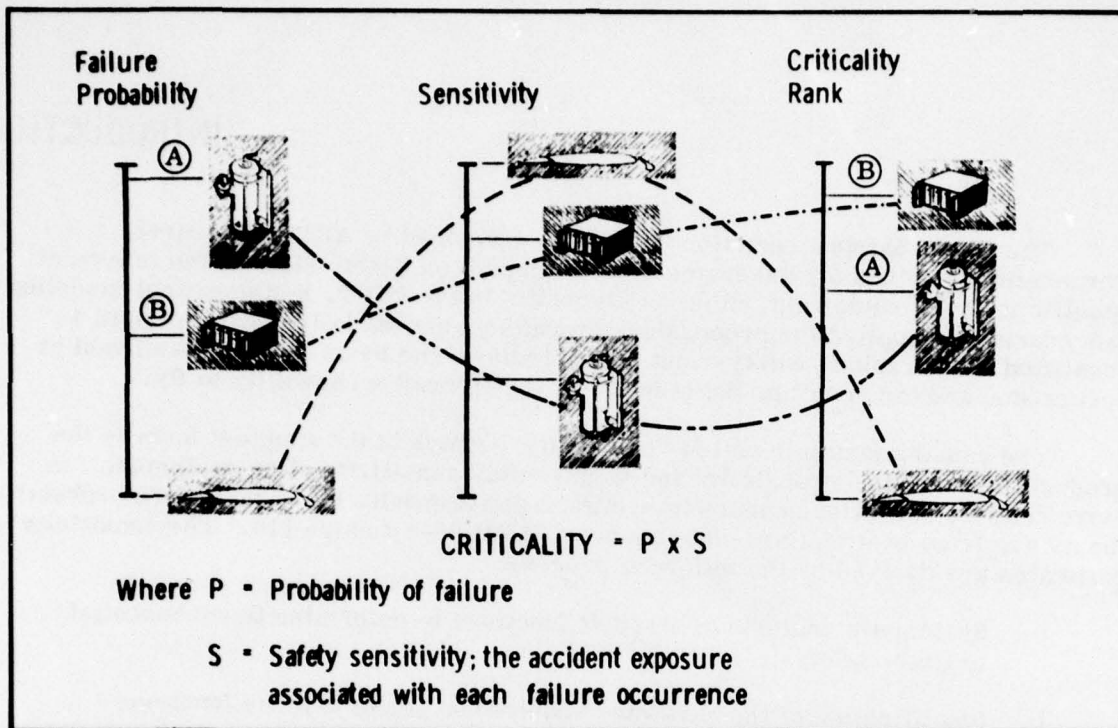


Figure 1-1. Example of Criticality Ranking Process

In this report, Section 4 and Appendix D pertain specifically to the F-15A aircraft. The remainder of the document provides support information that will make the F-15A data, and the method by which the data were obtained, more meaningful to the general reader.

Section 2 presents an overview of the development and utilization of the Flight Safety Prediction Technique; Section 3 discusses the steps associated with generating a safety model for calculating the safety criticality of various equipments of an aircraft; and Section 4 describes how the safety model for the F-15A aircraft was developed. Appendix A summarizes the contractual history of the development of the FSPT; Appendix B discusses mathematical considerations underlying the technique; Appendix C discusses FSPT documentation methods; and Appendix D presents functional relationship diagrams for a listing of keypunch cards that comprise the safety model documentation for the F-15A aircraft.

METHODOLOGY UNDERLYING FSPT

This section discusses the basic definitions and mathematical concepts associated with the Flight Safety Prediction Technique.

2.1 DEFINITION OF SAFE AIRCRAFT

To develop a relative measure of aircraft safety degradation resulting from specific equipment malfunctions, it is first necessary to define a "safe" aircraft. For purposes of the FSPT assessments, an aircraft is assumed to be in a safe condition if it is operating within its prescribed performance limits. Conversely, an aircraft operating (or about to operate) outside these limits is considered to be unsafe - in a condition where property damage and personal injury may result.

The safety prediction methodology does not attempt to assess the extent of possible personal injury or aircraft damage resulting from an unsafe condition. Neither does the concept consider ejection capability, parachutes, life rafts, etc., which do not make an aircraft safer per se but provide for the survivability of the aircrew when the aircraft is unsafe. Collision is also excluded from consideration because of the complexity of the interrelationships between pilot, aircraft equipment, ground surveillance, and traffic density.

2.2 MATHEMATICAL BASIS OF FSPT

The probability of an accident caused by the failure of an element can be expressed as the probability of the element failing multiplied by the conditional probability that the failure of the element will cause an accident. Stated in equation form:

$$P(A, j) = P(j)P(A|j) \quad (1)$$

where

$P(A, j)$ = Probability of an accident due to failure of just the j^{th} element*

$P(j)$ = Probability that element j fails

$P(A|j)$ = Probability of an accident given that the j^{th} element fails.

This equation reflects the basic relationships addressed in the FSPT where:

- a. The criticality of the j^{th} element is an estimate of $P(A, j)$
- b. The sensitivity of the j^{th} element is an estimate of $P(A|j)$

*In this and subsequent discussions, unless otherwise stated, expressions such as "failure of the j^{th} element" should be interpreted to mean: failure of only the j^{th} element, assuming all other elements are not failed.

Because an element's effect on safety may depend on the mission phase (see Section 3.2.1), the above model can be expanded to:

$$P(A, j) = \sum_{k=1}^N P_{j,k} P(A|j, k) \quad (2)$$

where

N = Number of mission phases

$P_{j,k}$ = Probability that the j^{th} element is failed in the k^{th} phase

$P(A|j, k)$ = The j^{th} element's sensitivity in the k^{th} phase.

To identify the importance of discrete elements to aircraft safety, a flight profile consisting of nine distinct phases was defined. The phases are discussed in Section 3.2.1.

To utilize equation 2, it was necessary to develop a method for obtaining the values of $P(A|j, k)$, the probability that a malfunction in element j during mission phase k will result in an accident. This method in turn requires the estimation of two parameters: the probability of accident if a major function is not available during each mission phase, and the dependence of the major function on subfunctions and elements during each such phase*. Each function and equipment item thus derives its sensitivity value from its relationship to the major function(s) dependent upon it.

2.3 SENSITIVITY ASSIGNMENTS

A great deal of information is available on the causes of aircraft accidents, but little exists from which to make the sensitivity assignments $[P(A|j)]$. These assignments are therefore largely subjective, based on the analyst's knowledge of the system and any information he may have on previous accident history. The sensitivity assignments are reviewed (and revised as necessary) by an Air Force/contractor team working on a particular model to ensure that consistent criteria have been followed. The team review and negotiation of sensitivity assignments is the mechanism by which the value becomes sufficiently objective for use with the model. This negotiation considers all of those top level functions as a group and reassigns sensitivity values as necessary to assure that the most objective proportionality is attained for the particular aircraft model. The same major-function sensitivity values are used for major functions on all aircraft models where configuration and mission profiles permit.

The development of criticality rankings for the various elements (j 's) is dependent upon the ability to quantify the failure probability $[P(j)]$ and the element sensitivity $[P(A|j)]$ for each element. Since the intent of the concept is to provide a relative safety ranking of all malfunctions, it is not necessary to develop absolute

*For a more detailed discussion of the mathematics of the FSPT, see Appendix B.

values for $P(A|j)$. If the sensitivity values developed are correct relative to each other, a proper criticality ranking will be established. It is intended that criticality be an index proportional to $P(A, j)$ and therefore provide the same relative rank ordering of elements. The major reasons for proportionality, rather than equality, are:

- a. The FSPT does not account for the effect of extraordinary pilot intervention to prevent an accident in case of equipment malfunction.
- b. Criticality quantification was limited in its treatment of simultaneous occurrence of independent, primary failures.
- c. Operational and malfunction data yield only a proportional estimate of the required information.

While strict proportionality cannot be mathematically proven, it is believed that the criticality rankings provide reasonable relative measures of equipment problem potential.

3 MODEL DEVELOPMENT

Figure 3-1 summarizes the approach to the assessment of flight-safety criticality of aircraft equipment. The first contractor activity is the identification of all functions the aircraft is expected to perform and the determination of their inter-relationships. Next, each functional relationship is documented; and then sensitivity assignments are made at the major functional levels (below these levels, link dependency values are estimated; see discussion, Section 3.2.2). This process is carried out until each work unit code associated with a major function has been identified with respect to the function performed and dependencies have been estimated. Computer processing calculates the safety sensitivity for each work unit coded item, combines these values with the operation and failure data input by the Air Force, and produces the equipment criticality ranking.

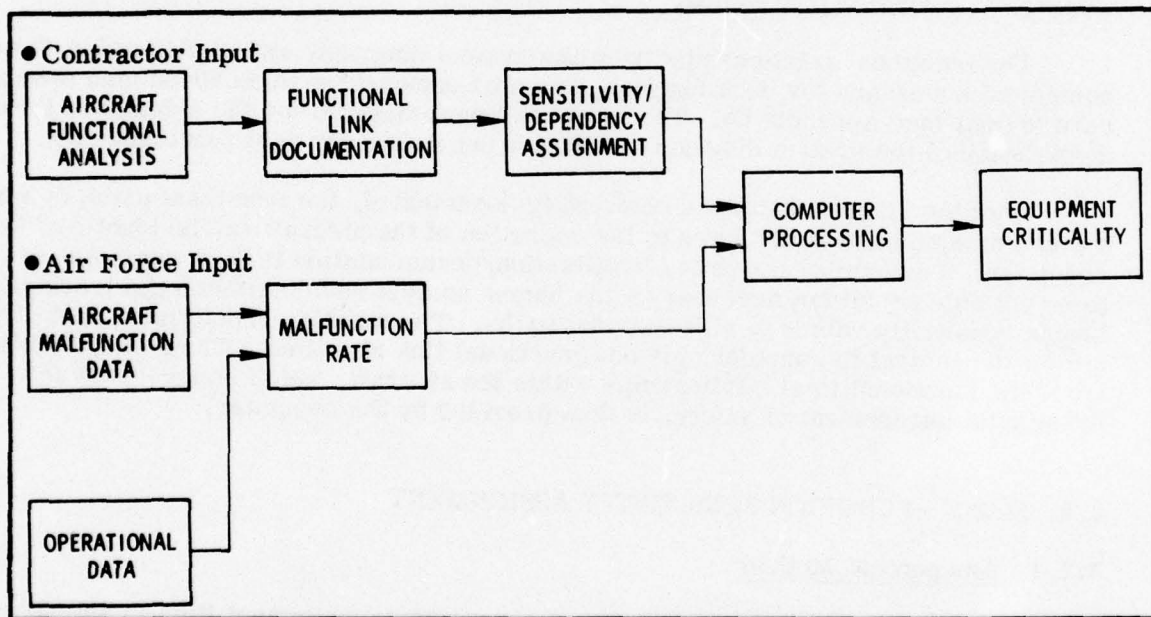


Figure 3-1. Activities and Data Inputs to Flight Safety Criticality Assessment

The steps in this process are discussed in greater detail in the following sections.

3.1 FUNCTIONAL ANALYSIS

Functional analysis entails the systematic identification of the relationships of hardware to the functions performed by the aircraft and documented in the aircraft technical orders. Tabulated for each aircraft function are the equipments necessary for its performance as well as all outputs required for other systems. The complexity of the functional interdependencies of an aircraft requires the use of a systematic

accounting procedure, as discussed below, to assure that all relationships have been identified and that no functional paths have been overlooked.

Certain top-level functions (comprised of both "primary" and "major" functions) have been defined as applicable to all aircraft types, and serve as the starting point for a safety analysis. Figure 3-2 lists these top level functions with the primary function of Flight Control expanded to show its typical major functions. Below the major function level, differences in aircraft types result in function identification and structuring specifically suited to each aircraft. In Figure 3-2, for instance, the major function Roll Control is subdivided into Left Roll and Right Roll, and further into aileron and spoiler actuation subfunctions. This structure is that applicable to an F-4 aircraft, in which ailerons have an extremely limited upward travel and lift is primarily lost through spoiler operation. Finally, each item in the aircraft WUC ("-06") manual is identified with respect to the function it performs. *

Every function and every WUC included in the model receives an "alpha designator" unique to that aircraft model. Due to the large number of alpha designators required in a model, an indenturing system is utilized to prevent duplication. However, the location in the hierarchical structure and the number of characters in the alpha designators are often independent, since such correlation is not necessary for subsequent computer processing.

The functional relationships from the system diagram, and identification of the equipment necessary for each function, are next documented in an 80-column punch-card format (see Appendix C). The total functional diagram for the aircraft is then a compilation of the system diagrams, with one punchcard for each functional link.

With the aircraft functions completely documented, the functional paths by which a piece of equipment contributes to the operation of the aircraft can be identified by computer. Performing the path-identification/documentation task by computer proves to be not only useful but necessary - the human analyst could neither keep track of nor assign sensitivity values to all functional paths. The machine processing capability allows the analyst to consider only one functional link at a time. The ability to follow all of the functional interrelationships within the aircraft, which is necessary for meaningful assessment of safety, is then provided by the computer.

3.2 MAJOR-FUNCTION SENSITIVITY ASSIGNMENT

3.2.1 Assignment Method

As stated earlier, the sensitivity of a function or equipment item is an estimate of the probability that its failure will cause an accident. From functional analysis of the aircraft under consideration, major functions are identified and are assigned sensitivity values for each phase of the mission.

*Certain WUC items in the "-06" manual may not be included in the safety model, these items being either 1) eliminated by TCTOs; 2) purely structural items in the 11000 series; 3) necessary only for survivability or ejection; 4) of lower indenture than the LRU level, where computer data screening eliminates failure reports.

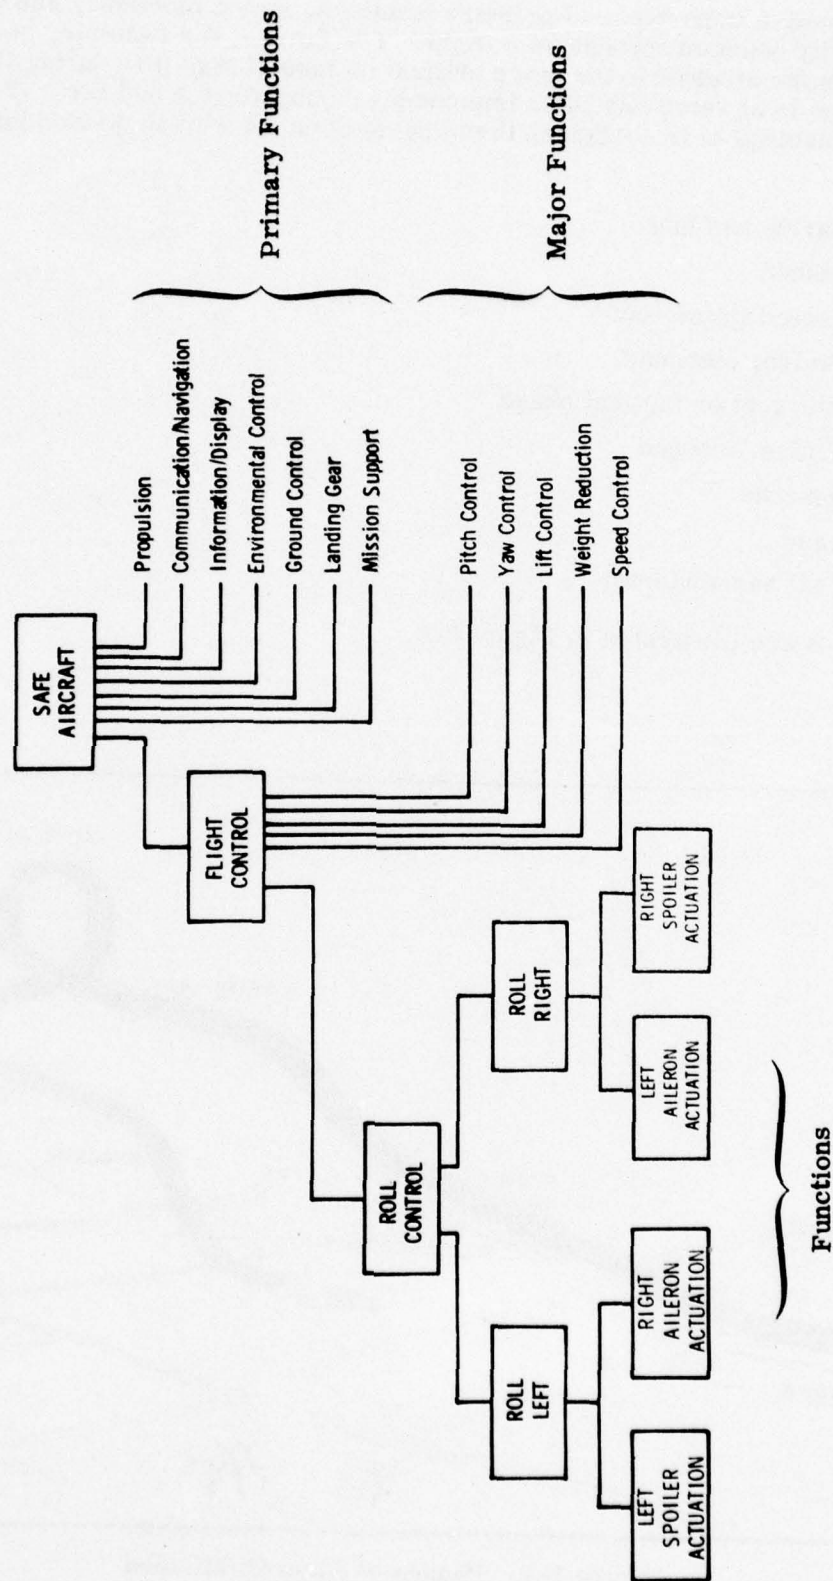


Figure 3-2. Hierarchical Structure of Aircraft Functions

The relative importance of primary functions, major functions, and functions is not necessarily constant throughout a flight. The failure, for example, of one engine of a multi-engine aircraft is far more critical on takeoff than it is during the rest of the flight, and is of relatively little importance during startup and taxi. To accommodate this variability of importance, the mission of an aircraft is divided into nine flight phases:

1. Startup and taxi
2. Takeoff
3. Ascend (climb-out)
4. Cruise, outbound
5. Intercept or tactical phase
6. Cruise, inbound
7. Descend
8. Land
9. Taxi and shutdown

These phases are illustrated in Figure 3-3.

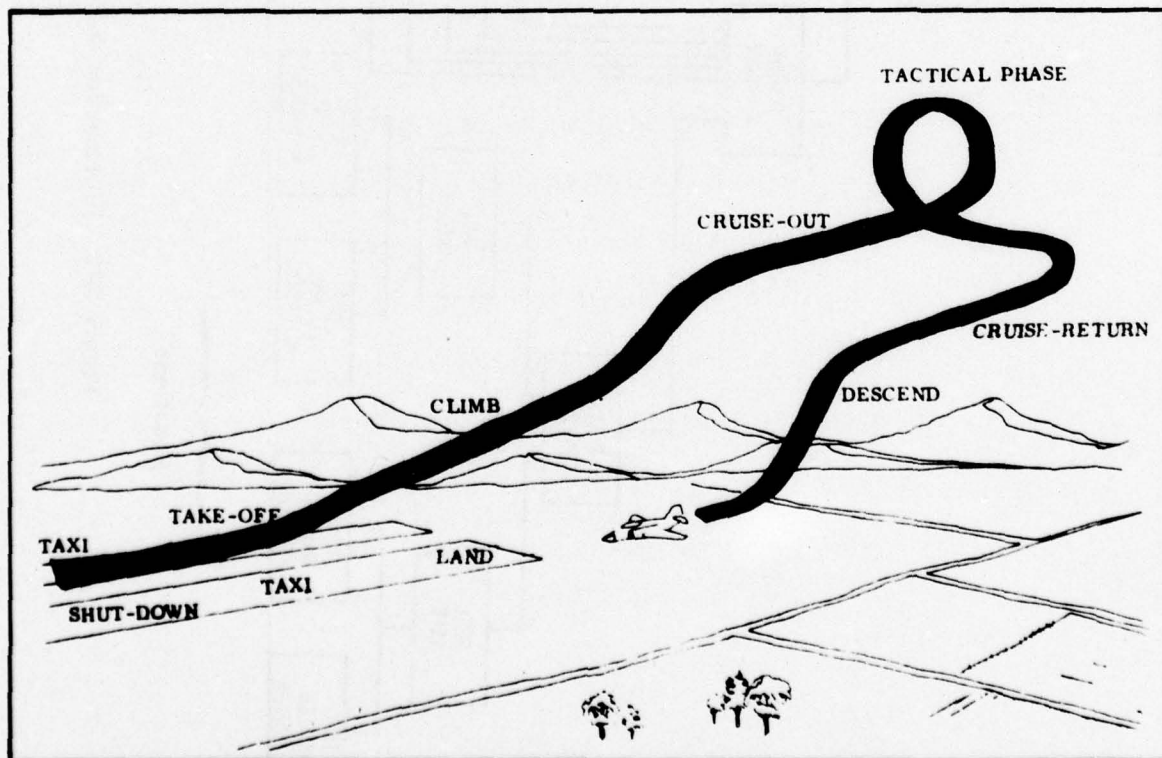


Figure 3-3. Phases of Aircraft Mission

A sensitivity value is assigned for each of the phases, and represents the best estimate of the likelihood that the aircraft will enter a hazardous mode if the function is not present in that phase. The numerical values assigned are proportional rather than absolute, and range from 0.0 to 1.0. The keypunch card format limits this assignment to increments of 0.1. Increments smaller than 0.1, when required, were assigned by defining a quasi-function for insertion between the major function and its dependent primary function.

3.2.2 Link Dependency Assignment

"Link dependency" is defined as the probability that the loss of a function will result in the loss of a dependent function. (For a more detailed discussion of this term, see Appendix B.) The assignment of link dependency values requires knowledge of the operation of specific aircraft because it is concerned only with functional levels below the "major" category. At this lower level, no evaluation is made of the impact on flight safety of the loss of functions. Instead, the effect of the loss of one function on the performance of another function becomes the evaluation criterion. Like sensitivities, link dependency values are assigned in increments of 0.1. Additionally, the method of attenuation used in assigning sensitivity values can also be applied to link dependencies.

3.2.3 Provisory Factors

The sensitivity of major functions with respect to aircraft safety, and at the lower levels the link dependency between functions, can be dependent on external influences and aircraft operating conditions. To accommodate *these external influences*, a set of provisory factors has been identified. An example would be a windshield anti-ice system, which has a safety sensitivity close to 1.0 during landing under icing conditions but a negligible effect on a dry, warm day.

Under such circumstances, the procedure is to assign the "worst case" value (assuming the condition exists). During model exercise the likelihood that the condition exists can be "read-in", thereby allowing the sensitivity value to be assigned by the computer based on the likelihood of the condition and the probability that the higher level function will therefore be lost. Table 3-1 lists the standard provisory factors used in FSPT models.

3.2.4 Computer Processing

Documentation of a flight safety analysis by ARINC Research thus consists of functional diagrams, coded functional tabulations, a functional data processing card deck, and a machine-prepared printout of the card deck data. Under this contract, the documentation is then sent to San Antonio Air Logistics Center for review by MMER personnel and representatives of the Air Logistics Center responsible for the particular aircraft (if other than SA/ALC).

SA/ALC processes the functional data card deck utilizing a number of computerized operations. First, a functional deck edit is accomplished to identify certain format or logic errors that may exist. Next, a path identification/documentation run is made that traces all possible paths associated with each function and calculates the numerical sensitivities by flight phase down to the WUC level. Then, a path combination run is made taking into account the dependence of more than one major function on a particular WUC. Finally, failure information from the 66-1 data system and numerical factors for provisory conditions are input and a WUC criticality list by rank order is generated by the computer.

TABLE 3-1. PROVISORY FACTOR CODES

Code	Provisory Condition
A	Icing conditions
B	Adverse speed/altitude operations (Helicopter)
C	Runway stopping distance/confined area (Helicopter)
D	Night operation
E	IFR conditions
F	Supersonic flight
G	Rain
H	Solo flight
I	Loss of function for which indication is provided
K	Normal system failed
T	Flame-out
X	Fire
Y	Cold weather
2	One of three available units is required
3	Two of three available units are required
4	One of four available units is required
5	Two of four available units are required
6	Three of four available units are required
8	Four of eight available units are required

An additional product generated by the computer is a two-part criticality trend analysis. Part I contains the criticality rankings and linear regression analysis by WUC for the previous 12 months. Part II contains plots of the criticalities and regression lines for the 25 WUCs top-ranked according to safety criticality.

3.2.5 Model Maintenance

Each time an aircraft type for which a safety model has been developed undergoes a modification, the effects of the changes on the model must be evaluated. Technical order and WUC revisions must be incorporated into the model. Removal of existing hardware, the installation of new hardware, or design improvements may change link dependencies and sensitivity assignments. The update procedure should follow the same general steps as outlined for the initial analysis effort.

Existing block diagrams and a printout of the functional card deck form the baseline for change identification. Functional relationships should be reviewed to determine the impact of changes on the documented safety analysis. Diagrams should be revised to reflect functional differences, WUC changes should be noted, and all differences listed on a flight-safety functional tabulation sheet. The functional deck printout can be used for manual indication of what the changes are and where they occur. New data cards are prepared and the functional deck updated by the removal of obsolete cards and the insertion of new cards. From this point on, the computer is again utilized to edit the functional deck, perform path identification/documentation, and calculate sensitivities for each WUC.

Block diagrams and other affected portions of the specific aircraft safety analysis report should be updated and revised pages issued that reflect these changes. Maintaining an accurate and updated model is important to obtaining an accurate assessment of the safety significance of hardware failures.

F-15A MODEL DEVELOPMENT

The FSPT model for the F-15A aircraft was begun in October 1975. The total aircraft documentation was submitted for "GO-95" computer edit at SA/ALC in August 1976.

The aircraft flight manual and maintenance technical orders provided the information on aircraft system operation. The model developed represents F-15A aircraft configured to the latest time compliance technical orders (TCTOs) documented in the manuals supplied by SA/ALC. Table 4-1 lists the manuals and their revision status applicable to the developed model.

Because of the vulnerability of the functional logic/sensitivity documentation to such errors as omission of links, duplication of cards, and incorrect keypunching, quality review were conducted at various critical points in the model development. In addition to keypunch verification, each card was checked against the functional link shown on the original rough draft and the final functional diagram and the diagrammed link was checked off. Missing or duplicated functional links were thus identified. Work unit codes used in the model were checked off against the WUC manual to assure completeness.

The quality reviews were first conducted prior to computer verification of the aircraft deck by SA/ALC. Following computer verification, a second quality review was performed by representatives of SA/ALC and ARINC Research.

Appendix C presents the methods and standard used in documenting an FSPT aircraft model. Appendix D presents the FSPT documentation for the F-15A aircraft.

TABLE 4-1. F-15A SYSTEM DOCUMENTATION (Sheet 1 of 2)

Nomenclature	Title	Revision/Date
1F-15A-1	Flight Manual	Change 2, 15 December 1975
1F-15A-2-2-1	Basic Maintenance Information	Change 3, 1 February 1976
1F-15A-2-2-2	Ground Handling and Servicing	Change 4, 15 January 1976
1F-15A-2-5	Flight Control Systems	Change 4, 1 March 1976
1F-15A-2-6	Landing Gear, Nosewheel Steering, Arresting Hook, and Wheel Brake/Skid Control Systems	Change 2, 1 January 1976

TABLE 4-1. (Sheet 2 of 2)

Nomenclature	Title	Revision/Date
1F-15A-2-7	Hydraulic Power Supply Systems	Change 2, 15 December 1975
1F-15A-2-8	Air Conditioning, Pressurization, Windshield Clearing, Oxygen and Bleed Air Systems	Change 3, 1 February 1976
1F-15A-2-9	Engines and Engine Controls, Instruments, and Fire Protection Systems	Change 3, 1 April 1976
1F-15A-2-11	Engine Air Induction Systems	Change 2, 1 February 1976
1F-15A-2-12	Fuel Systems	Change 3, 1 March 1976
1F-15A-2-13	Weapons Control and Delivery System	Change 3, 15 February 1976
1F-15A-2-14	Gun System	Change 3, 1 November 1975
1F-15A-2-16-2	Central Computer Logic Diagrams	Change 1, 1 August 1975
1F-15A-2-17	Air Data, Instruments and Built-In-Test Systems	Change 3, 15 February 1976
1F-15A-2-18	Horizontal Situation Indicator, Inertial Navigation, and Attitude-Heading Reference Systems	Change 3, 1 February 1976
1F-15A-2-19	TACAN and Instrument Landing Systems	Change 3, 1 November 1975
1F-15A-2-20	Automatic Flight Control System	Change 3, 1 March 1976
1F-15A-2-21	Communications and Automatic Direction Finder Systems	Change 1, 15 August 1975
1F-15A-2-24	Head Up Display System	Change 4, 15 January 1976
1F-15A-2-26	Lighting Systems	Change 2, 15 February 1976
1F-15A-2-27	Electrical Power Supply System	Change 2, 1 March 1976
1F-15A-06	Work Unit Code Manual	Change 2, 1 March 1976

APPENDIX A
HISTORICAL SUMMARY OF FSPT

HISTORICAL SUMMARY OF FSPT

In 1965, the desirability and practicability of quantifying the significance of specific equipment malfunctions relative to flight safety was explored in a feasibility study conducted by ARINC Research Corporation for the Air Force. The feasibility of a safety-quantification approach, which has subsequently become known as Flight Safety Prediction Technique (FSPT), was demonstrated; and the method was developed and refined in a series of studies, as follows:

<u>Study Phase</u>	<u>Subject/Date</u>	<u>Sponsor*/Publication No.</u>
I	Feasibility Study, September 1965 to June 1967 (Phase I)	Sacramento Air Materiel Area (SMNE), Contract AF09(603)62335, SM-67-2; publication 705-01-1-777
II-A	Technique Development, October 1967 to July 1968 (Phase II-A)	San Antonio Air Materiel Area (SANEW), Contract AF09(603)-67-A-0267-SA01; publication 734-01-1-895
II-B	Technique Development, July 1968 to July 1969 (Phase II-B)	San Antonio Air Materiel Area (SANEW), Contract F09(603)-68-A-0317-SA01; publication 754-01-1-985 (Revision 1)
	FSPT System Documentation for the F-4C and T-37 Aircraft, October 1970 to June 1971	San Antonio Air Materiel Area (MMER) Contract F41608-71-C-0576; publication 697-01-1-1118

In the Phase II-B study, the FSPT was applied to the F-106 aircraft. Concurrent with Phase II-B, the U.S. Naval Safety Center contracted ARINC Research to extend the methodology to produce a flight safety criticality model for the F-4J aircraft. The results of this effort are documented in ARINC Research Publication 753-01-3-982 (Revision 1).

In 1970, ARINC Research was contracted to develop suitable input data to permit the application of the technique to the T-37 and F-4C aircraft. These data were derived in the form of mathematical model functional documentation as input to the basic computer program developed and applied to the F-106.

In 1972, ARINC Research Corporation was awarded a contract, with the subsequent modifications in 1973 and 1974, to apply the Flight Safety Prediction Technique to 15 aircraft, working jointly with cognizant Air Logistics Centers. Aircraft to which the FSPT has been applied under this latter contract (F09603-72-A-1132-SA01) include:

- a. T-38
- b. F-111A and FB-111A

*The office symbols of Service Engineering at the Sacramento and San Antonio Air Materiel Areas are now SM/ALC/MME and SA/ALC/MME, respectively.

- c. A-7D
- d. F-4D, E; RF-4C
- e. C-141
- f. A-37
- g. O-2
- h. OV-10
- i. B-52G, H
- j. C-130E
- k. KC-135
- l. C-5A
- m. T-39
- n. F-15
- o. UH-1N Helicopter*

*Feasibility study of adaptation of FSPT to rotary-wing aircraft.

APPENDIX B
FORMULATION OF CRITICALITY-ASSESSMENT TECHNIQUE

FORMULATION OF CRITICALITY-ASSESSMENT TECHNIQUE

To implement the basic safety model defined in Section 2.2, it is necessary to develop a submodel for the probability that a malfunction in element j during mission phase k will result in an accident. This submodel in turn requires that we estimate two parameters: the probability of accident if a major function is not available during each mission phase, and the dependence of the major function on element j during each mission phase.

The first parameter is termed "functional sensitivity" and is estimated for each major function. The functional analysis performed in this task established for an aircraft the following hierarchal scheme:

Aircraft

Primary functions


Major functions

Function

Elements (Work Unit Codes)

A primary function would be one such as Flight Control. Major functions under Flight Control would include Pitch Control and Yaw Control.

The second parameter, "link dependency," is a vehicle for showing the influence of each functional-path element on the performance of a major function. For example, if the major function being considered is External Lighting, the following diagram illustrates the nature of functional sensitivity and link dependency values.

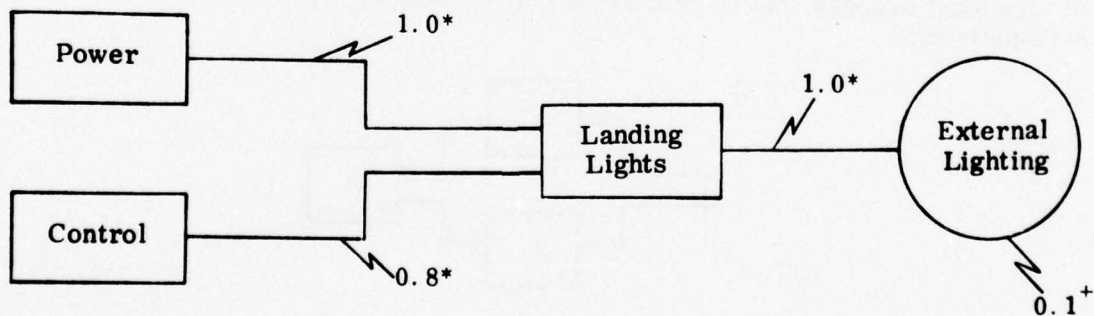

*Link dependencies


+Functional sensitivity

The 0.8 value means that failure of the Control function will result in loss of the Landing Light function 80% of the time. The 0.1 functional sensitivity value denotes that loss of external lighting will result in an accident 10% of the time. The values must be interpreted in a proportional sense, in that the actual accident probability is dependent upon external factors (see Section 3.2.3).

The remainder of this appendix discusses the procedures and model used to obtain element sensitivities; e.g., in the above example, the accident probability given that a Work Unit Code in the Control function malfunctions.


Three principal types of functional relationship--series, redundant, and parallel--were identified as representing the major forms to consider in modeling element sensitivity.

Series Relationship -- A function having only one input. Schematically,




which indicates that outside of its own elements, the success of function B is only affected by the success of function A.

Functional Redundancy -- A function having one or more backup functions that can provide the required inputs to successor functions. Schematically,

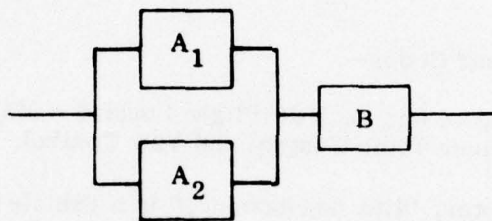

where A_1 and A_2 represent a functional redundancy in that either may provide the necessary input to B.


Parallel Functions -- Two or more functions independent of each other in terms of functional success, but each of which may be required for a successor function. Schematically,

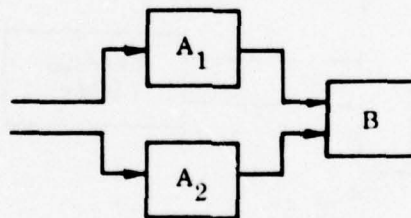

B will generally require both A_1 and A_2 ; but A_1 does not depend on A_2 , nor does A_2 depend on A_1 .

In some cases the distinction between functional redundancy and parallel paths is very slight, and may depend on mission phase. For example the four engines of a plane can be considered to be a redundant configuration providing inputs to the primary propulsion function during cruising, but would generally be considered to be parallel functions during takeoffs requiring full power.

In general, given a schematic relationship of the form,

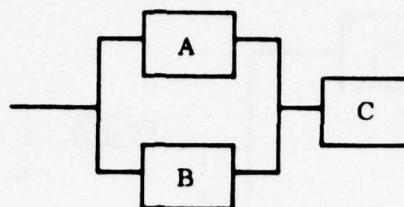


we can say that A and B are in a functionally redundant configuration if the success probability of C is the same if 1) A and B are successful, 2) A only is successful, or 3) B only is successful. If, for example, C is more likely to be successful if both A and B are successful, rather than A or B alone, then the relationship is one of parallel paths.

It is noted that the model will also account for element redundancy and parallel elements through inputs such as $P(\bar{A}|i_a)$, representing the probability that the Ath function fails given that the i_a^{th} element in A has failed. If i_a is a parallel element, the probability would depend on mission requirements and other parallel-element states.


Link dependency is the conditional probability of a functional failure, given the failure of immediate predecessor functions. The link dependencies applicable to the three basic designs defined above are shown below.

Series Relationship




Link dependency = $P(\bar{B}|\bar{A})$ = probability that B fails given that A fails.

Functional Redundancy

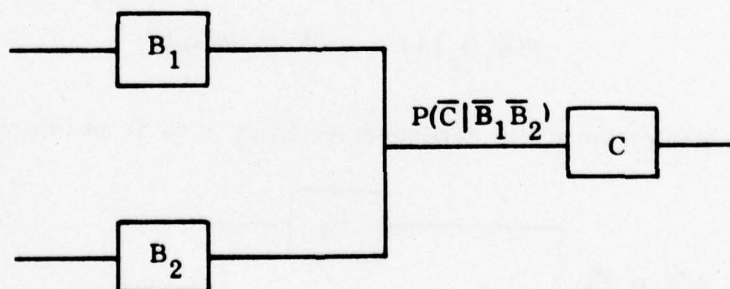


equivalent to

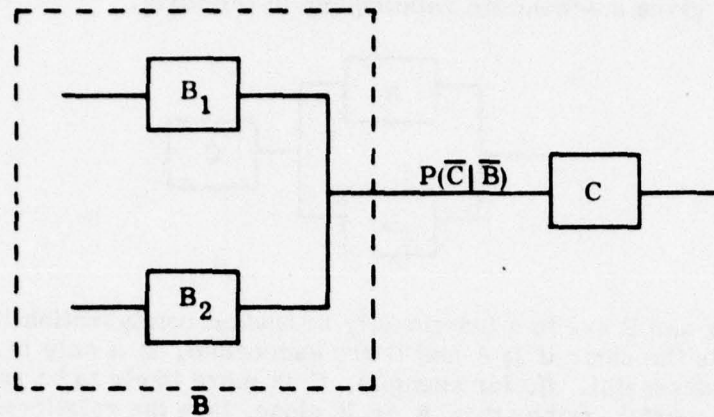

where $\bar{B} = \bar{B}_1\bar{B}_2$


Parallel Functions

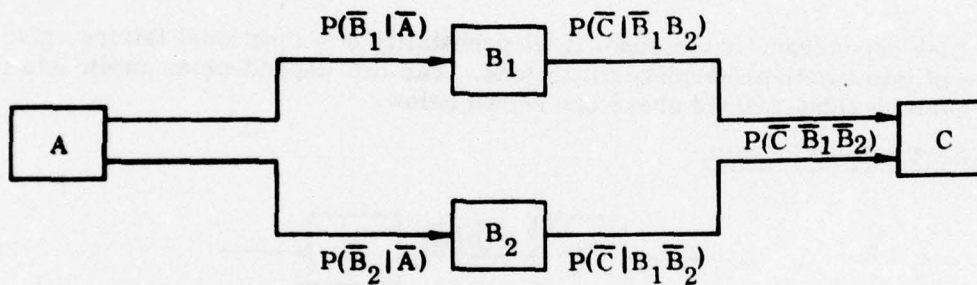

We shall generally assume that the dependencies of B_1 with respect to A , and of B_2 with respect to A , are independent of each other, so that

$$P(\bar{B}_1\bar{B}_2|\bar{A}) = P(\bar{B}_1|\bar{A})P(\bar{B}_2|\bar{A})$$

We then can consider three link dependencies from A to B as follows:

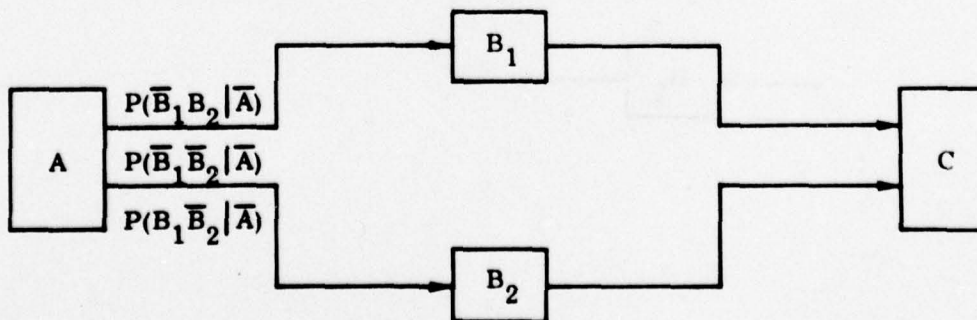


noting that

$$P(\bar{B}_1|\bar{A}) = P(\bar{B}_1 B_2|\bar{A}) + P(\bar{B}_1 \bar{B}_2|\bar{A})$$

$$P(\bar{B}_2|\bar{A}) = P(B_1 \bar{B}_2|\bar{A}) + P(\bar{B}_1 \bar{B}_2|\bar{A})$$

Models are shown below for determining the sensitivity of elements within a function for each of the three basic designs. The following basic assumptions apply:

- a. Except for cases where an element has a redundant or parallel counterpart or is located in a function with a redundant or parallel function, only the element under consideration shall be assumed to have failed initially. Thus the expression $P(A|i_a)$, representing the accident probability given failure of the i th Work Unit Code element, is based on the assumption that no other element has failed unless element i is in some redundant or parallel configuration. For cases in which there are redundant or parallel counterparts, failures of such counterpart elements or functions are considered in accordance with their occurrence probabilities.
- b. The success of all immediate predecessors ensures the success of a function, provided that the function experiences no element failures. Thus for the series function relationship




we assume

$$P(\bar{B}|A) = 0,$$

provided B experiences no element failures. If an element in function A is under consideration, the latter provision is always true by assumption "a."


The element sensitivity models are:

Series Relationship



$$P(A|i_a) = P(\bar{A}|i_a)P(\bar{B}|\bar{A})P(\bar{C}|\bar{B})P(A|\bar{C})$$


Functional Redundancy

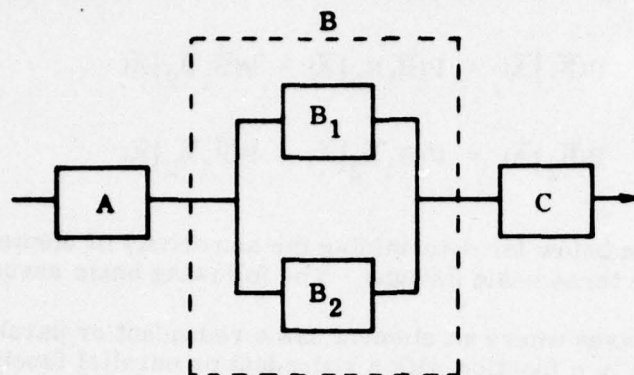

$$P(\mathcal{A}|i_a) = P(\bar{\mathcal{A}}|i_a)P(\bar{\mathcal{B}}|\bar{\mathcal{A}})P(\bar{\mathcal{C}}|\bar{\mathcal{B}})P(\mathcal{A}|\bar{\mathcal{C}})$$

$$P(\mathcal{A}|i_{b1}) = P(\bar{\mathcal{B}}_1|i_{b1})P(\bar{\mathcal{B}}_2)P(\bar{\mathcal{C}}|\bar{\mathcal{B}})P(\mathcal{A}|\bar{\mathcal{C}})$$


Parallel Functions

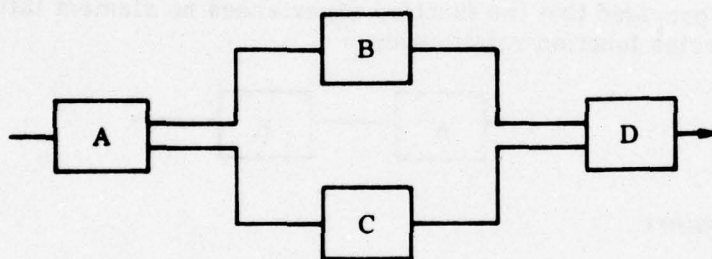

$$P(\mathcal{A}|i_a) = P(\bar{\mathcal{A}}|i_a) \{ P(\bar{\mathcal{B}}\mathcal{C}|\bar{\mathcal{A}})P(\bar{\mathcal{D}}|\bar{\mathcal{B}}\mathcal{C}) + P(\mathcal{B}\bar{\mathcal{C}}|\bar{\mathcal{A}})P(\bar{\mathcal{D}}|\mathcal{B}\bar{\mathcal{C}}) \\ + P(\bar{\mathcal{B}}\bar{\mathcal{C}}|\bar{\mathcal{A}})P(\bar{\mathcal{D}}|\bar{\mathcal{B}}\bar{\mathcal{C}}) \} P(\mathcal{A}|\bar{\mathcal{D}})$$

$$P(\mathcal{A}|i_b) = P(\bar{\mathcal{B}}|i_b) \{ P(\bar{\mathcal{C}}|i_b)P(\bar{\mathcal{D}}|\bar{\mathcal{B}}\mathcal{C}) + P(\mathcal{C}|i_b)P(\bar{\mathcal{D}}|\mathcal{B}\bar{\mathcal{C}}) \} P(\mathcal{A}|\bar{\mathcal{D}})$$

A case not explicitly included in the above three basic functional relationships is one for which a function is in two paths, e.g.,

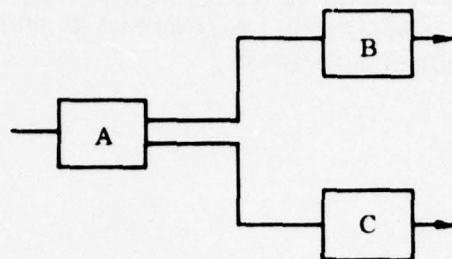

then

$$P(A|i_a) = P(\bar{C}|i_a)P(B|i_a)P(A|\bar{C}B) + P(C|i_a)P(\bar{B}|i_a)P(A|C\bar{B}) \\ + P(\bar{C}|i_a)P(\bar{B}|i_a)\{1 - P(A|\bar{C})P(A|\bar{B})\}$$

where it is assumed that the effects of loss of the major functions in accident occurrence are independent of each other.

Use of Numerical Provisory Factors for Partially Redundant Systems

The numerical provisory factors (see Table 3-1) are used where more than two identical functions are involved in a redundancy. For example, aircraft with more than two engines often have identical and independent systems for hydraulic pressurization, and for electrical power generation, one driven by each engine. If the aircraft can be operated safely with one or more of such systems in a failed state, one of the numeric codes is utilized in assigning link dependency values. Consider, for example, the following:

If N identical and independent units* are available and at least M are required for safe operation, where $0 < M < N$, then the provisory factor of a given unit, say U_j , is the probability that the failure of U_j will cause the aircraft to enter an unsafe state. This is the probability that exactly $M-1$ of the remaining $N-1$ units will be in an unfailed state. This probability can be calculated by the formula for the binomial distribution, and is given by

$$P(U_j) = \binom{N-1}{M-1} p^{(M-1)} q^{(N-M)}$$

where $P(U_j)$ = probability that failure of the j^{th} unit will cause the aircraft to enter an unsafe state, and

M = Number of units required

N = Number of units available

p = Probability that a single unit will be in an unfailed state

q = Probability that a single unit will be in a failed state or $(1-p)$

*Units may be either elements, element assemblies, or functions.

Assignment of link dependencies to N identical and independent units of which only M are required proceeds as follows. The value assigned to each unit is the dependency of the higher level function on receiving an output from M of the units (usually 1.0). The provisory factor is the appropriate numeric code. In the evaluation of the path sensitivity, the computer is programmed to select the binomial formula that corresponds to the provisory factor listed.

APPENDIX C
FSPT DOCUMENTATION METHODS

FSPT DOCUMENTATION METHODS

Because of the extreme complexity of aircraft, it is necessary to develop a computerized method to identify and document all possible paths associated with each function as well as to determine the safety sensitivity associated with each path. A computer routine has been devised that takes the data from the functional card deck and traces and documents all paths. For each WUC, it also computes the flight-phase sensitivities for each path in which the WUC is present. The resulting computer printout provides a combined functional path sensitivity.

C.1 ALPHA CODING

As each system of the aircraft is functionally diagrammed, the functional blocks are assigned an "alpha code". This code aids the analyst in the bookkeeping tasks of functional diagramming and provides the computer with an identification of the elements to be processed. For standardization among aircraft, nine top-level functions have been defined and each has been assigned an initial or first-alpha designator. Each block in the functional diagram carries the same initial alpha as the top level function. Subsequent letters added to the initial alpha uniquely identify each block.

The only restrictions placed on the assignment of alpha codes are that:

- a. All characters in a code must be a letter of the alphabet, and
- b. The maximum number of characters in one code is seven.

C.2 ALPHA CODING AND COMPUTER PROGRAM COMPATIBILITY

Additional rules for alpha coding required to obtain the desired results from computer processing include:

- a. When a WUC item operates in the same mode to perform more than one function, the same alpha code is used in each application.
- b. When a WUC item operates in a different mode to perform each of more than one function, a different alpha designator is assigned for each operating mode.

C.3 FUNCTIONAL TABULATION

The "Flight Safety Functional Tabulation" sheet is used to code the safety model for keypunching. The sheets are coded as follows (refer to Figure C-1) for an example).

- a. Columns 1 through 3. Used to identify the aircraft represented by the model. For certain aircraft modeled under this contract more than one model - designation series MDS - was included. For instance, a single functional deck was created for four MDSs of the F-4 aircraft. Cards with "F4~~Ø~~"* in columns 1-3 were common to all aircraft. For example,

*~~Ø~~ = blank

when these cards are combined with those carrying "F4E" in columns 1-3, then it produces an F-4E FSPT model deck.

- b. Columns 4 through 31. Contain the title of the function or the WUC item.
- c. Columns 32 through 36. Contain the left-justified WUC number.
- d. Columns 37 and 38. Blank
- e. Columns 39 through 46. Contain the assigned alpha designator for the function and/or the WUC. Column 39 contains either an L or an R, or is blank. The L and R designate left and right for those instances when the function and/or WUC pertains to the left or right side of the aircraft.
- f. Columns 47 and 48. Blank.
- g. Columns 49 through 55. Normally left blank, but are used after a deck is operational to substitute the data on a card for that stored in the computer by punching the line record number in this field.
- h. Columns 56 through 63. Identify the dependent functions for either the function or specific WUCs being coded. Column 56 may contain L, R or blank for the same purpose as that of column 39.
- i. Column 64. Contains the alphanumeric code of the "provisory factor" applicable to the link value assigned.
- j. Columns 65 through 69. Contain the alpha designator of a function that is an alternate for the function being coded. (Column 65 is used for "L" or "R" as in Column 39.) The presence of the "alternate alpha" flags the importance of the link dependency as being affected by the success probability of the alternate function.
- k. Column 70. Contains the work unit code dependency value (1 = 0.10; 2 = 0.20;A = 1.0). This value is applicable to all flight phases.
- l. Column 71. Contains special instructions to the computer through the use of letters F, S, or being blank. Cards with an "S" or "blank" in column 71 are used in sensitivity computations. Cards with an "F" document a functional relationships which, although present in the system, would produce an erroneous sensitivity value when combined with other nonindependent paths (having the same function in common at some higher level). The "F" prevents the computer from including the link in the sensitivity calculations.
- m. Columns 72 through 80. Contain functional dependencies for each of nine flight phases as described in Section 3.2.1 of the text. Coding is the same as for column 70.

C.4 DIAGRAM CONSTRUCTION

The diagrams produced under the contract document the functional inter-relationship of the aircraft systems considered in the model. In the interest of extending the useful life of the diagrams, WUC items are not shown, thereby eliminating the necessity of updating the diagrams with each (and sometimes frequent) change to the WUC manual.

As discussed earlier in this report, the diagrams represent the hierarchal structure of the paths from which the sensitivity values are derived. The diagrams, although consistent with the system schematic and reliability block diagrams, are not equivalent due to this hierarchal method of documentation. In the actual system, signals and/or fluids pass from one component to the next and are thus documented in schematics; conversely, the hierarchal approach only identifies the components that must operate to achieve a given function, independent of the direction and/or sequence of signal flow. This approach directly addresses the system impact of a component failure without the necessity of identifying the intrasystem secondary failures. Each line connecting functions on the diagram is documented by a punchcard, with the lower function providing the "alpha designator" and the higher function's alpha designator indicator as the "dependent function". *

*The card deck also documents functional relationships not shown on the diagram; the work unit codes (mentioned earlier) and the "S" cards discussed in paragraph C.3.1.

APPENDIX D
FSPT DOCUMENTATION OF F-15A AIRCRAFT

FSPT DOCUMENTATION OF F-15A AIRCRAFT

This appendix contains the functional relationship diagrams and a listing of the keypunch cards that comprise the F-15A aircraft FSPT safety model documentation.


D.1 DIAGRAMS

The diagrams illustrating the functional relationships considered in the F-15A safety model will be found on pages D-5 through D-27, and are listed below:

	<u>Page</u>
Propulsion	D-5
Communications/Navigation/Identification	D-9
Information and Display	D-11
Environmental Control	D-13
Flight Control	D-17
Ground Control	D-21
Mission Support	D-22
Landing Gear	D-24
Utilities (Electrical Power)	D-26
Utilities (Hydraulic)	D-27


D.2 CARD LISTING


Pages D-29 through D-116 are a reproduction of the punchcard listing. The listing is alphabetical by "alpha designator", and the format is that of the 80-column punchcard itself as described in Appendix C. At the top of each page the card columns are printed vertically; for example, column 34 is printed "3".
4

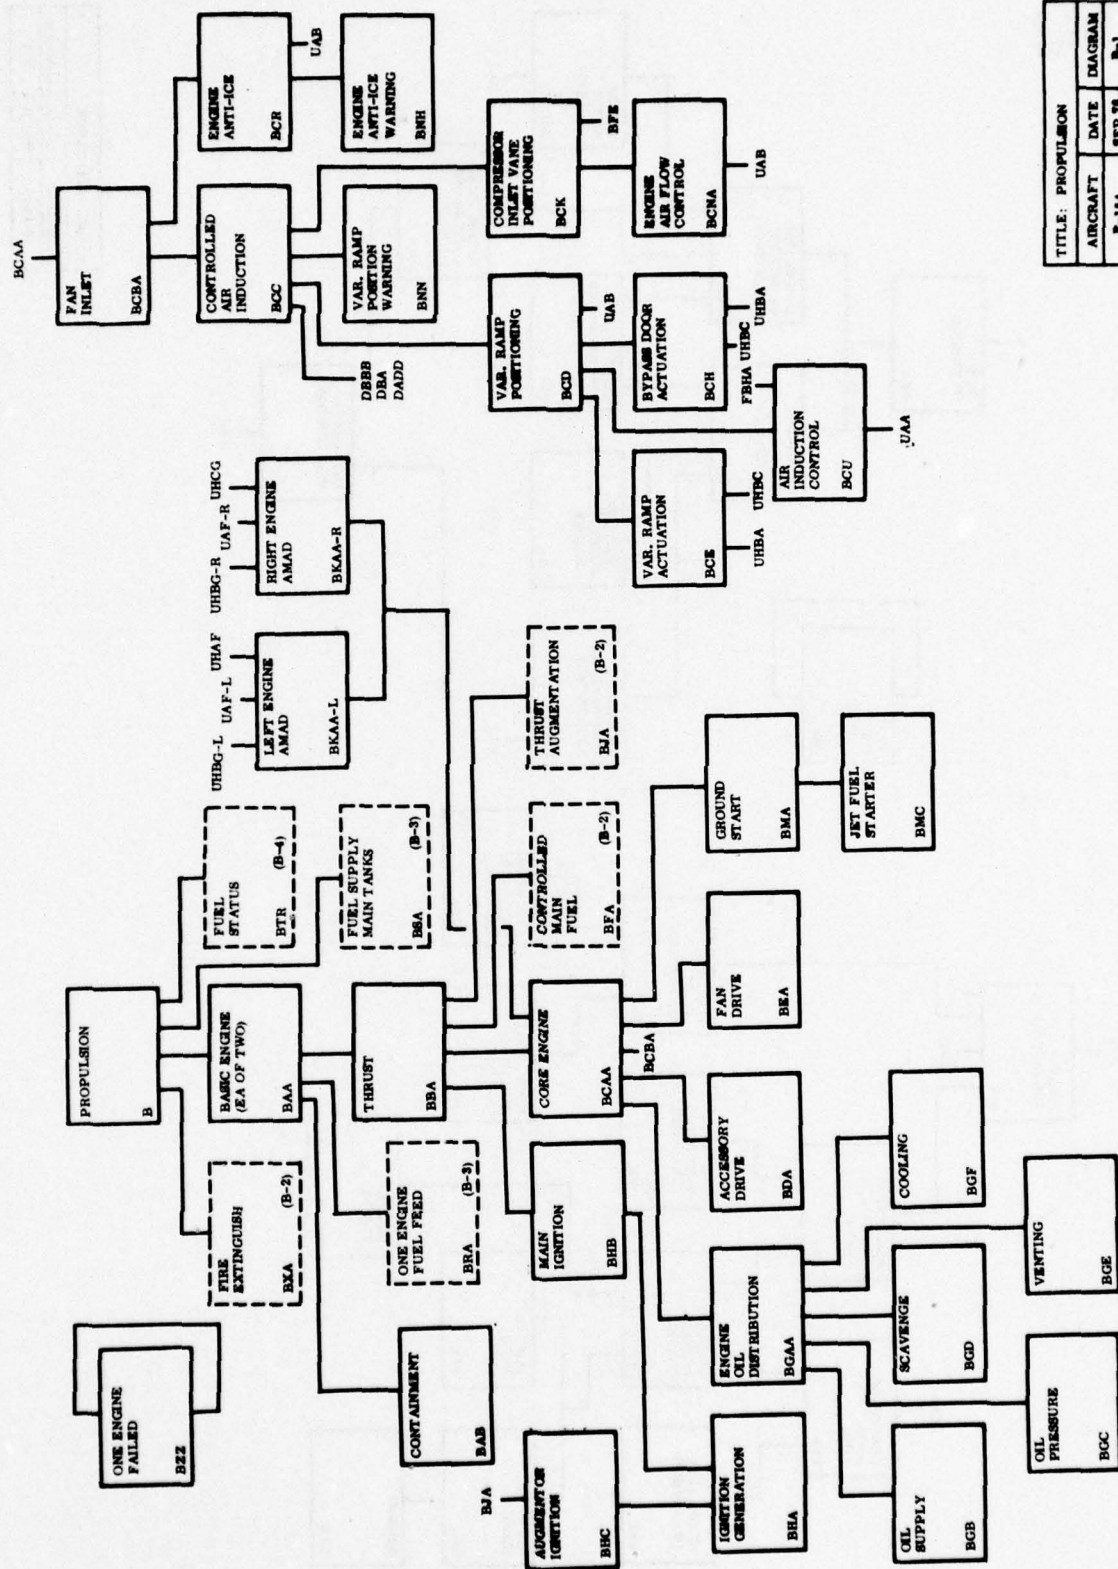


TITLE: PROPULSION			
AIRCRAFT	DATE	DIAGRAM	
P-18A	SEP 78	B-1	






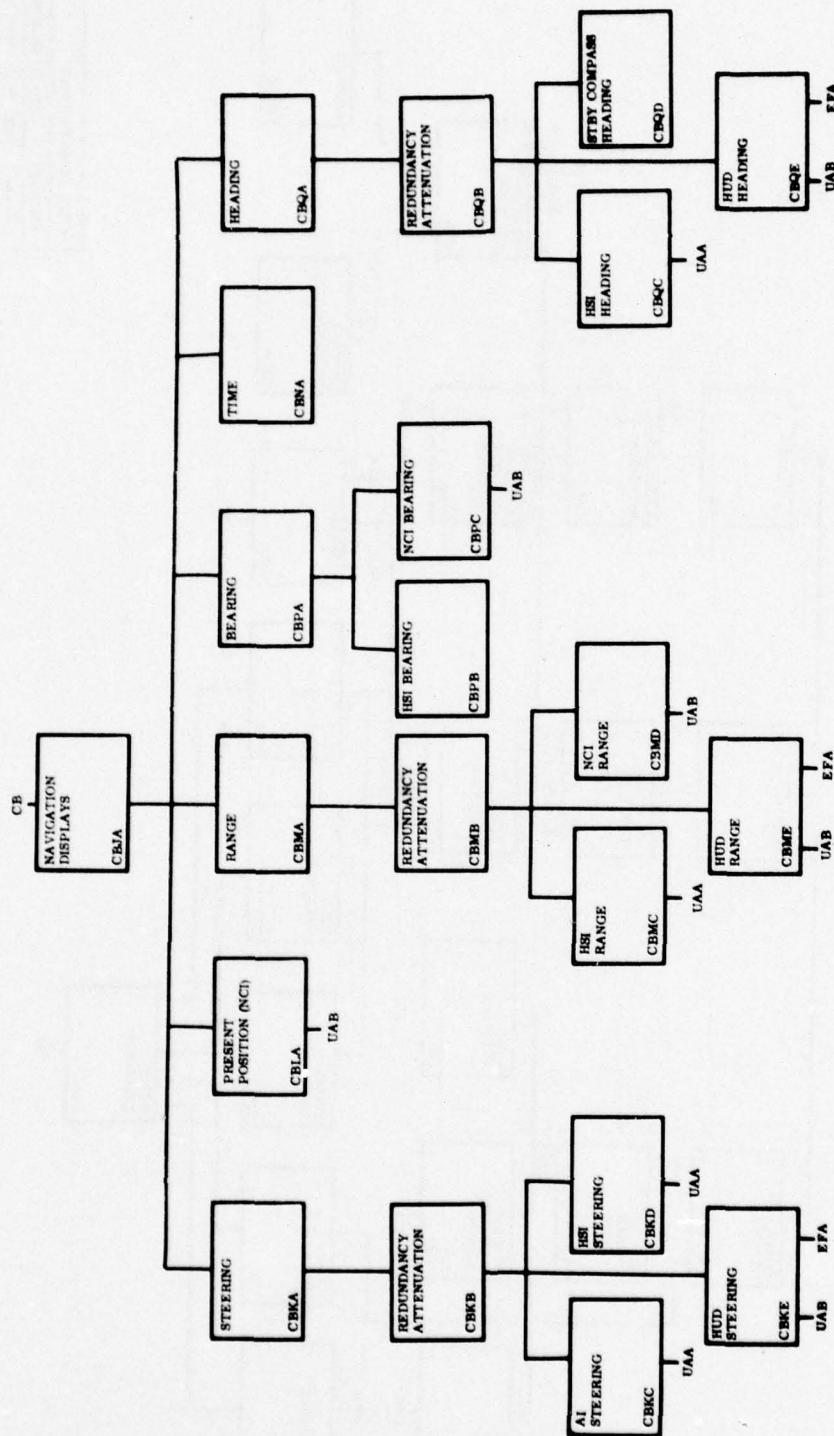


TITLE: COM/NAV/DENT			
AIRCRAFT	DATE	DIAGRAM	
F-15A	SEP 76	C-3	

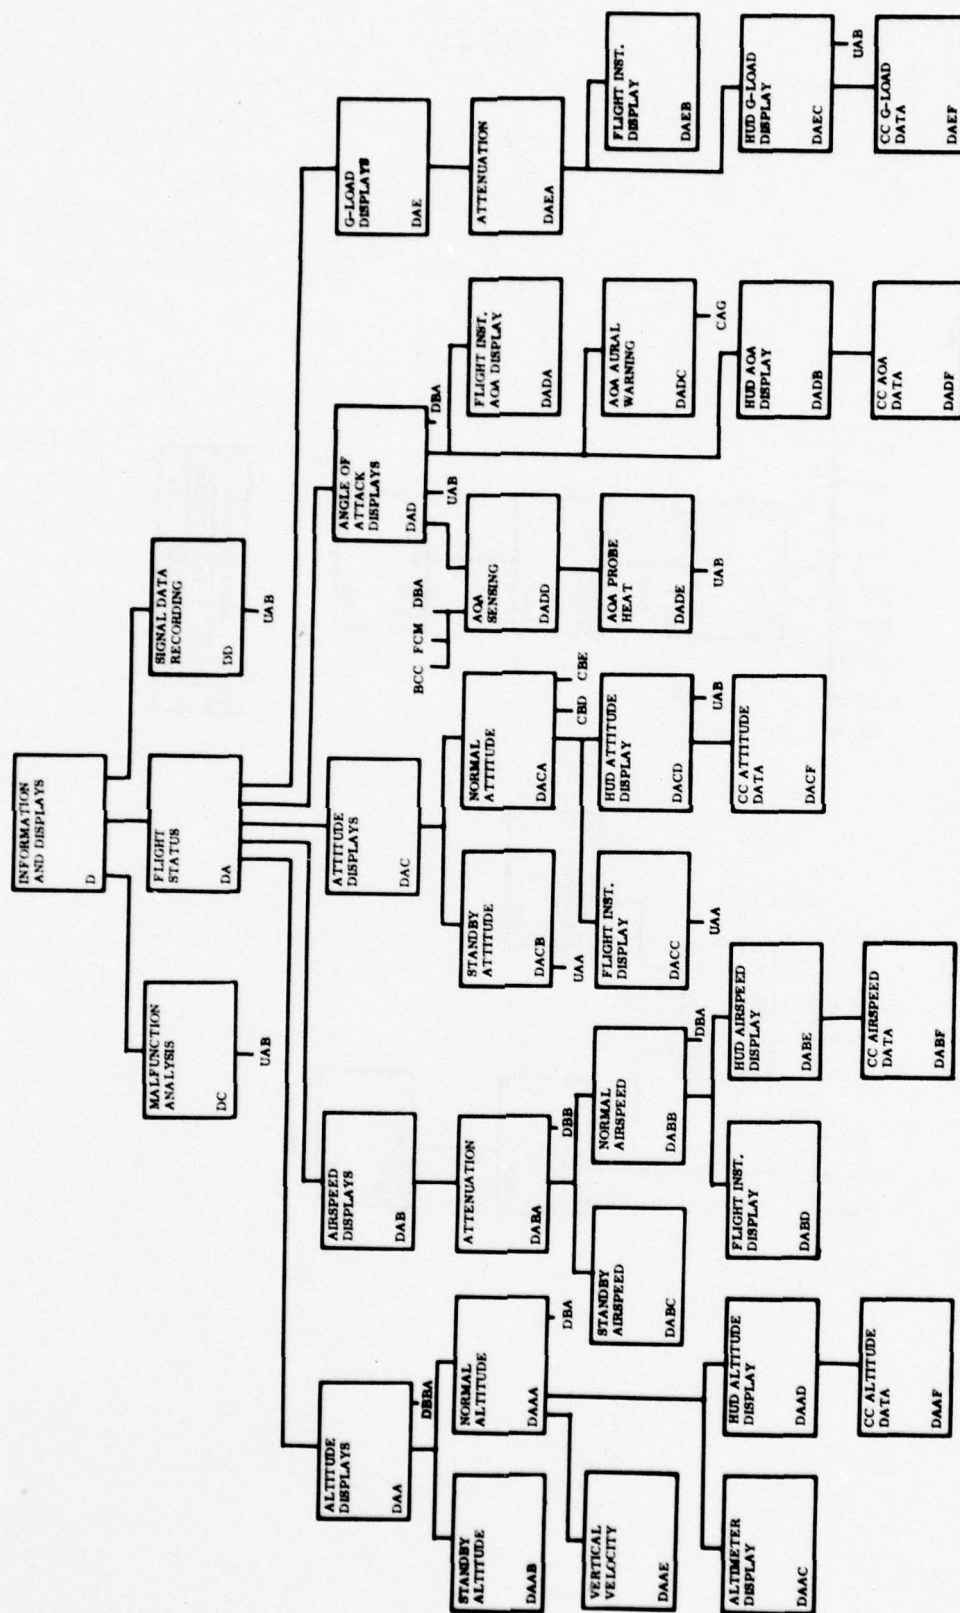


TITLE: INFO & DISPLAYS			
AIRCRAFT	DATE	DIAGRAM	
F-15A	SEP 76	D-1	

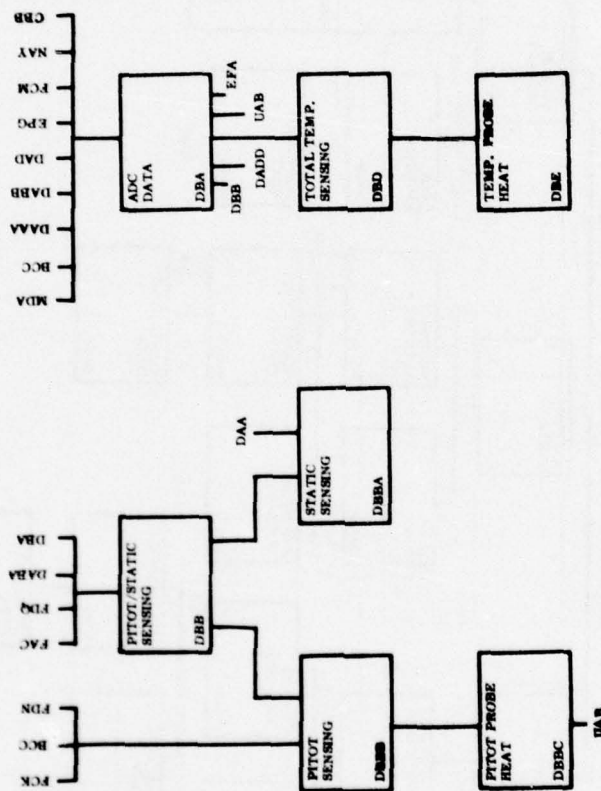



TITLE: INFO & DISPLAYS			
AIRCRAFT	DATE	DIAGRAM	
F-15A	SEP 96	D-2	

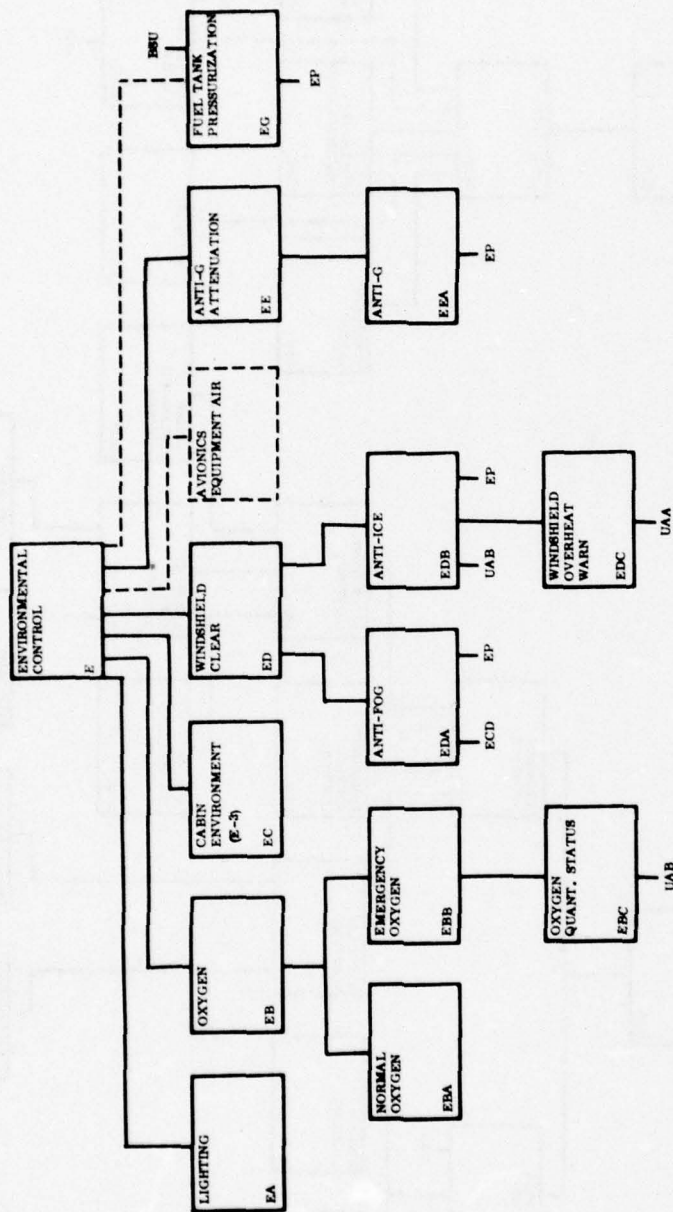


TITLE: ENVIRONMENTAL CONTROL			
AIRCRAFT	DATE	DIAGRAM	
F-15A	SEP 76	E-1	






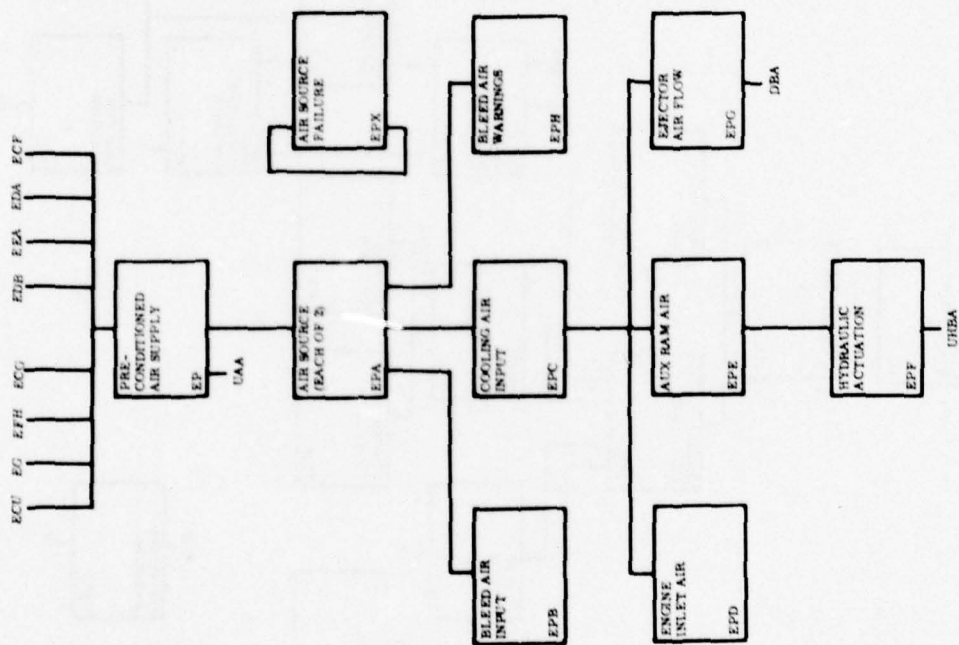


TITLE: ENVIRONMENTAL CONTROL		
AIRCRAFT	DATE	DIAGRAM
F-11A	SEP 76	E-4

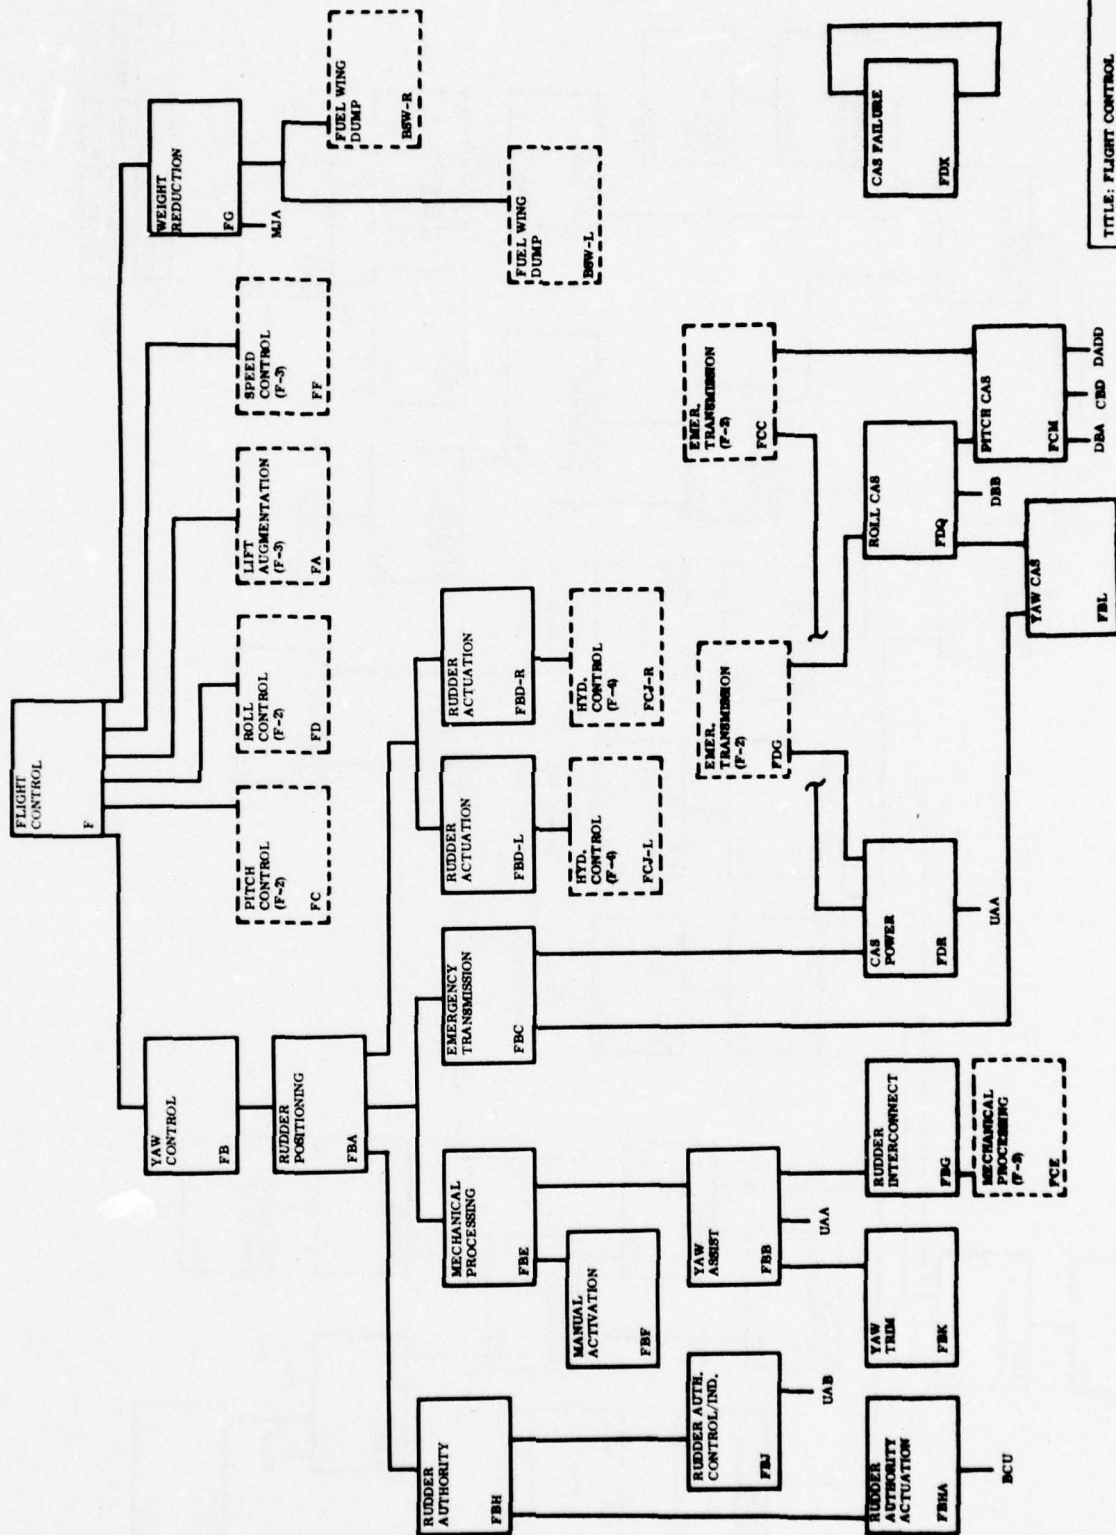


TITLE: FLIGHT CONTROL			
AIRCRAFT	DATE	DIAGRAM	
F-111A	SEP 78	P-1	

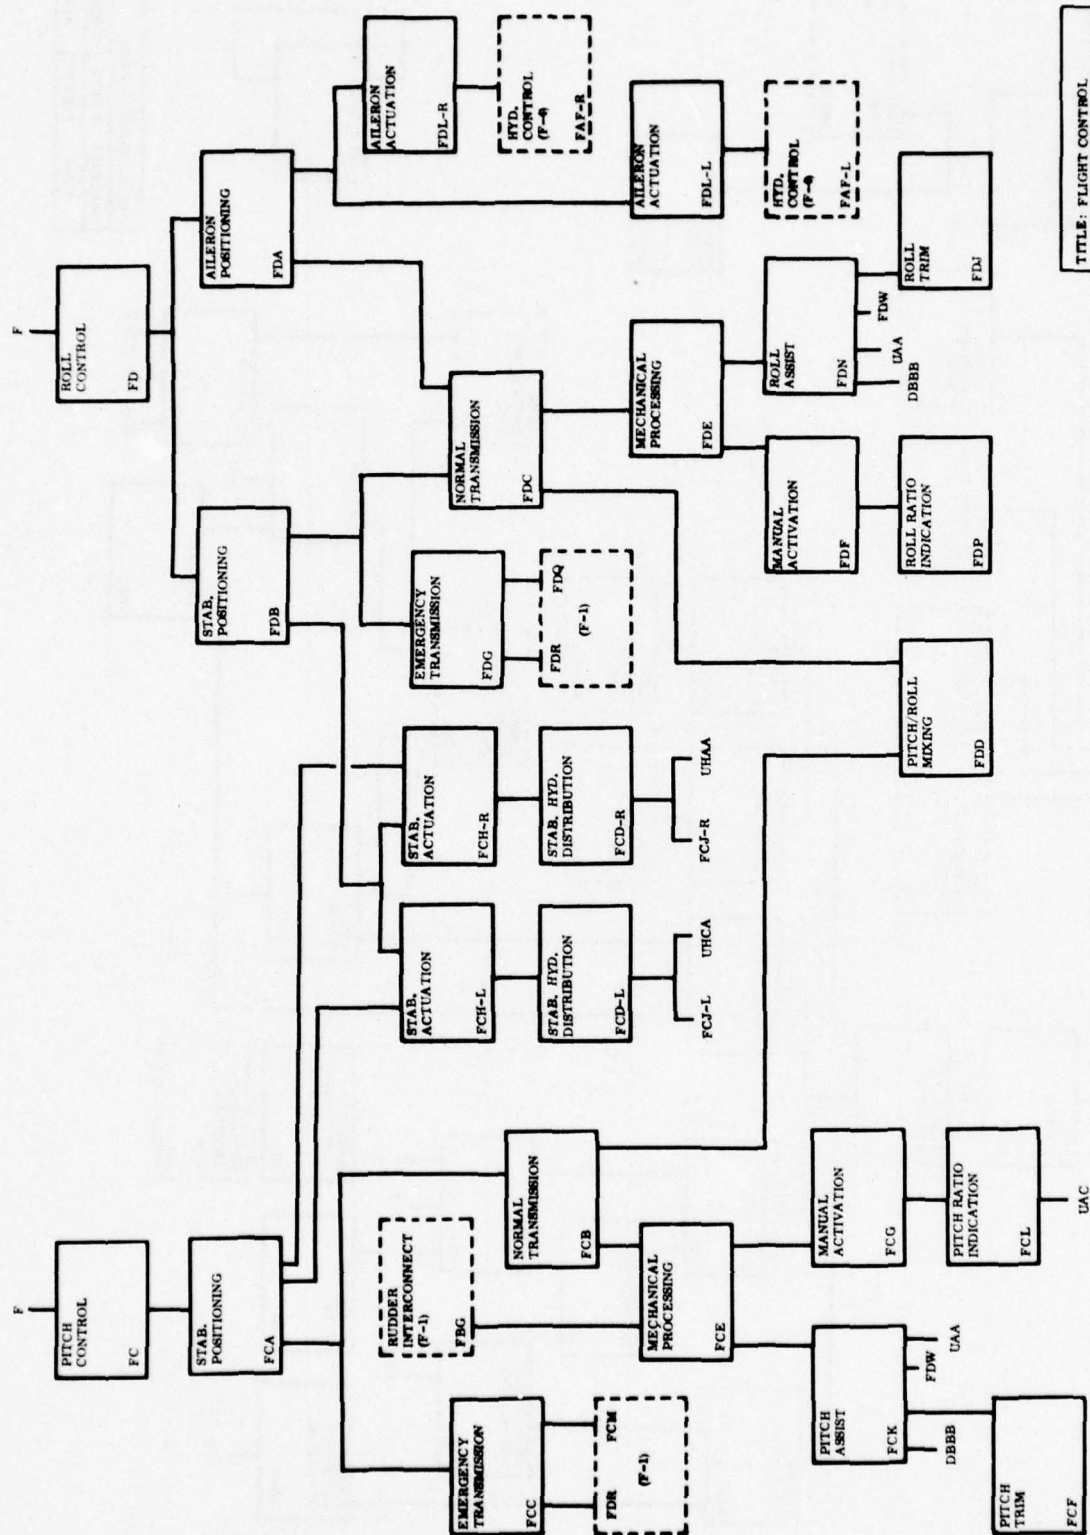


TITLE: FLIGHT CONTROL		
AIRCRAFT	DATE	DIAGRAM
F-15A	SEP 76	F-2

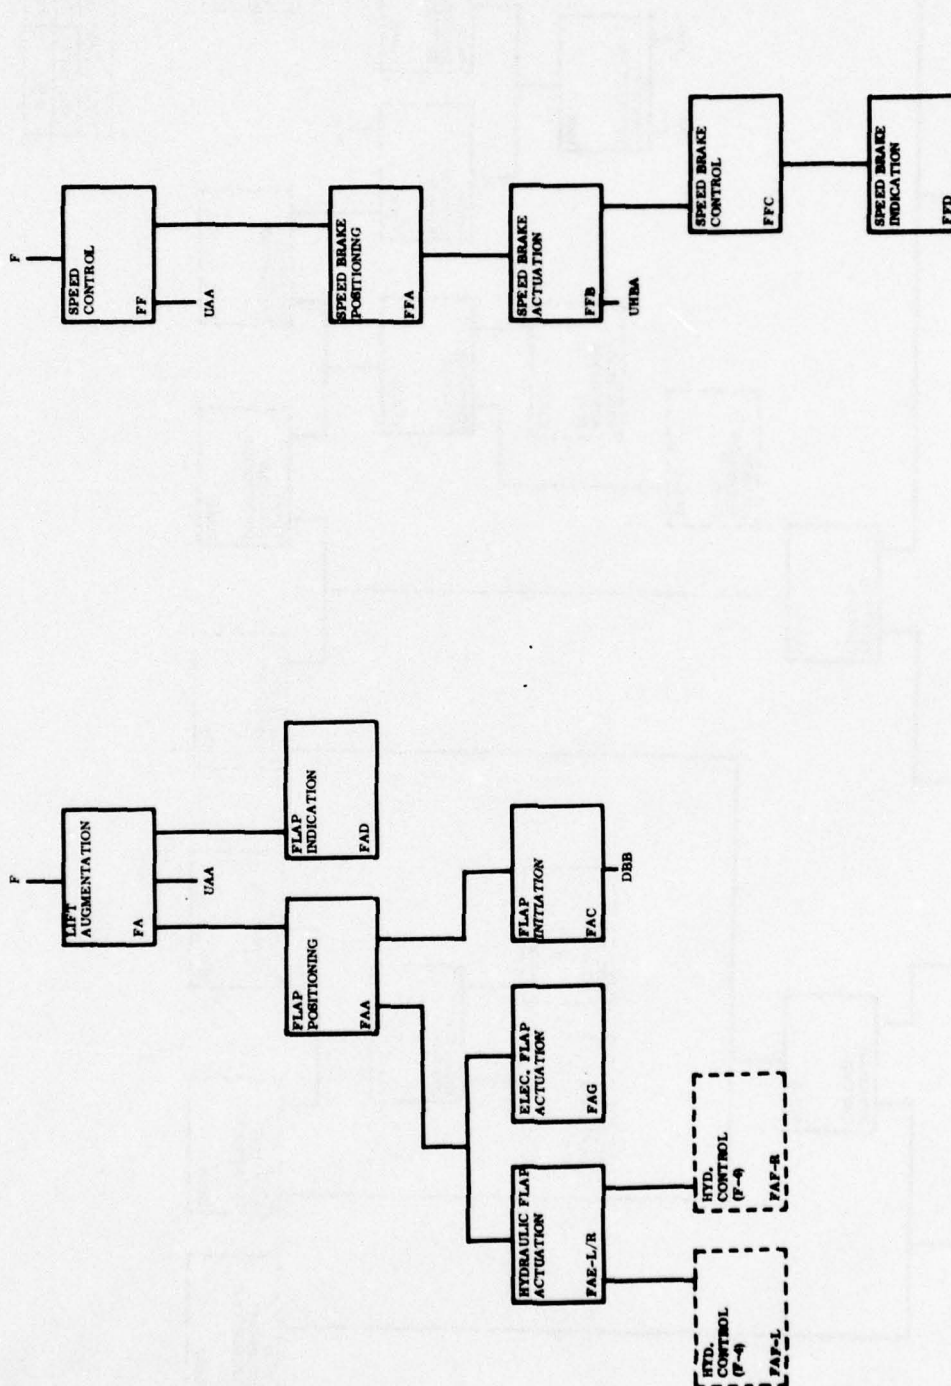


TITLE: FLIGHT CONTROL			
AIRCRAFT	DATE	DIAGRAM	
F-11A	SEP 76	F-3	

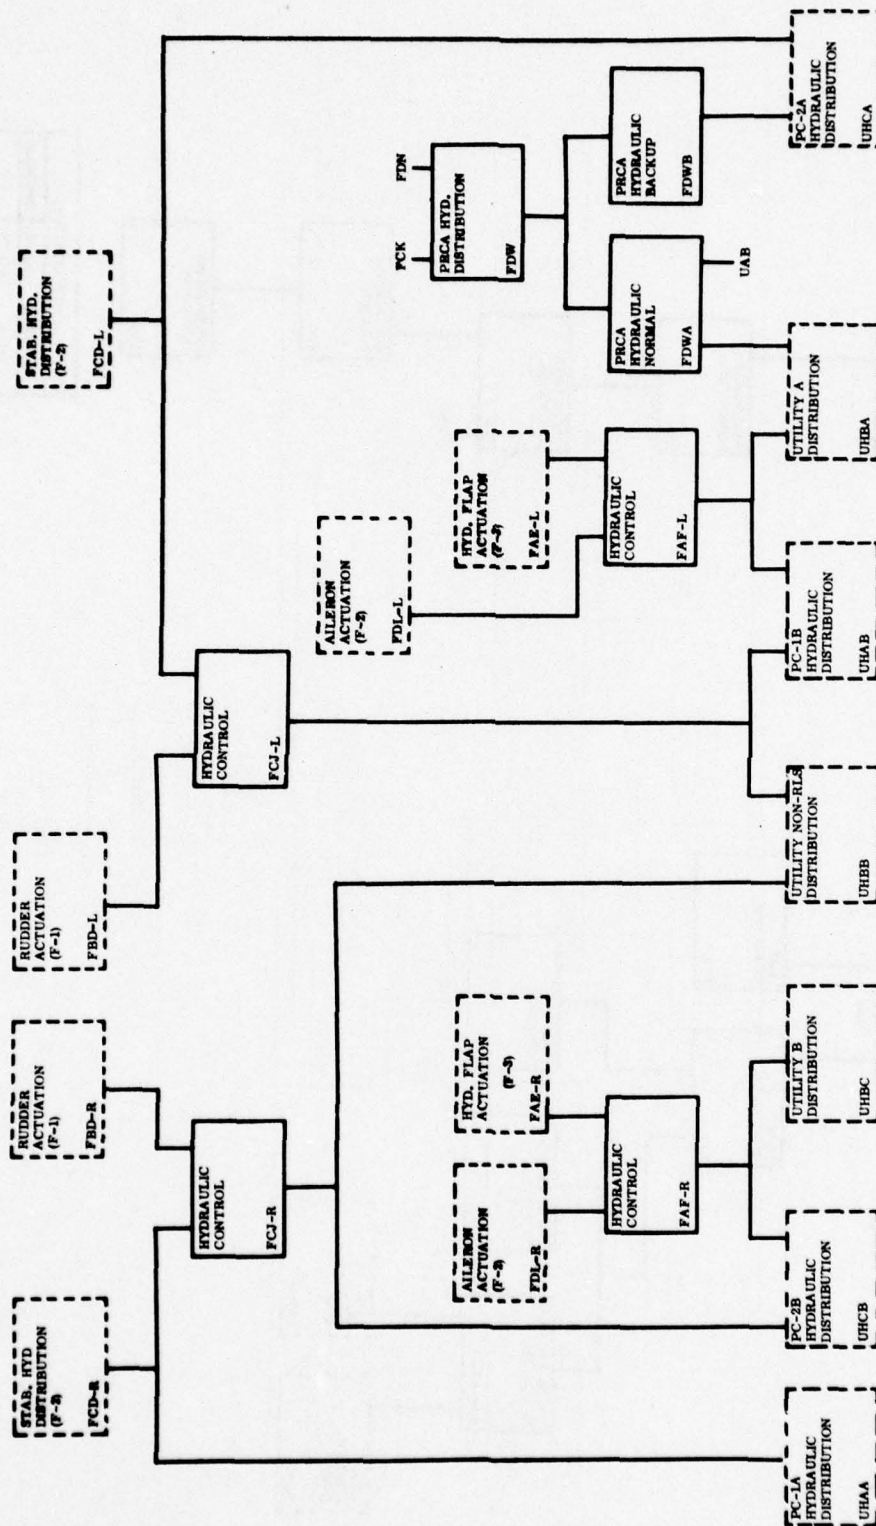


TITLE: FLIGHT CONTROL			
AIRCRAFT	DATE	DIAGRAM	
F-15A	SEP 76	P-4	

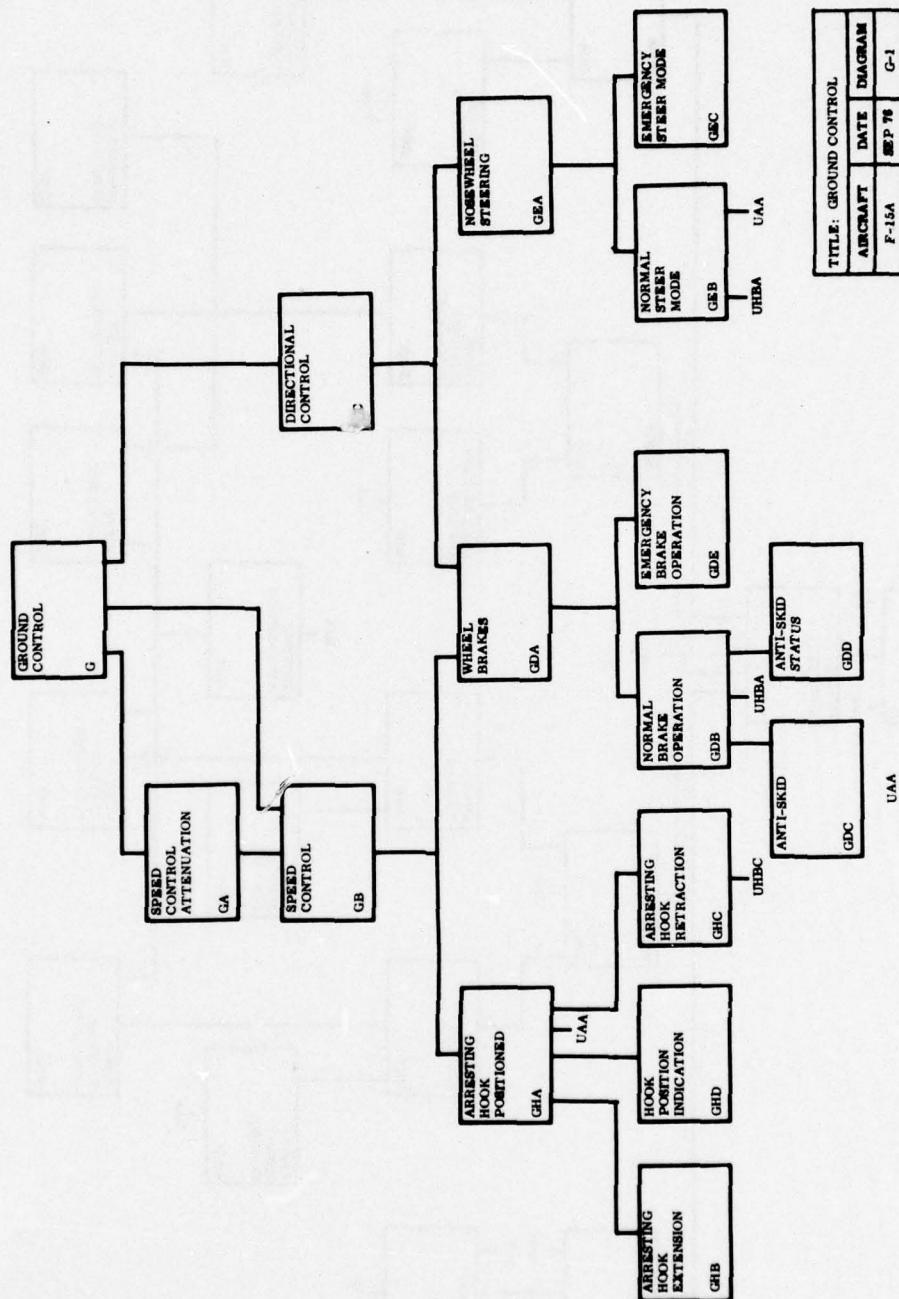


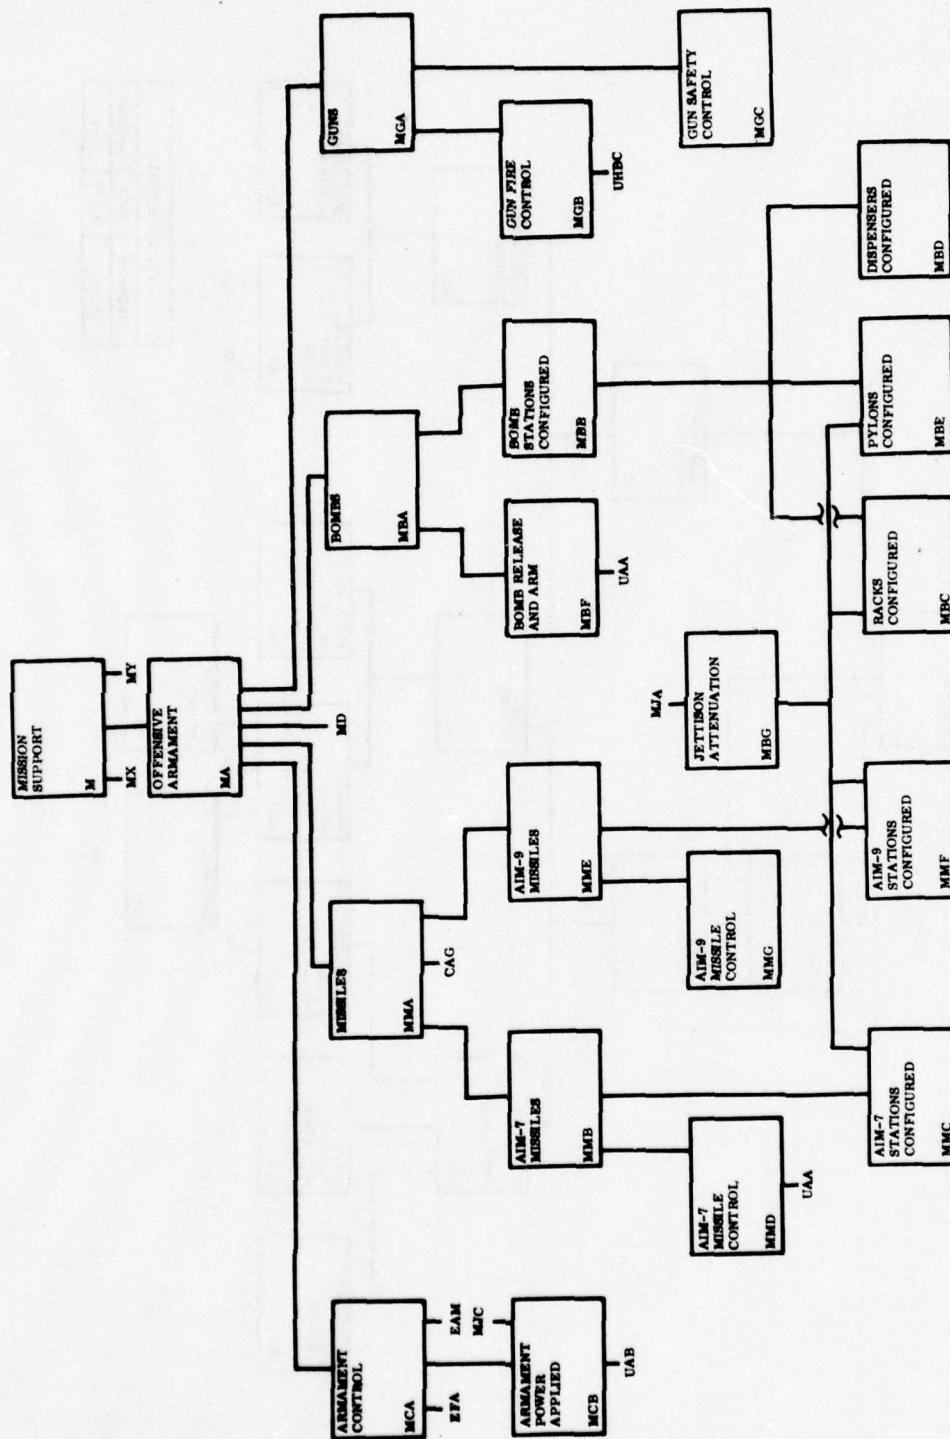


TITLE: MISSION SUPPORT		
AIRCRAFT	DATE	DIAGRAM
F-15A	SEP 76	M-1

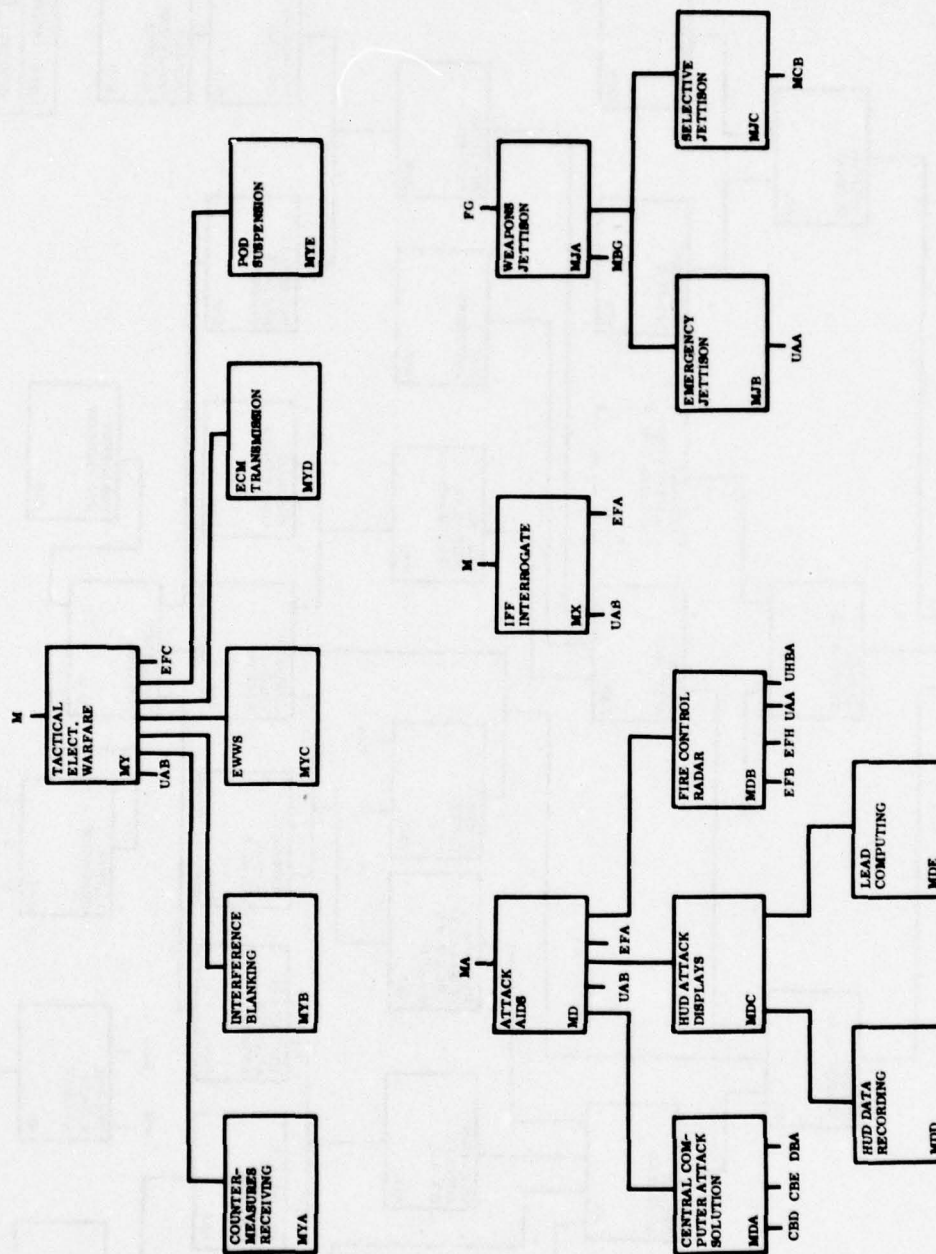


TITLE: MISSION SUPPORT			
AIRCRAFT	DATE	DIAGRAM	
F-15A	SEP 76	M-2	

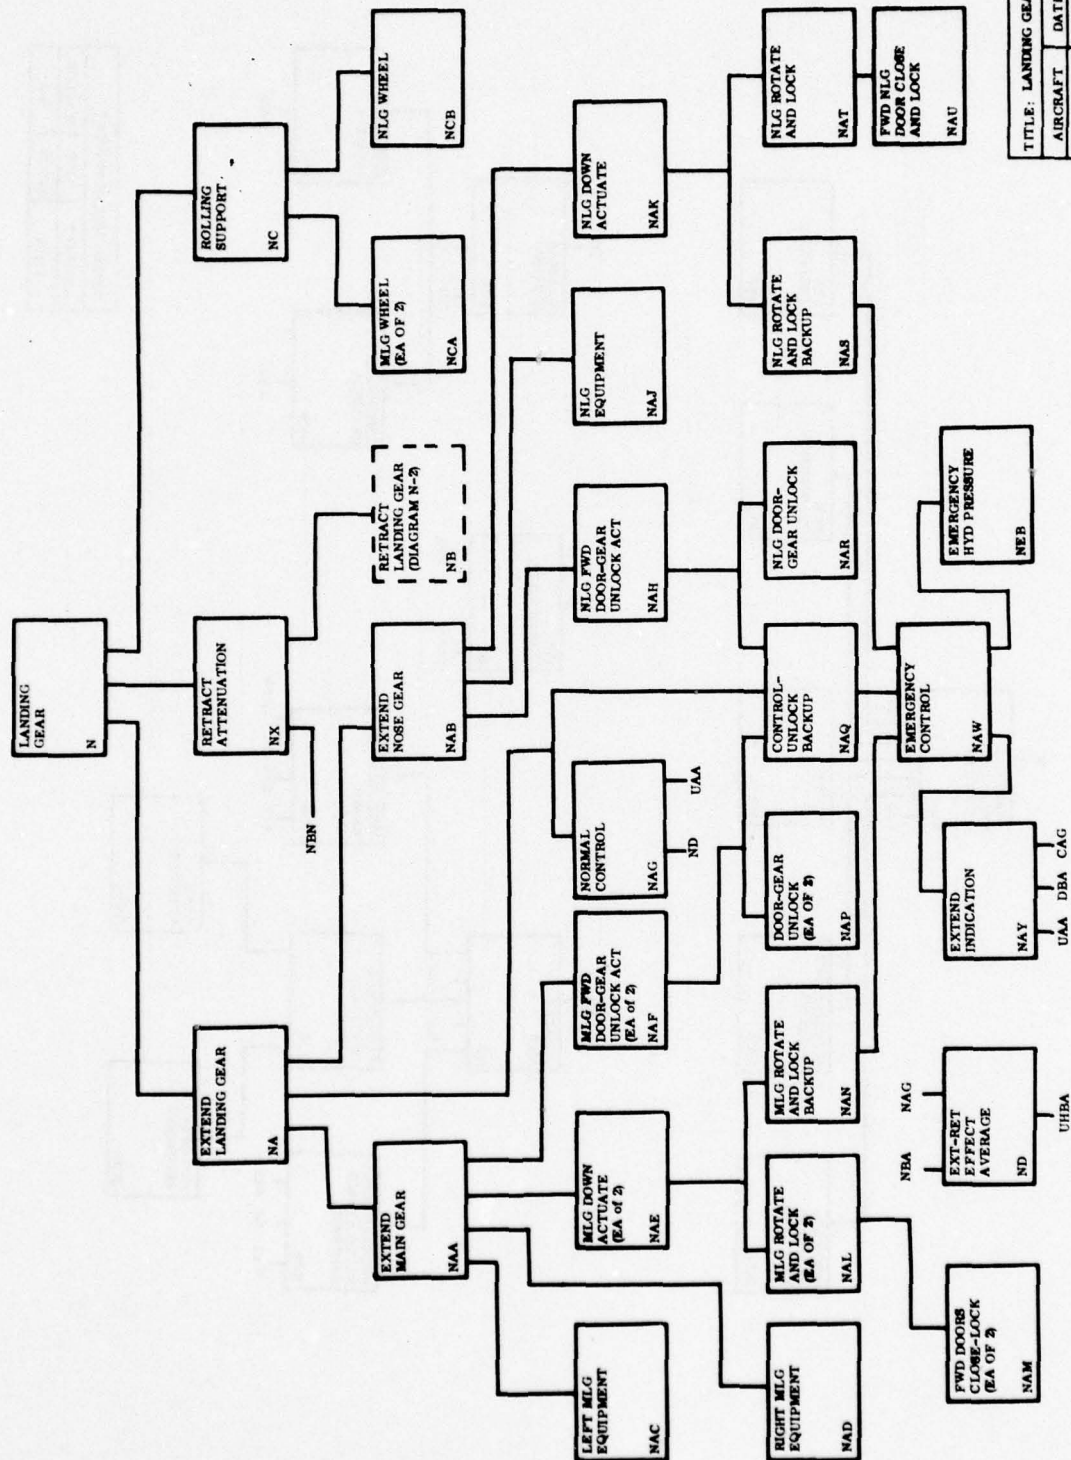


TITLE: LANDING GEAR			
AIRCRAFT	DATE	DIAGRAM	
F-15A	SEP 76	N-1	



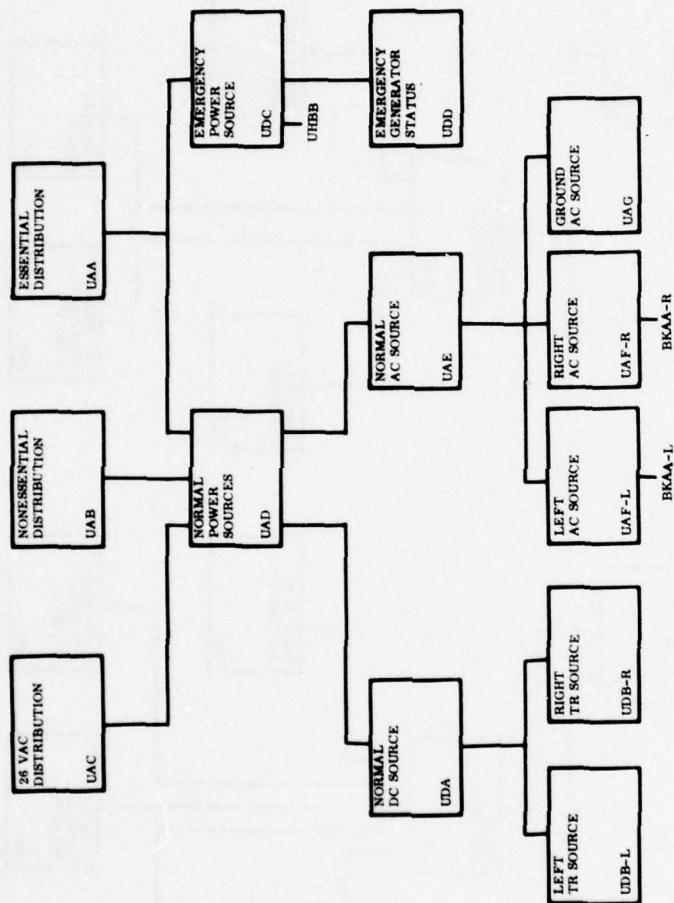

TITLE: UTILITIES (ELECTRICAL)			
AIRCRAFT	DATE	DIAGRAM	
F-15A	SEP 76	U-1	

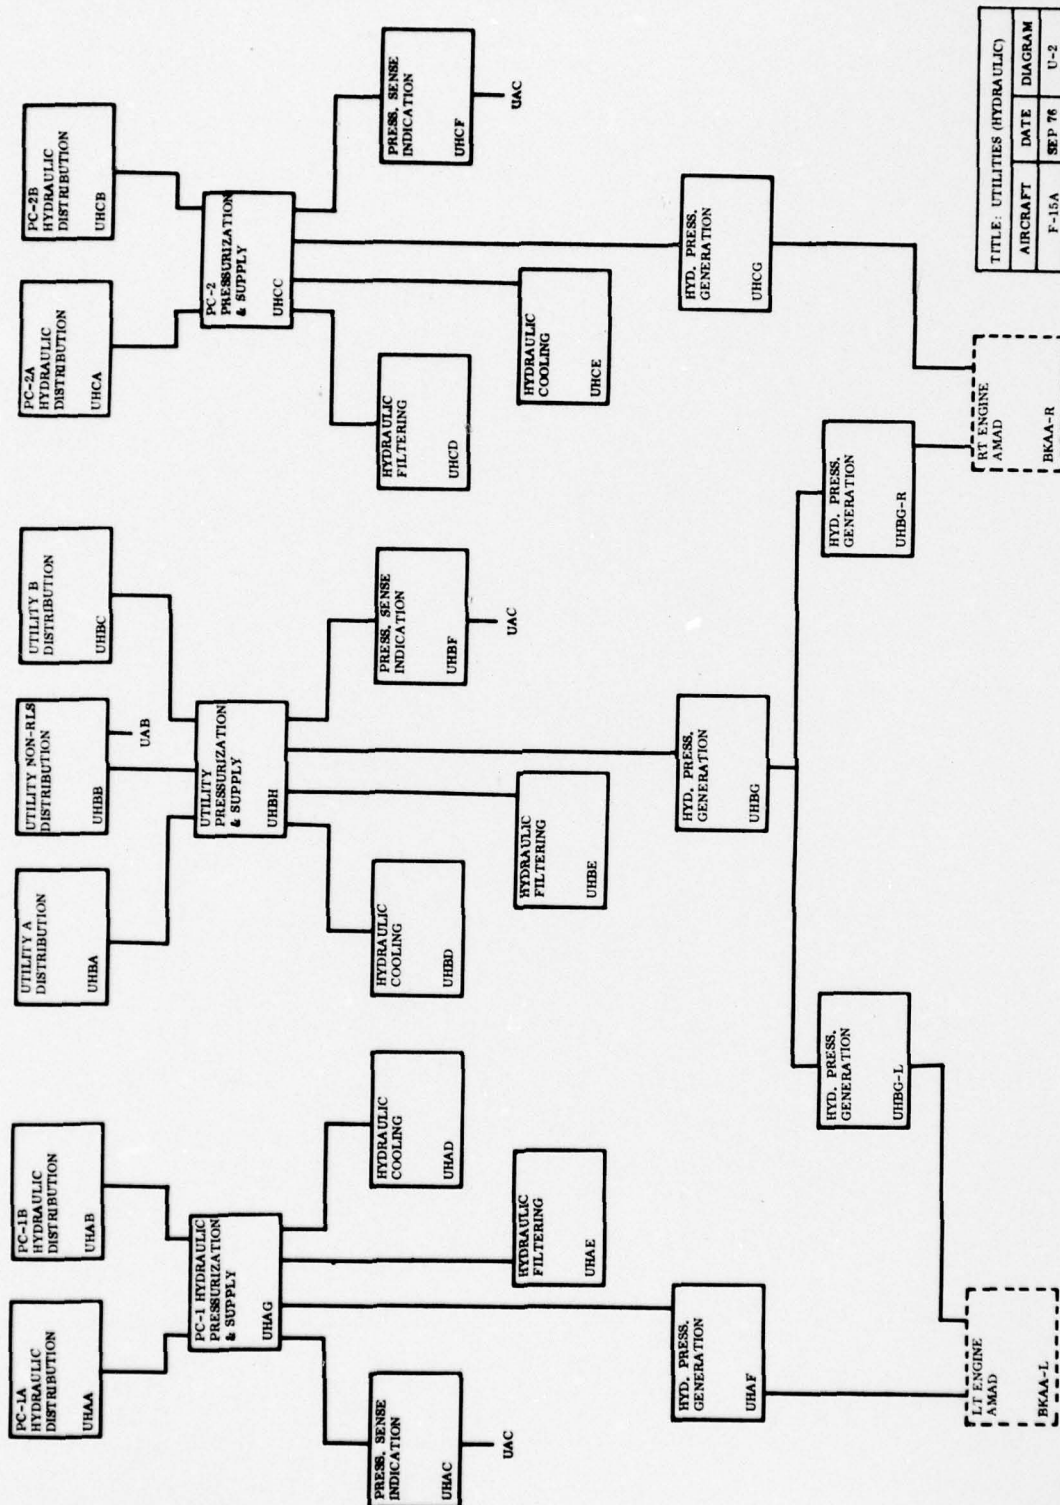

TITLE: UTILITIES (HYDRAULIC)			
AIRCRAFT	DATE	DIAGRAM	
F-15A	SEP 76	U-2	

PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

0000000001111111112222222222333333333344444444445555555555666666666677777777778
1234567890123456789012345678901234567890123456789012345678901234567890

PGG095.J1CC F-15A F15

F15 PROPULSION		B		AAAAAAAAAA
F15 BASIC ENGINE XEA OF 2<		BAA	B	041111110
F15 BASIC ENGINE XEA OF TWO<		BAA	B	0AAAAAAAA0
F15 BASIC ENGINE XEA OF TWO<		BAA	BZZ	SAAAAAAAAA
F15 CONTAINMENT		BAB	FAA	AAAAAAAAAA
F15 ENGINE MOUNTING SYSTEM	23100	BABA	BAB	8
F15 ENGINE MOUNT, MAIN	23100	BABB	BAB	3
F15 ADAPTER, ENG MOUNT-TO-ENG	2310E	BABC	BAB	8
F15 BRACKET, ENG MOUNT, FWD	2310F	BABD	BAB	8
F15 PIN, QUICK RELEASE, FWD	2310H	BABE	BAB	1
F15 BRACKET, ENG MOUNT, SIDE	2310J	BABF	BAB	8
F15 LINK, ENG MOUNT, SIDE	2310K	BABG	BAB	8
F15 PIN, QUICK RELEASE, SIDE	2310L	BABH	BAB	1
F15 LINK ENG MOUNT FWD	2310G	BABJ	BAB	8
F15 THRUST		BBA	BAA	AAAAAAAAAA
F15 CORE ENGINE		BCAA	BBA	AAAAAAAAAA
F15 CORE ENGINE		BCAA	LKAA	FAAAAAAAAAA
F15 CORE ENGINE		BCAA	RBKAA	FAAAAAAAAAA
F15 DUCT, COMPRESSOR, 3RD STA	23BAA	BCAAA	BCAA	1
F15 SUPPORT, NO 2 BRG	23BAC	BCAAB	BCAA	1
F15 SHIELD, HEAT, NO 2 BRG	23BAH	BCAAC	BCAA	1
F15 BRG & CPL ASSY, NO 2 BRG	23BBA	BCAAD	BCAA	8
F15 SEAT, NO 2 BRG SEAL, REAR	23BBC	BCAAE	BCAA	1
F15 BRG, BALL, AN, FLG, NO 2	23BRD	BCAAF	BCAA	8
F15 SEAT, NO 2 BRG SEAL, FRONT	23BBF	BCAAG	BCAA	1
F15 COUPLING, TB SHAFT	23BBG	BCAAH	BCAA	A
F15 SUPPORT, NO 3 BRG	23BBJ	BCAAK	BCAA	1
F15 HOUSING, NO 2 BRG	23BBK	BCAAL	BCAA	1
F15 SUPPORT, NO 2 & 3 BRG SEAL	23BBR	BCAAM	BCAA	1
F15 SEAT, NO 3 BRG SEAL, FRONT	23BBB	BCAAN	BCAA	1
F15 BEARING & GEAR ASSY, NO 3	23BBA	BCAAP	BCAA	8
F15 GEARSHAFT, BEV, G-BOX DR, BLL	23BBB	BCAAQ	BCAA	A
F15 BEARING, BALL, AN, FLG, NO 3	23BEC	BCAAR	BCAA	8
F15 SEAT, NO 3 BRG SEAL, REAR	23BFA	BCAAS	BCAA	1
F15 SUPPORT, NO 3 BRG SEAL	23BFD	BCAAT	BCAA	1
F15 RING, AIR SEALING, NO 3 BRG	23BFJ	BCAAU	BCAA	1
F15 VANE, COMP STATOR, 3RD STAGE	23BFK	BCAAV	BCAA	A
F15 RING, AIR SEAL, COMP INLET	23BFL	BCAAW	BCAA	2
F15 VANE, REAR COMPRESSOR	23BFM	BCAAX	BCAA	A
F15 BEARING ASSY, COMPRESSOR	23BFN	BCAAY	BCAA	8
F15 SHROUD, REAR CMP ST INL, FWD	23BFP	BCAAZ	BCAA	1
F15 RING, SYNC, REAR	23BFQ	BCABA	BCAA	8
F15 SHROUD, REAR CMP ST INL, RH	23BFR	BCABB	BCAA	1
F15 CASE, COMP INTERMEDIATE	23BFS	BCABC	BCAA	1
F15 TUBE, PRES, NO 2-3 BRG INLET	23BFW	BCABD	BCAA	2
F15 TEE, NO 2-3 BEARING, RH	23BFZ	BCABE	BCAA	1
F15 TEE, NO 2-3 BEARING, LH	23BF1	BCABF	BCAA	1
F15 CASE, COMPRESSOR, 7TH STA	23BGK	BCABG	BCAA	1
F15 COMPRESSOR, STATOR, 10TH STA	23BGL	BCABH	BCAA	8

FLIGHT SAFETY PREDICTION TECHNIQUE

F15	COMPRESSOR,STATOR,11TH STA23BGM	BCABJ	BCAA	1
F15	CASE & STATOR,COMP 4TH STA23FHA	BCABK	BCAA	1
F15	VANE,COMP STATOR,4TH STA 23RHR	BCABL	BCAA	A
F15	CASE,COMPRESSOR,4TH STA 23BHC	BCABM	BCAA	1
F15	BRG ASSY,COMP STATOR VANE 23RHD	BCABN	BCAA	8
F15	SHROUD,COMP STATOR,4TH STA23BHE	BCABP	BCAA	1
F15	SHROUD,CMP ST,4TH STA SEAL23BHF	BCABQ	BCAA	1
F15	CASE & STA,COMP,5TH STA 23BHG	BCABR	BCAA	1
F15	VANE,COMP STATOR,5TH STA 23BHH	BCABS	BCAA	A
F15	CASE,COMPRESSOR,5TH STA 23RHJ	BCABT	BCAA	1
F15	SHROUD,COMP STAT, 5TH STA 23BHK	BCABU	BCAA	1
F15	SHROUD,CMP ST,5TH STA SEAL23BHL	BCABV	BCAA	1
F15	SHROUD,CMP ST,4TH STA TIP 23BHM	BCABW	BCAA	1
F15	SHROUD,CMP ST,5TH STA TIP 23BHN	BCABX	BCAA	1
F15	COMPRESSOR STATOR 12TH STA23BHY	BCABY	BCAA	8
F15	CASE,COMP,10TH & 13TH STA 23RHZ	BCABZ	BCAA	1
F15	COMPRESSOR STATOR,6TH STA 23BHI	BCACA	BCAA	8
F15	COMPRESSOR STATOR,7TH STA 23BH2	BCACB	BCAA	8
F15	COMPRESSOR STATOR,8TH STA 23BH3	BCACC	BCAA	8
F15	COMPRESSOR STATOR,9TH STA 23PH4	BCACD	BCAA	8
F15	DISK,COMPRESSOR,4TH STA 23RJA	BCACE	BCAA	8
F15	SEAL,AIR,REAR COMPRESSOR 23EJB	BCACF	BCAA	1
F15	BLADE,REAR COMP,4TH STA 23RJC	BCACG	BCAA	A
F15	SEAL,AIR,COMP,4TH STA 23RJD	BCACH	BCAA	1
F15	DISK,COMPRESSOR,5TH STA 23RJE	BCACJ	BCAA	8
F15	BLADE,REAR COMP,5TH STA 23RJE	BCACK	BCAA	A
F15	SEAL,AIR,COMP,5TH STA 23RJG	BCACL	BCAA	1
F15	DISK & HUB,COMP,6TH STA 23BJH	BCACM	BCAA	8
F15	BLADE,REAR COMP,6TH STA 23RJJ	BCACN	BCAA	A
F15	SEAL,AIR,COMP,6TH STA 23RJK	BCACP	BCAA	1
F15	DISK,COMP,7TH STA 23BJL	BCACQ	BCAA	8
F15	BLADE,REAR COMP,7TH STA 23BJM	BCACR	BCAA	A
F15	SEAL,AIR,COMP,7TH STA 23BJN	BCACS	BCAA	1
F15	DISK,COMP,8TH STA 23RJP	BCACT	BCAA	8
F15	BLADE,REAR COMP,8TH STA 23BJQ	BCACU	BCAA	A
F15	SEAL,AIR,COMP,8TH STA 23RJR	BCACV	BCAA	1
F15	DISK,COMP,9TH STA 23BJS	BCACW	BCAA	8
F15	BLADE,REAR COMP,9TH STA 23BJT	BCACX	BCAA	A
F15	SEAL,AIR,COMP,9TH STA 23BJU	BCACY	BCAA	1
F15	DISK,COMP,10TH STA 23BJV	BCACZ	BCAA	8
F15	BLADE,REAR COMP,10TH STA 23BJW	BCADA	BCAA	A
F15	SEAL,AIR,COMP,10TH STA 23BJX	BCADB	BCAA	1
F15	DISK,COMP,11TH STA 23BJY	BCADC	BCAA	8
F15	BLADE,REAR COMP,11TH STA 23BJZ	BCADD	BCAA	A
F15	SEAL,AIR,COMP,11TH STA 23BJ1	BCADE	BCAA	1
F15	DISK,COMP,12TH STA 23BJ2	BCADF	BCAA	8
F15	BLADE,REAR COMP,12TH STA 23BJ3	BCADG	BCAA	A
F15	SEAL,AIR,COMP,12TH STA 23PJ4	BCADH	BCAA	1
F15	DISK,COMP,13TH STA 23PJ5	BCADJ	BCAA	8
F15	BLADE,REAR COMP,13TH STA 23PJ6	BCADK	BCAA	A

PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

000000001111111112222222223333333334444444445555555556666666667777777778
12345678901234567890123456789012345678901234567890123456789012345678901234567890

F15	SPACER,COMP ROTOR,13TH STA	23BJ7	BCADL	BCAA	1
F15	SHAFT,REAR COMP DRIVE	23BJ8	BCADM	BCAA	A
F15	RING,SYNC,COMP ST,4TH STA	23BKJ	BCADN	BCAA	8
F15	RING,SYNC,COMP ST,5TH STA	23BKK	BCADP	BCAA	8
F15	SEAL,AIR,NO 3 BRG	23BKL	BCADQ	BCAA	1
F15	SUPPORT,NO 4 BRG SEAL,FR	23RLA	BCADR	BCAA	1
F15	HOUSING,NO 4 BRG	23BLB	BCADS	BCAA	1
F15	RING,AIR SEAL,NO 4 BRG RR	23BLC	BCADT	BCAA	1
F15	SHIELD,HEAT,NO 4 BRG FRONT	23BLD	BCADU	BCAA	2
F15	SHIELD,HEAT,NO 4 BRG REAR	23BLE	BCADV	BCAA	2
F15	SEAL,AIR,NO 4 BRG	23BLF	BCADW	BCAA	1
F15	RING,AIR SEAL,NO 4 BRG FR	23BLG	BCADX	BCAA	1
F15	SEAT ASSY,NO 4 BRG SEAL,FR	23BLH	BCADY	BCAA	1
F15	SCOOP,NO 4 BRG	23BLJ	BCADZ	BCAA	3
F15	BEARING,ROLLER,NO 4	23BLK	BCAEA	BCAA	8
F15	RING,AIR SEAL NO 4 BRG FR	23BLL	BCAEB	BCAA	1
F15	SEAT ASSY,NO 4 BRG,REAR	23BLM	BCAEC	BCAA	1
F15	ROD,SUPPORT,NO 5 BRG	23QBF	BCAED	BCAA	1
F15	BALL END,ROD,NO 5 SUPPORT	23QRF	BCAEE	BCAA	1
F15	SEAT,BALL SOCKET NO 5	23QBD	BCAEF	BCAA	1
F15	TUBE,PRESS NO 5 BRG	23QBC	BCAEG	BCAA	1
F15	SHIELD,HEAT,NO 5 BRG	23QBA	BCAEH	BCAA	2
F15	SUPPORT,NO 4 BRG SEAL,RR	23RML	BCAEJ	BCAA	1
F15	SUPPORT,TURBINE ST,1ST STA	23BMM	BCAEK	BCAA	8
F15	GUIDE,COMBUST CHA,OUTHER	23BMN	BCAEL	BCAA	1
F15	VANE,TURBINE ST,1ST STA	23BMP	BCAEM	BCAA	A
F15	RING & SUPPORT,TB,1ST STA	23BMQ	BCAEN	BCAA	8
F15	GUIDE,COMBUST CHA,INNER	23BMR	BCAEP	BCAA	1
F15	SUPPORT,TURBINE ST,1ST STA	23BMS	BCAEQ	BCAA	8
F15	RING,AIR SEAL,TB,1ST STA	23BMT	BCAER	BCAA	1
F15	SEAL,TURBINE ST,1ST STA	23BMU	BCAES	BCAA	1
F15	ROT & STA ASSY,TB RR CP DK	23BNO	BCAET	BCAA	8
F15	DISK,TURBINE,1ST STA	23RNB	BCAEU	BCAA	8
F15	BLADE,TURBINE ROT,1ST STA	23BNC	BCAEV	BCAA	A
F15	PLATE,RETAIN,TB BL,2ND STA	23BNF	BCAEW	BCAA	8
F15	DISK,TURBINE,2ND STA	23BNH	BCAEX	BCAA	8
F15	BLADE,TURBINE RT,2ND STA	23BNJ	BCAEY	BCAA	A
F15	PLATE,RETAIN,TB BL,1ST STA	23BNK	BCAEZ	BCAA	8
F15	DISK & HUB ASSY,TB,2ND STA	23BNL	BCAFA	BCAA	8
F15	HUB ASSY,TURBINE,N2	23BNM	BCAFB	BCAA	8
F15	RING,AIR SEAL,TB,2ND STA	23BNN	BCAFC	BCAA	1
F15	CASE & DUCT SET,TB,FRONT	23BNR	BCAFD	BCAA	1
F15	DUCT SEGMENT,TB,1ST STA	23RNS	BCAFE	BCAA	1
F15	SEAL,TB DUCT,1ST STA	23BNT	BCAFF	BCAA	1
F15	CASE,TURBINE,FRONT	23BNV	BCAFG	BCAA	1
F15	VANE,TB STATOR,2ND STA	23BNW	BCAFH	BCAA	A
F15	NUT,REAR COMP DRIVE SHAFT	23BPA	BCAFJ	BCAA	A
F15	ARM,REAR COMP STATOR,LINK	23BPB	BCAFK	BCAA	2
F15	ARM,REAR COMP STATOR SYNC	23BPC	BCAFL	BCAA	2
F15	CASE,DIFFUSER	23BPD	BCAFM	BCAA	1

PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

0000000001111111122222222233333333334444444444555555555566666666677777777778
12345678901234567890123456789012345678901234567890123456789012345678901234567890

F15 COMPRESSOR STATOR,EXIT	23BPE	BCAFN	BCAA	1
F15 RING,AIR SEAL,CMP 13TH STA	23BPF	BCAFP	BCAA	1
F15 VALVE ASSY,FINGER	23BPG	BCAFQ	BCAA	5
F15 CHAMBER,COMBUSTION	23BPH	BCAFR	BCAA	8
F15 PLUG,BORESCOPE,6TH STA CP	23BP2	BCAFS	BCAA	0
F15 PLUG,BORESCOPE,13TH STA CP	23BP3	BCAFT	BCAA	0
F15 PLUG,BORESCOPE,COMBUSTER	23BP4	BCAFU	BCAA	0
F15 PLUG,BORESCOPE,HIGH TURB	23BP5	BCAFV	BCAA	0
F15 PLUG,BORESCOPE,INTM CASE	23BP7	BCAFW	BCAA	0
F15 CONTROL,PUSH-PULLCRV	23QA3	BCAFX	BCAA	2
F15 CYL-ACT,LIN,RCVV	23QA6	BCAFY	BCAA	2
F15 REAR COMP VV LINKAGE	23QBM	BCAFZ	HCAA	2
F15 DUCT SEGMENT,FAN RR COMP	23QAH	BCAGA	BCAA	1
F15 STRAP,BLEED VALVE	23BKH	BCAGB	BCAA	1
F15 CYLINDER,ACTUATOR,COMP BLD	23QA7	BCAGC	BCAA	A
F15 SUPPORT,NO 4 BRG SEAL,FR	23RMH	BCAGD	BCAA	1
F15 ROTOR/STATOR ASSY,RR COMP	23BGO	BCAGF	BCAA	8
F15 FAN INLET		BCBA	BCAA	AAAAA
F15 PLATE,RETAIN,NO 1 BEARING	23AAC	BCBAA	BCBA	1
F15 BUSHING,NO 1 BEARING	23AAD	BCBAB	BCBA	1
F15 BEARING ASSY,NO 1	23AAE	BCBAC	BCBA	8
F15 SEAT,NO 1 BRG SEAL	23AAH	BCBAD	BCBA	1
F15 HOUSING ASSY,NO 1 BRG	23AAT	BCBAE	BCBA	1
F15 HOUSING,NO 1 BRG	23AAV	BCBAF	BCBA	1
F15 CASE ASSY,FAN INLET	23ABO	BCBAG	BCBA	1
F15 CASE,FAN INLET	23ABA	BCBAH	BCBA	1
F15 SHROUD,FR COMP STA INLET	23ABC	BCBAJ	BCBA	1
F15 RING,AIR SEAL,FR CP INLET	23ABF	BCBAK	BCBA	1
F15 SHROUD,FR COMP ST INLET	23ABJ	BCBAL	BCBA	1
F15 BEARING,COMP ST SHROUD	23ABL	BCBAM	BCBA	8
F15 BUSHING,COMP ST SHROUD IN	23ABM	BCBAN	BCBA	1
F15 FAN ROTOR & STATOR ASSY	23ACO	BCBAP	BCBA	8
F15 CASE & STATOR FAN,1ST STA	23ACA	BCBAQ	BCBA	1
F15 RING,AIR SEAL,CP 1ST STA	23ACB	BCBAR	BCBA	1
F15 VANE,COMP STATOR,1ST STA	23ACE	BCBAS	BCBA	A
F15 SHROUD,COMP ST,1ST STA	23ACF	BCBAT	BCBA	1
F15 FLANGE,AIR SEALING	23ACG	BCBAU	BCBA	1
F15 RING,AIR SEAL,CP 1ST STA	23ACN	BCBAV	BCBA	1
F15 CASE & STATOR,2ND STA FAN	23ACP	BCBAW	BCBA	1
F15 VANE,COMP STATOR,2ND STA	23ACQ	BCBAX	BCBA	A
F15 RING,AIR SEAL,CP 2ND STA	23ACR	BCBAY	BCBA	1
F15 RING,AIR SEAL,CP 2ND STA	23ACS	BCBAZ	BCBA	1
F15 SHROUD,COMP ST,2ND STA	23ACT	BCBBA	BCBA	1
F15 FLANGE,AIR SEAL CP 2ND STA	23ACU	BCBBB	BCBA	1
F15 PLUG,BORESCOPE,FAN	23AC1	BCBBC	BCBA	0
F15 COMP ROTOR,AXIAL,1ST STA	23ADA	BCBBD	BCBA	A
F15 DISK & HUB,COMP 1ST STA	23ADB	BCBBE	BCBA	8
F15 BLADE,COMP ROTOR,1ST STA	23ADC	BCBBF	BCBA	A
F15 SEAL,AIR,FR COMP,INLET	23ADD	BCBBG	BCBA	1
F15 SEAL,AIR,FR COMP,1ST STA	23ADE	BCBBH	BCBA	1

PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

```

0000000001111111112222222222333333333344444444445555555555666666666677777777778
12345678901234567890123456789012345678901234567890123456789012345678901234567890
F15 COMP ROTOR,AXIAL,2ND STA 23ADF 8C8RJ BCBA A
F15 DISK & HUB,COMP,2ND STA 23ADG BC8RK BCBA 8
F15 BLADE,COMP ROTOR,2ND STA 23ADH 8C88L BCBA A
F15 SEAL,AIR,COMP PR.2ND STA 23ADJ 8C88M BCBA 1
F15 COMP ROTOR,AXIAL,3RD STA 23ADK 8C88N BCBA A
F15 DISK,COMP,3RD STA 23ADL 8C8BP BCBA 8
F15 BLADE,COMP ROTOR,3RD STA 23ADM 8C8BQ BCBA A
F15 RETAINER,COMP BLADE LOCK 23ADS 8C8BR BCBA 8
F15 SEAL,AIR,COMP 2ND STA 23ADT 8C8BS BCBA 1
F15 CASE,FAN,3RD STA 23ADU 8C8BT BCBA 1
F15 SUPPORT,COMP INLET CONE 23QAB 8C8BU BCBA 1
F15 CONE,COMP INLET 23QAC 8C8BV BCBA 1
F15 SUPPORT,COMP INLET CONE 23QAD 8C8BW BCBA 1
F15 COVER,COMP DISK & HUB 23QAE 8C8BX BCBA 0
F15 COUPLING,TB SHAFT LOCK 23QAF 8C8BY BCBA A
F15 VANE,FAN EXIT 23QAG 8C8BZ BCBA A
F15 GUIDE,ENG INLET SEAL 23QBH 8C8CA BCBA 1
F15 BRACKETRY 23QBJ 8C8CB BCBA 1
F15 CLAMPS AND RIVETS 23QBK 8C8CC BCBA 0
F15 FAN DUCT ASSY,FR/REAR 23QCO 8C8CD BCBA 1
F15 DUCT,FAN,REAR 23QCA 8C8CE BCBA 2
F15 DUCT,FAN,OUTHER FRONT 23QCB 8C8CF BCBA 2
F15 CONTROLLED AIR INDUCTION BCC BCBA 111111111
F15 VARIABLE RAMP POSTIONING BCD F 000050000
F15 VAR INLET RAMP SYSTEM 11PAO BCD 2
F15 CKB,AIR INL CONT,99CBEO21 42CCA LBCDB BCD A
F15 CKB,AIR INL CONT,99CBFC20 42CDA RBCDC BCD A
F15 INL RAMP CONT RLY,99KLO33 42CHG LBCDD BCD A
F15 INL RAMP CONT RLY,99KLO32 42CHG RBCDE BCD A
F15 LEFT MLG WOW RLY 12 42CH5 BCD F BCD A
F15 ENGINE RUN RLY,11K-P021 42CHM LBCDG BCD 5
F15 ENGINE RUN RLY,11K-R020 42CHS RBCDH BCD 5
F15 VARIABLE RAMP ACTUATION BCE BCD 888888888
F15 SERVOSYL,HYD,1ST RAMP 11PAE BCEA BCE A
F15 RAMP ASSY,1ST,VAR AIR INTK11PAA BCEB BCE 3
F15 RAMP,2ND,VAR AIR INTAKE 11PAB BCEC BCE 3
F15 RAMP ASSY,3RD,VAR AIR INTK11PAC BCED BCE 3
F15 RAMP ASSY,DIF,VAR AIR INTK11PAF BCEE BCE 3
F15 SERVOSYL,HYD,DIFF RAMP 11PAH BCEF BCE A
F15 LINKAGE,RAMPS 11PAD BCEH BCE 8
F15 SEAL,RAMP 11PAP BCEJ BCE C
F15 BEARING,PIVOT 11PAQ BCEK BCE 8
F15 FITTING,PIVOT 11PAR BCEL BCE 1
F15 COVER,VAR INLET ACTUATOR 11PHA BCEM BCE 0
F15 DOOR,VAR INL ACT ATTACH LH11PHB BCEN BCE 0
F15 DOOR,VAR INL ACT ATTACH RH11PHC BCEP BCE 0
F15 DOOR,VAR INL ACT ATTACH LH11PHD BCEQ BCE 0
F15 DOOR,VAR INL ACT ATTACH RH11PHE BCER BCE 0
F15 DOOR,VAR INL PIV,LH OUTBD 11PHF BCES BCE 0
F15 DOOR,VAR INL PIV,RH 11PHG SCET BCE 0

```

PGG095.JIR1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

```

0000000001111111112222222223333333333444444444555555555566666666677777777778
12345678901234567890123456789012345678901234567890123456789012345678901234567890
F15 DOOR,VAR INL PIV,LH INBD 11PHH BCEU BCE 0
F15 DOOR,VAR INL PIV,RH 11PHJ BCEV BCE 0
F15 COVER,VAR INL SIDE LD SCI 11PHK BCEW BCE 0
F15 DOOR,VAR INL RAMP ATTACH 11PHL BCEX BCE 0
F15 DOOR,2ND RAMP HINGE PIN 11PHM BCEY BCE 0
F15 DOOR,AIR INL,PT PR CONNECT 11PHN BCEZ BCE 0
F15 BYPASS DOOR ACTUATION BCH BCD 111111111
F15 SERVOSYL,HYD,BYPASS DOOR 11PAJ BCHA BCH A
F15 DOOR,INLET DUCT 11PAG BCH 3
F15 LOUVER ASSY,BYPASS BLD AIR 11PAK BCH 1
F15 SEAL,LIP 11PAN BCH 0
F15 COMP INLET VANE POSITION BCK BCC 055555550
F15 VANE,FR COMP,VAR INLET 23AEB BCKA BCK A
F15 COMPL INL VAR VANE LINKAGE 23AAN BCKB BCK A
F15 CYL-ACT,LIN VAR VA CMP INL 23AAQ BCKC BCK A
F15 RING,SYNG,FR CMP STA,INL 23AFQ BCKD BCK 2
F15 CONT & SYL,CIVV 23AAP BCKE BCK A
F15 ENGINE AIRFLOW CONTROL BCNA BCK AAAAAAAAA
F15 CONTROL,UNIFIED,TB ENGINE 23HAA BCNAA BCNA 8
F15 CONTROL,ENGINE ELECTRONIC 23HAB BCNAB BCNA 8
F15 STATOR,GENERATOR 23KAH BCNAC PCNA A
F15 ROTOR,GENERATOR 23KAJ BCNAD BCNA A
F15 BOX,INTERCONNECT 23KAR BCNAE BCNA 1
F15 SENSOR,ELECTRIC,N-1,DUAL 23AAR BCNAF BCNA A
F15 THERMOCOUPLE,IMMER,TT2 23AAM BCNAG BCNA A
F15 CONTROLLER,ELEC DCU-181/A 11PDO BCNAH BCNA 8
F15 SENSOR,H1 PRESS,A-15,A-16 11PDA BCNAJ BCNA 1
F15 SENSOR,LO PRESS,A-16 11PDB BCNAK BCNA 1
F15 CKT CRD ASSY,B1T 11PDC BCNAL BCNA 1
F15 CKT CRD ASSY,A-12 11PDD BCNAM BCNA 1
F15 CKT CRD ASSY,A-11 11PDE BCNAN BCNA 1
F15 CKT CRD ASSY,A-10 11PDF BCNAP BCNA 1
F15 CKT CRD ASSY,A- 9 11PDG BCNAQ BCNA 1
F15 CKT CRD ASSY,A- 8 11PDH BCNAR BCNA 1
F15 CKT CRD ASSY,A- 6 11PDK BCNAS BCNA 1
F15 CKT CRD ASSY,A- 5 11PDL BCNAT BCNA 1
F15 CKT CRD ASSY,A- 4 11PDM BCNAU BCNA 1
F15 CKT CRD ASSY,A- 3 11PDN BCNAV BCNA 1
F15 CKT CRD ASSY,A- 2 11PDP BCNAW BCNA 1
F15 CKT CRD ASSY,A- 1 11PDQ BCNAX BCNA 1
F15 CKT CRD ASSY,A-18 11PDR BCNAY BCNA 1
F15 CHASSIS ASSY,ACCESS PROV 11PDS BCNAZ BCNA 0
F15 ENGINE CONTROL PANEL 231BF BCNBA BCNA 1
F15 ENGINE ANTI-ICE BCR BCBA A AAAAAAAAA
F15 VALVE,ANTI-ICING 23QAB BCR BCRA A
F15 BOX,INTERCONNECT 23KAP BCRB BCR 1
F15 SW,ENG ANTI-ICE HEAT 9923A BCRC BCR A
F15 AIR INDUCTION CONTROL BCU BCD AAAAAAAAA
F15 AIR INDUCTION CONTROL BCU FHHA FAAAAAAAA
F15 CONTROLLER,ELECT,DCU-181/A 11PFO BCU BC 8

```


PGG095.JIR1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

000000000111111111222222222333333333344444444445555555555666666666677777777778
12345678901234567890123456789012345678901234567890123456789012345678901234567890

F15	SENSOR,H1 PRES,%A15,A17<	11PFA	BCUB	BCU	1
F15	SENSOR,LO PRES,%A16<	11PDB	BCUC	BCU	1
F15	CKT CRD ASSY,BIT	11PDC	BCUD	BCU	1
F15	CKT CRD ASSY,A12	11PDD	BCUE	BCU	1
F15	CKT CRD ASSY,A11	11PDE	BCUF	BCU	1
F15	CKT CRD ASSY,A10	11PDF	BCUG	BCU	1
F15	CKT CRD ASSY,A-9	11PDG	BCUH	BCU	1
F15	CKT CRD ASSY,A-8	11PDH	BCUJ	BCU	1
F15	CKT CRD ASSY,A-6	11PDK	BCUK	BCU	1
F15	CKT CRD ASSY,A-5	11PDL	BCUL	BCU	1
F15	CKT CRD ASSY,A-4	11PDM	BCUM	BCU	1
F15	CKT CRD ASSY,A-3	11PDN	BCUN	BCU	1
F15	CKT CRD ASSY,A-2	11PDP	BCUP	BCU	1
F15	CKT CRD ASSY,A-1	11PDQ	BCUQ	BCU	1
F15	CKT CRD ASSY,A18	11PDR	BCUR	BCU	1
F15	CHASSIS ASSY,ACCESS PROV	11PDS	BCUS	BCU	0
F15	PITOT TUBE,AIR INLET	11PAL	BCUT	BCU	1
F15	ELPOW,TUBE	11PAM	BCUV	BCU	1
F15	HEAT EX DOOR SEL VALVE RLY	42CHG	BCUZA	BCU	A
F15	CKB,ES HT EX,107CBC071	42CCG	BCUZB	BCU	A
F15	MACH CONT RLY,99KLO23	42CHG	LBCUZC	BCU	A
F15	MACH CONT RLY,99KLO22	42CHG	RBCUZD	BCU	A
F15	PROPE,STATIC PRESS	23BPS	BCUZE	BCU	1
F15	ACCESSORY DRIVE		BDA	BCAA	AAAAA
F15	GEARBOX ASSY,MAIN	23GA0	BDA	BDA	8
F15	HOUSING ASSY,GEARBOX	23GAA	BDA	BDA	1
F15	SLEEVE,SEALING,GEARBOX	23GAB	BDA	BDA	1
F15	COVER,GEARBOX,UPPER	23GAC	BDA	BDA	1
F15	HOUSING,GEARBOX,FRONT	23GAD	BDA	BDA	1
F15	GEARSHAFT,BEVEL,SP,GB,DR	23GAE	BDA	BDA	A
F15	GEARSHAFT,BEVEL,GEARBOX	23GAF	BDA	BDA	A
F15	SEAT,GB BRG SEAL,FUEL PUMP	23GAJ	BDA	BDA	1
F15	GEAR,SPUR,GB,GEN	23GAL	BDA	BDA	8
F15	BAFFLE,GEARBOX	23GAP	BDA	BDA	1
F15	SHAFT,GB DEAFRATOR IMPEL	23GAQ	BDA	BDA	2
F15	GEAR,SPUR,GB,GEN	23GAU	BDA	BDA	8
F15	IMPELLER,GB DEAFRATOR	23GAV	BDA	BDA	1
F15	SHAFT,GB IDLER GEAR	23GAW	BDA	BDA	A
F15	GEAR,SPUR,GB,GEN	23GAX	BDA	BDA	8
F15	GEARSHAFT,SPUR,GB,OIL PMP	23GAY	BDA	BDA	A
F15	HOUSING,GB,BRG	23GAZ	BDA	BDA	1
F15	BAFFLE,GEARBOX	23GA1	BDA	BDA	1
F15	COVER,PACKING,GB,PTO	23GA2	BDA	BDA	1
F15	COVER,GB SUMP	23GA4	BDA	BDA	1
F15	BEARING,BALL,TOWERSHAFT	23GA5	BDA	BDA	8
F15	BRG,BALL,AN,FUEL PUMP	23GA6	BDA	BDA	8
F15	BRG,ROLLER,FLANGED,PTO	23GA7	BDA	BDA	8
F15	BRG,ROLLER,FL,TOWERSHAFT	23GA8	BDA	BDA	8
F15	BRG,BALL,FL,DEAFRATOR	23GBA	BDA	BDA	8
F15	BRG,ROLLER,FLANGED	23GBB	BDA	BDA	8

PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

0000000011111111122222222233333333334444444445555555555666666666677777777778
 12345678901234567890123456789012345678901234567890123456789012345678901234567890

F15	BRG,ROLLER	23GBC	BDBC	BDA	8
F15	BRG,BALL,OIL PUMP	23GBD	BDBD	BDA	8
F15	BRG,ROLLER,OIL PUMP	23GBE	BDBE	BDA	8
F15	GEAR,SPUR,IDLER,SCAV PMP	23GBF	BDBF	BDA	8
F15	GEARSHAFT,SPUR,SCAV PMP DR	23GBQ	BDBG	BDA	8
F15	GEAR,SPUR,DR,SCAV PUMP	23GBR	BDBH	BDA	8
F15	GEAR,SPUR,DR,MAIN OIL PMP	23GCS	BDBJ	BDA	8
F15	GEAR,SPUR,ID,MAIN OIL PMP	23GCT	BDBK	BDA	8
F15	GEARSHAFT,SPUR DR,MAIN PMP	23GCV	BDBL	BDA	8
F15	GEAR,SP DR,MAIN OIL PMP	1423GCW	BDBM	BDA	8
F15	GEAR,SP ID,MAIN OIL PMP	1423GCX	BDBN	BDA	8
F15	GEARSHAFT,SP DR,OIL PMP	1423GCY	BDBP	BDA	8
F15	GEAR,SP,ID,MAIN OIL PMP	1123GCZ	BDBQ	BDA	8
F15	GEAR,SP DR,MAIN OIL PMP	1523GCI	BDBR	BDA	8
F15	GEAR,SP ID,MAIN OIL PMP	1523GCI	BDBS	BDA	8
F15	GEARSHAFT,SP DR MAIN PMP	23GCU	BDBT	BDA	8
F15	SHAFT,GEARBOX DRIVE	23QAW	BDBU	BDA	A
F15	COUPLING,GEARBOX DR SHAFT	23RCB	BDBV	BDA	A
F15	HOUSING,GEARBOX DR BEARING	23BCC	BDBW	BDA	1
F15	BRG,BALL,ANNULAR,TURSHAFT	23BCD	BDBX	BDA	8
F15	SLEEVE,GEARBOX DR GEARSHFT	23BCE	BDBY	BDA	1
F15	GEARSHAFT,BEVEL,GR BOX DR	23BCB	BDBZ	BDA	A
F15	BRG,ROLLER,CYL,TOWERSHAFT	23BCL	BDBZA	BDA	8
F15	FAN DRIVE		BEA	BCAA	AAAAA
F15	ROTOR/STA ASSY,TB FR CP DR	23CAO	BEAA	BEA	1
F15	CASE,TURBINE,REAR	23CAA	BEAB	BEA	1
F15	SEAL,TURBINE DUCT,2ND STA	23CAB	BEAC	BEA	1
F15	DUCT SEGMENT,TB,2ND STA	23CAC	BEAD	BEA	1
F15	RING SEGMENT,AIR SEAL,3RD	23CAD	BEAE	BEA	1
F15	RING SEGMENT,AIR SEAL,4TH	23CAE	BEAF	BEA	1
F15	VANE,TB STATOR,3RD STA	23CAF	BEAG	BEA	A
F15	RING,AIR SEAL,TB 3RD STA	23CAG	BEAH	BEA	1
F15	VANE,TB STATOR,4TH STA	23CAH	BEAJ	BEA	A
F15	RING,AIR SEAL,TB 4TH STA	23CAJ	BEAK	BEA	1
F15	CASE & DUCT SET,TB,REAR	23CAK	BEAL	BEA	1
F15	SEAL,TB DUCT,2ND STA	23CAL	BEAM	BEA	1
F15	DUCT SEGMENT,TB,2ND STA	23CAM	BEAN	BEA	1
F15	CASE,TURBINE,REAR	23CAN	BEAP	BEA	1
F15	TURBINE ROT ASSY,3RD STA	23CBA	BEAQ	BEA	8
F15	DISK,TURBINE,3RD STA	23CBH	BEAR	BEA	A
F15	BLADE,TB ROTOR,3RD STA	23CRC	BEAS	BEA	A
F15	SEAL,AIR,TURBINE,3RD STA	23CBD	BEAT	BEA	1
F15	RING,AIR SEAL,TB,3RD STA	23CRE	BEAU	BEA	1
F15	SUPPORT,TB SEAL RG,3RD STA	23CRF	BEAV	BEA	1
F15	DUCT,TURVINE,4TH STA	23CBG	BEAVA	BEA	1
F15	SEAL,AIR,TB,4TH STA	23CRJ	BEAW	BEA	1
F15	SEAL,AIR,TB,4TH STA,INNER	23CBL	BEAX	BEA	1
F15	SHAFT,FR COMP DRIVE,TB	23CBM	BEAY	BEA	A
F15	SHIELD,HEAT FR CP DR SHAFT	23CBN	BEAZ	BEA	2
F15	DISK,4TH STA,TURBINE	23CRP	BEBA	BEA	A

PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

0000000001111111112222222223333333334444444445555555556666666667777777778
1234567890123456789012345678901234567890123456789012345678901234567890

F15	BLADE, TB ROTOR, 4TH STA	23CRQ	BERB	BEA	A
F15	STIFFENER, TURBINE SHAFT	23CBR	BEBC	BEA	1
F15	STIFFENER, TURBINE	23CHS	BEBD	BEA	1
F15	PLUG, NO 5 BEARING	23CBT	BEBE	BEA	1
F15	HUB ASSY, TB, RR FAN DR MOD	23CPU	BERF	BEA	A
F15	BEARING ASSY, ROLLER, NO 5	23CCD	BEHG	BEA	8
F15	SUPPORT, NO 5 BRG, OUTER	23CCF	BERH	BEA	1
F15	SEAT, NO 5 BRG SEAL	23CCH	BERJ	BEA	1
F15	CASE, TURBINE EXHAUST	23CCR	BERK	BEA	1
F15	RING, AIR SEAL, TB 4TH STA	23CCT	BERL	BEA	1
F15	SUPPORT, NO 5 BRG, INNER	23CCX	BERM	BEA	1
F15	SEAT, BALL SOCKET, NO 5 BRG	23CCY	BERN	BEA	1
F15	BALL END, ROD NO 5 BRG SUP	23CCZ	BERP	BFA	1
F15	PLUG, BORESCOPE FAN DR TB	23CP6	BERQ	BEA	0
F15	SUPPORT, NO 5 BEARING	23CCV	BERR	BEA	1
F15	CONTROLLED MAIN FUEL		BFA	BBA	AAAAAAAAA
F15	NOZZLE, FUEL 3/10 OF 16<	23BPJ	BFAA	BFA	1
F15	NOZZLE, FUEL 3/6 OF 16<	23BPJ	BFAB	BFA	1
F15	MANIFOLD, FUEL SUPPLY, RH	23BPK	BFA C	BFA	5
F15	MANIFOLD, FUEL SUPPLY, LH	23BPL	BFA D	BFA	5
F15	TEE, FUEL SUPPLY MANIFOLD	23KPM	BFAE	BFA	5
F15	VALVE FUEL PRESS/DUMP	23HAN	BFA F	BFA	8
F15	ENGINE UNIFIED CONTROL		BFB	BFA	AAAAAAAAA
F15	ENGINE UNIFIED CONTROL		BFR	RJB	FAAAAAAAAAA
F15	CONTROL, UNIFIED, TB ENGINE	23HAA	BFB A	BFB	A
F15	START FUEL DERICHMENT		BFD	BFA	OAAAAAAAAA
F15	VALVE, SOL, FUEL DERICH	23HAQ	BFDA	BFD	A
F15	SW, ENG MASTER	23IBF	BFD B	BFD	A
F15	SW, FUEL START	23IBK	BFD C	BFD	A
F15	RLY, MASTER, ENG	42CHA	LBFD D	BFD	A
F15	RLY, MASTER, ENG	42CHG	RBFD E	BFD	A
F15	TIMER, ENG FUEL BYPASS	42CH5	LBFD F	BFD	A
F15	TIMER, ENG FUEL BYPASS	42CH6	RBFD G	BFD	A
F15	BOX, INTERCONNECT	23KAR	BFD H	BFD	1
F15	AUGMENTOR FUEL PRESS		BFE	BCK	FAAAAAAAAAA
F15	AUGMENTOR FUEL PRESS		BFE	HJB	AAAAAAAAA
F15	PUMP, FUEL, AUG	23HAE	BFE A	BFE	A
F15	CONTROLLER, PUMP, FUEL, AUG	23HAF	BFE B	RFE	A
F15	PROBE, AUGMENTOR FUEL PRESS	23HAM	BFE C	BFE	A
F15	AUTO MODE		BFL	BFB	010000000
F15	AUTO MODE		BFL	RFB	0000A0000
F15	CONTROL, ENGINE ELECTRONIC	23HAR	BFL A	BFL	8
F15	PANEL, ENG CONTROL	23IBF	BFL B	BFL	1
F15	SENSING		BFM	BFL	AAAAAAAAA
F15	STATOR, GENERATOR	23KAH	BFM A	RFM	A
F15	ROTOR, GENERATOR	23KAJ	RFM B	RFM	A
F15	RLY, LDG GEAR CONTROL	42CH5	BFM C	BFM	A
F15	SENSOR, FT1T	23HAK	BFM D	BFM	A
F15	SENSOR, TT2 TOTAL TEMP<	23AAM	BFM E	BFM	A
F15	SENSOR, HYDROMECH, N-2	23HAG	BFM F	BFM	A

PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

0000000001111111112222222223333333334444444445555555556666666667777777778
 12345678901234567890123456789012345678901234567890123456789012345678901234567890

F15	SENSOR, TT25 %FAN EXIT<	23HAH	BFMG	BFM	A
F15	SENSOR, ELECTRICAL, N-1	23AAS	BFMH	BFM	A
F15	TRANSDUCER, MOTION PICKUP	23BFY	BFMJ	BFM	A
F15	MANUAL MODE		BFN	BFN	AAAAAAAAA
F15	GRIP SET, LEVER, THROTTLE	12ABO	BFNA	BFN	1
F15	GRIP, LEVER, THROTTLE, LH	12ABA	LBFN8	BFN	1
F15	GRIP, LEVER, THROTTLE, RH	12AB8	BFNC	BFN	1
F15	THROTTLE ASSY, MANUEL CONTR	231BA	BFND	BFN	A
F15	LEVER ASSY, MANUAL CONTROL	231BB	BFNE	BFN	A
F15	THROTTLE BOX 2 TO SH ASSY	231BC	BFNF	BFN	8
F15	CONTROL ASSY, P-P, FLEX, RH	231BD	BFNG	BFN	5
F15	CONTROL ASSY, P-P, FLEX, L	231BE	BFNH	BFN	5
F15	ENGINE OIL DISTRIBUTION		BGAA	BGAA	00AAAA500
F15	SEAL, NO 1 BRG	23AAU	BGAAA	BGAA	1
F15	SEAL ASSY, NO 2 BRG, FRONT	23BAE	BGAAB	BGAA	1
F15	SEAL, FACE, NO 2 BRG, FRONT	23BAF	BGAAC	BGAA	1
F15	SEAL RING HOLDER, NO 2 BRG	23BAG	BGAAD	BGAA	1
F15	SEAL ASSY, NO 2-3 BRG	23BCM	BGAEE	BGAA	1
F15	SEAL, FACE, NO 2 BRG, REAR	23BCP	BGAFF	BGAA	1
F15	SEAL, FACE, NO 3 BRG, FRONT	23BCQ	BGAAG	BGAA	1
F15	SEAL ASSY, NO 3 BRG, REAR	23BFF	BGAAM	BGAA	1
F15	SEAL, FACE, NO 3 BRG, REAR	23BFG	BGAJJ	BGAA	1
F15	SEAL RING HOLDER, NO 3 BRG	23BFH	BGAJK	BGAA	1
F15	SEAL ASSY, NO 4 BRG, FRONT	23BMF	BGAAL	BGAA	1
F15	SEAL, FACE, NO 4 BRG, FRONT	23BMG	BGAAM	BGAA	1
F15	SEAL ASSY, NO 4 BRG, REAR	23BMJ	BGAAN	BGAA	1
F15	SEAL, FACE, NO 4 BRG, REAR	23BMK	BGAAP	BGAA	1
F15	SEAL ASSY, NO 5 BRG	23CCU	BGAAQ	BGAA	1
F15	SEAL, FACE, NO 5 BRG	23CCW	BGAAR	BGAA	1
F15	RETAINER, OIL SEAL, GB, FUEL	23GAG	BGAAS	BGAA	1
F15	SEAL ASSY, FACE, FUEL PUMP	23GAH	BGAAT	BGAA	1
F15	SEAL ASSY, FACE, PTO	23GAM	BGAUU	BGAA	1
F15	RETAINER, OIL SEAL, GB, PTO	23GAN	BGAUV	BGAA	1
F15	SEAL ASSY, FACE, GEN	23GAR	BGAUW	BGAA	1
F15	RETAINER, OIL SEAL, GB, GEN	23GAT	BGAAX	BGAA	1
F15	TUBE, TRANSFER, GB BRG	23GBF	BGAAY	BGAA	1
F15	MFOLD, PRES, NO4 BRG INLET	23BPQ	BGABQ	BGAA	1
F15	MFOLD, PRES, NO4 BRG INLET	23BPR	BGABR	BGAA	1
F15	TUBE, SCAV, NO 4 BRG, INL RH	23BPN	BGABS	BGAA	1
F15	TUBE, SCAV, NO 4 BRG, INL LH	23RPP	BGABT	BGAA	1
F15	TUBE, TRANSFER	23QAL	BGARU	BGAA	1
F15	PLUMBING	23QBG	BGABV	BGAA	1
F15	OIL SUPPLY		BGB	BGAA	AAAAAAAAA
F15	TANK ASSY, LUBRICATING OIL	23JAA	HGBA	BGB	8
F15	OIL PRESSURE		BGC	BGAA	AAAAAAAAA
F15	PUMP ASSY, MAIN OIL	23GCO	BGCA	BGC	8
F15	HSNG ASSY, MAIN OIL PUMP	23GCA	BGCB	BGC	1
F15	COVER, MAIN OIL PUMP HSNG	23GCB	BGCC	BGC	1
F15	SPACER, MAIN OIL PUMP HSNG	23GCF	BGCD	BGC	1
F15	HSNG, MAIN OIL PUMP, FR BST	23GCH	BGCE	BGC	1

PGG095.JIR1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

```

0000000001111111112222222222333333333344444444445555555555666666666677777777778
12345678901234567890123456789012345678901234567890123456789012345678901234567890
F15 HSNQ,MAIN OIL PUMP,RR BST 23GCCJ BGCF BGC 1
F15 VALVE,BYPASS,MAIN OIL PUMP23GCC4 BGCG BGC 0
F15 VALVE,BYPASS,MAIN BST PUMP23GCC3 BGCH BGC 0
F15 FILTER ASSY,OIL 23GFC BGCI BGC 1
F15 HSNQ,MAIN OIL FILTER 23GCEA BGCK BGC 0
F15 FILTER ELEMENT,OIL 23GCEB BGCL BGC 0
F15 VALVE,OIL FILTER SHUTOFF 23GCE BGCM BGC 1
F15 VALVE,OIL FILTER SHUTOFF 23GCE BGCM BGC 1
F15 HSNQ,MAIN OIL FILT ELEMENT23GCE BGCP BGC 1
F15 INDICATOR,OIL FILTER PRESS23GCE BGCP BGC 0
F15 SCAVENGE HGD BGAA 000AAAC00
F15 PUMP ASSY,MAIN OIL 23GCC BGDA BGD A
F15 HSNQ ASSY,MAIN,NO 5 SCAV 23GCC BGDB BGD 1
F15 HSNQ ASSY,MAIN,NO 1 SCAV 23GCC BGDC BGD 1
F15 HSNQ ASSY,MAIN,NO 4 SCAV 23GCC BGDD BGD 1
F15 HSNQ ASSY,MAIN,NO 4 SCAV 23GCC BGDE BGD 1
F15 HSNQ ASSY,MAIN OIL PUMP 23GCC BGDF BGD 1
F15 PUMP ASSY,NO 2-3 BRG SCAV23GCC BGDG BGD 4
F15 HSNQ ASSY,NO 2-3 BRG SCAV23GCC BGDH BGD 1
F15 HSNQ ASSY,NO 2-3 BRG SCAV23GCC BGDJ BGD 1
F15 HSNQ ASSY,MAIN OIL PUMP 23GCC BGDK BGD 1
F15 CHIP DETECTOR,11 SCAVENGE23GCC BGD L BGD 0
F15 CHIP DETECTOR,14 SCAVENGE23GCC BGD M BGD 0
F15 CHIP DETECTOR,15 SCAVENGE23GCC BGD N BGD 0
F15 CHIP DETECTOR,12&3 SCAVEN23GCC BGD P BGD 0
F15 TUBE,SCAVENGE,14 BRG IN RH23BPP BGDQA BGD 1
F15 TUBE,SCAVENGE,14 BRG IN LH23BPP BGDQB BGD 1
F15 SCOOP ASSY,NO 2 BRG 23BRE BGDQC BGD 1
F15 SCOOP,NO 2 BRG REAR 23BRE BGDQD BGD 1
F15 SCOOP,NO 3 BRG REAR 23BRE BGDQE BGD 1
F15 TUBE,SCAVENGE,GEARBOX 23GAS BGDQF BGD 1
F15 VENTING BGE BGAA 000111000
F15 HSNQ,BREATHING PRESS VALVE 23JAK BGEA BGE 1
F15 VALVE ASSY,BREATHING PRESS 23JAB BGEB BGE A
F15 COOLING BGF BGAA 004888000
F15 COOLER,OIL 23JAC BGFA BGF 5
F15 COOLER,OIL,AIR COOLANT 23JAJ BGFB BGF 5
F15 VALVE,OIL PRESSURE BYPASS 23GEC BGFC BGF 5
F15 IGNITION GENERATION BHA BHR AAAAAAAAAA
F15 IGNITION GENERATION BHA BHC AAAAAAAAAA
F15 STATOR,GENERATOR 23KAH BHAA BHA A
F15 ROTOR,GENERATOR 23KAJ BHAB BHA A
F15 BOX,INTERCONNECTING 23KAR BHAC BHA 1
F15 CONTROL,UNIFIED,TB ENGINE 23HAA BHAD BHA 8
F15 MAIN IGNITION BHB BRA 011111110
F15 MAIN IGNITION %CORE ENG< BHB BRA T 00AAAAAA00
F15 IGNITER,SPARK,MAIN,ENG 23KAB BHBA BHB A
F15 EXCITER,IGNITION,DUAL 23KAD BHB BHB 1
F15 EXCITER,IGNITION,SINGLE 23KAE BHB BHB 1
F15 CABLE 23KAG BHBD BHB A

```

PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

```

0000000001111111112222222223333333334444444445555555556666666667777777778
1234567890123456789012345678901234567890123456789012345678901234567890
F15 ENGINE START SWITCH 231BK BHB BHB 7
F15 AUGMENTOR IGNITION BHC BJA AAAAAAAAAA
F15 IGNITER, SPARK, AUG 23KAC BHC BHC A
F15 EXCITER, IGNITION, DUAL 23KAD BHC BHC A
F15 CABLE 23KAG BHC BHC A
F15 FLAMEHOLDER, AUG IGNITION 23QAN BHC BHC 1
F15 RODS, AUG IGNITER, FL-HOLDER 23QAP BHC BHC 1
F15 THRUST AUGMENTATION BJA BHA 010000000
F15 DUCT, AUG COMB CHAMBER 23FAA BJA BJA 8
F15 LINER, AUG COMB CHAMBER 23FAB BJA BJA 1
F15 CONE, TURBINE EXHAUST 23QRB BJA BJA 1
F15 AUGMENTOR CONTROLLED FUEL BJB BJA AAAAAAAAAA
F15 MANIFOLD, SPRAY, AUG 11 23QAQ BJB BJB A
F15 MANIFOLD, SPRAY, AUG 12 23QAR BJB BJB A
F15 MANIFOLD, SPRAY, AUG 13 23QAS BJB BJB A
F15 MANIFOLD, SPRAY, AUG 14 23QAT BJB BJB A
F15 MANIFOLD, SPRAY, AUG 15 23QAU BJB BJB A
F15 EXHAUST NOZZLE POSITIONING BJC BJA AAAAAAAAAA
F15 REG, AIR PRES, ENC 23PAC BJC BJC 8
F15 NOZZLE ASSY, AUGMENTOR 23FAQ BJC BJC 8
F15 SEAL, AUG NOZZLE SUPPORT 23FAV BJC BJC 1
F15 CONNECT LINK, RIGID, BAL SEG 23FAW BJC BJC 8
F15 CONNECT LINK, RIGID, SYNC 23FAX BJC BJC 8
F15 LEVER, AUG NOZZLE 23FAZ BJC BJC A
F15 CONNECT LINK, RIGID, FLAPS 23FA1 BJC BJC A
F15 SUPPORT, AUG NOZZLE 23FA5 BJC BJC 1
F15 RING, SYNC, AUG NOZZLE 23FA6 BJC BJC 8
F15 NOZZLE SEGMENT, BALANCE, AUG 23FBB BJC BJC 8
F15 NOZZLE SEGMENT, EXT, AUG 23FBD BJC BJC 8
F15 BRIDGE CLAMP 23FEG BJC BJC 1
F15 CONV NOZZLE ACTIVATE/CONTR BJD BJC AAAAAAAAAA
F15 ACTUATOR, PRIM CONV NOZZLE 23FAN BJD BJD 8
F15 ACTUATOR, SECM CONV NOZZLE 23FAP BJD BJD 8
F15 SUPPORT CONV FLAP, LH 23FAR BJD BJD A
F15 SUPPORT CONV FLAP, RH 23FAS BJD BJD A
F15 LINER, CONV NOZZLE, FLAP 23FA2 BJD BJD 1
F15 LINER, CONV NOZZLE, SEAL 23FA3 BJD BJD 1
F15 SEAL, AUG CONV NOZZLE SEG 23FA7 BJD BJD 1
F15 SEAL, AUG BALANCE SEG 23FA8 BJD BJD 1
F15 NOZZLE SEGMENT, CONV 23FBE BJD BJD 1
F15 SHAFT, FLEX, SEC ACT, CONV 23FCA BJD BJD A
F15 CONTROL, EXHAUST NOZZLE, CON 23PAB BJD BJD 8
F15 SHAFT, FLEX, PR ACT, CONV, RH 23PAK BJD BJD A
F15 SHAFT, FLEX, PR ACT, CONV, LH 23PAL BJD BJD A
F15 CONTROL-PUSH PULL AJ REQ 23PAN BJD BJD 8
F15 DIV NOZZLE ACTIVATE CONTR BJE BJC AAAAAAAAAA
F15 SEAL, DIV NOZZLE SEG 23FBA BJE BJE 1
F15 NOZZLE SEGMENT, DIV, AUG 23FBC BJE BJE 1
F15 ACTUATOR, PL GEAR, PRIM DIV 23FBZ BJE BJE 8
F15 ACTUATOR, PL GEAR, SEC DIV 23FBI BJE BJE 8

```


PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

0000000001111111112222222222333333333344444444445555555555666666666677777777778
12345678901234567890123456789012345678901234567890123456789012345678901234567890

F15	SHAFT,FLEX ACT,DIV NOZZLE	23FB2	BJEAE	BJEA	8
F15	CONNECT LINK,RIGID,DIV	23FB3	BJEAF	BJEA	A
F15	SHAFT,FLEX,GEARBOX,DIV	23FCH	BJEAG	BJEA	8
F15	CONTROL,EXHAUST NOZZLE,DIV	23FCC	BJEAH	BJEA	8
F15	LEFT ENGINE AMAD		LBKAA	LUAF	AAAAAAAAA
F15	LEFT ENGINE AMAD		LBKAA	UHAF	AAAAAAAAA
F15	LEFT ENGINE AMAD		LBKAA	LUHBG	AAAAAAAAA
F15	RIGHT ENGINE AMAD		RBKAA	RUAF	AAAAAAAAA
F15	RIGHT ENTINE AMAD		RBKAA	RUH3G	AAAAAAAAA
F15	RIGHT ENTINE AMAD		RBKAA	UHCG	AAAAAAAAA
F15	GEARBOX,ACCESS DRIVE,LH	24BAC	LBKAAA	LBKAA	1
F15	GEARBOX,ACCESS DRIVE,RH	24BBO	RBKAAA	RBKAA	1
F15	SW ASSY,MAN DECOUPLE INTLK	24BAB	LBKAAB	LBKAA	0
F15	OIL PUMP & SW ASSY	24BBA	RBKAAB	RBKAA	A
F15	OIL PUMP AND SW ASSY	24BAC	LBKAAC	LBKAA	A
F15	ELEMENT,OIL FILTER	24BBB	RBKAAC	RBKAA	0
F15	ELEMENT,OIL FILTER	24BAD	LBKAAD	LBKAA	0
F15	VALVE,OIL PRESS REG	24BPC	RBKAAD	RBKAA	8
F15	VALVE,OIL PRESS REG	24BAE	LBKAAE	LBKAA	8
F15	VALVE,OIL FILTER BYPASS	24BBD	RBKAAE	RBKAA	2
F15	VALVE,OIL FILTER BYPASS	24PAF	LBKAAF	LBKAA	2
F15	VALVE,RELIEF PRESS,2-WAY	24BBE	RBKAAF	RBKAA	2
F15	VALVE,RELIEF PRESS,2-WAY	24BAG	LBKAAG	LBKAA	2
F15	VALVE,ANTI-BLOWBACK	24BBF	RBKAAG	RBKAA	2
F15	VALVE,ANTI-GLOWBACK	24BAH	LBKAAH	LBKAA	2
F15	ADAPTER,OIL SERVICE	24BBG	RBKAAH	RBKAA	0
F15	ADAPTER,OIL SERVICE	24BAJ	LBKAAJ	LBKAA	0
F15	SEAL ASSY,SHAFT,CSD	24BBH	RBKAAJ	RBKAA	1
F15	SEAL ASSY,SHAFT,CSD	24BAK	LBKAAK	LBKAA	1
F15	SEAL,PLAIN ENC,PC PUMP	24BBJ	RBKAAK	RBKAA	1
F15	SEAL ASSY,SHAFT,PC PUMP	24BAL	LBKAAAL	LBKAA	1
F15	SEAL ASSY,SHAFT,UTIL PUMP	24BBK	RBKAAAL	RBKAA	1
F15	SEAL ASSY,SHAFT,UTIL PUMP	24BAM	LBKAAAM	LBKAA	1
F15	SEAL ASSY,SHAFT,PTO	24BBL	RBKAAAM	RBKAA	1
F15	SEAL ASSY,SHAFT,PTO	24BAN	LBKAAAN	LBKAA	1
F15	SEAL ASSY,PAWL CARRIER	24BBM	RBKAAAN	RBKAA	1
F15	SEAL ASSY,PAWL CARRIER	24BAP	LBKAAAP	LBKAA	1
F15	VALVE,OIL COOLER BYPASS	24BBP	RBKAAAP	RBKAA	2
F15	VALVE,OIL COOLER BYPASS	24BAR	LBKAAQ	LBKAA	2
F15	CARRIER ASSY,PAWL	24BBR	RBKAAQ	RBKAA	1
F15	CARRIER ASSY,PAWL	24BAT	LBKAAAR	LBKAA	1
F15	SHAFT ASSY,FLEX,AMAD	24BDO	RBKAAAR	RBKAA	8
F15	SHAFT ASSY,FLEX,AMAD	24EDO	LBKAAAS	LBKAA	8
F15	COVER ASSY,PTO SHAFT	24BDA	RBKAAAS	RBKAA	1
F15	COVER ASSY,PTO SHAFT	24BDA	LBKAAAT	LBKAA	1
F15	BALL AND SOCKET ASSY	24BDC	RBKAAAT	RBKAA	1
F15	BALL AND SOCKET ASSY	24BDC	LBKAAAU	LBKAA	1
F15	TUBING,OIL	24EAG	RBKAAU	RBKAA	1
F15	VALVE,TEMP REG OIL/BYPASS	24EAA	RBKAAV	RBKAA	8
F15	VALVE,TEMP REG,OIL/BYPASS	24EAA	LBKAAW	LBKAA	8

PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

```

00000000011111111112222222223333333334444444445555555556666666667777777778
12345678901234567890123456789012345678901234567890123456789012345678901234567890
F15 INDICATOR,PRESS,DELTA "P" 24PRS RBKAA X RBKAA A
F15 OIL TUBING 24EAF LBKAA Y LBKAA 1
F15 INDICATOR,PRESS,DELTA "P" 24RAU LBKAA Z LBKAA A
F15 GROUND START BMA BCAA 000000000
F15 GEARBOX,CENTRAL 24ANO BMAA BMA 1
F15 STARTER ASSY,HYDRAULIC 24ANA BMAB BMA 8
F15 GENERATOR,PERMA MAGNET 24ANB BMAC BMA A
F15 FAN AND CLUTCH ASSY 24ANC BMAD BMA 1
F15 SEAL,ENCASED,CLUTCH SHAFT 24ANJ BMAE BMA 1
F15 SEAL,ENCASED,DECOUPLER 24ANL BMAF BMA 1
F15 VALVE,CLUTCH CONTROL,HYD 24ANM BMAG BMA A
F15 SW AND OIL PUMP ASSY 24ANN BMAH BMA 8
F15 ELEMENT,OIL FILTER 24ANT BMAJ BMA 1
F15 OIL COOLER ASSY 24ANU BMAK BMA 2
F15 VALVE,OIL FILTER BYPASS 24ANV BMAL BMA 1
F15 VALVE,CHECK,GEARCASE VENT 24ANW BMAM BMA 1
F15 VALVE,OIL PRESS REG 24ANX BMAN BMA 2
F15 ADAPTER,OIL SERVICE 24ANY BMAP BMA 0
F15 VALVE,CONT,OIL PRESS REG 24AN1 BMAQ BMA 8
F15 VALVE,CHECK,PRESS FILL 24AN2 BMAR BMA 2
F15 GEARBOX *BAPEK 24AN3 BMAS BMA 1
F15 SW,DECOUPLER,RH POS/RESET 24AN4 BMAT BMA A
F15 LINK,REAR 24CAR BMAU BMA 8
F15 HOSE ASSY,JFS FUEL 24CAS BMAV BMC 1
F15 PUMP,HYD RAM,HAND DRIVEN 24DAA BMAW BMA 5
F15 MANIFOLD,HYD,JFS 24CAR BMAX BMA 1
F15 ACCUMULATOR,HYD,JFS 24DAD BMAY HMA A
F15 VALVE,AIR CHARGE 24DAF BMAZ BMA A
F15 GAGE,PRESS 24DAG BMEA BMA 0
F15 CONTROL ASSY,STARTING 24DAH BMBB HMA 8
F15 CONTROL HANDLE,P-P,JFS 24DAJ BMBC BMA 8
F15 SW,PRESS-HYD/PNEUMATIC 24DAL BMBD BMA A
F15 IND,OIL FILTER,DELTA P 24ANZ BMBE BMA 0
F15 JET FUEL STARTER SYSTEM BMC BMA AAAAAA
F15 JET FUEL STARTER 24ADG BMCA BMC 1
F15 GAS GENERATOR ASSY 24ADA BMCB BMC 8
F15 COMBUSTION CHAMBER 24ADB BMCC BMC 8
F15 PLENUM ASSY,COMP INLET 24ADC BMCD BMC 2
F15 POWER TURBINE ASSY 24ADG BMCE BMC 8
F15 FUEL SYSTEM 24ADL BMCF BMC 8
F15 CONTROL ASSY,FUEL 24ADM BMCG BMC A
F15 ATOMIZER ASSY,PRIM FUEL 24ADN BMCH BMC A
F15 ATOMIZER ASSY,SEC FUEL 24ADP BMCI BMC A
F15 VALVE,DRAIN CHK,TB PLENUM 24ADQ BMCK BMC 0
F15 SW ASSY,2-SPEED 24ADR BMCL BMC 2
F15 FILTER ASSY,FUEL 24ADS BMCM BMC 1
F15 ELEMENT,FUEL FILTER 24ADT BMCN BMC 2
F15 IGNITION UNIT 24ADI BMCP BMC 8
F15 PLUG,IGNITOR 24AD2 BMCO BMC A
F15 CONTROL UNIT,GENERATOR 24AD3 BMCR BMC A

```

PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

00000000111111112222222233333333444444445555555566666666777777778
1234567890123456789012345678901234567890123456789012345678901234567890

F15 LEAD,IGNITION	24AD6	BMC	BMC	A
F15 HARNESS ASSY,WIRING	24AD7	BMC	BMC	1
F15 CABLE ASSY,JFS	24AD8	BMC	BMC	1
F15 DUCT,EXHAUST	24CAB	BMC	BMC	1
F15 CONNECTOR,EXHAUST DUCT	24CAC	BMC	BMC	1
F15 SEAL,INLET DUCT	24CAG	BMC	BMC	1
F15 COUPLING,JFS MOUNTING	24CAQ	BMC	BMC	1
F15 VALVE,CHK,JFS	46ADT	BMC	BMC	1
F15 IND,FUEL FILTER,DELTA P	24ADU	BMCZA	BMC	0
F15 ENGINE STATUS		BNA	RFB	AAAAA
F15 ENGINE RPM XN-2<		BNB	RNA	K BFL 33333333
F15 INDICATOR,ELEC TACHOMETER	231AA	BNBA	BNB	A
F15 STATOR,GENERATOR	23KAH	BNBB	BNB	A
F15 ROTOR ,GENERATOR	23KAJ	BNBC	BNB	A
F15 FAN TB INL TEMP XFTIT<		BNC	BNA	K BFL 33333333
F15 INDICATOR,FTIT	231AB	BNCA	BNC	A
F15 THERMOCOUPLE,FTIT	23HAK	BNCB	BNC	A
F15 BOX,INTERCONNECT	23KAR	BNCC	BNC	A
F15 EXHAUST NOZZLE POSITION		BND	BNA	I BJC 0300A0000
F15 INDICATOR NOZZLE POSITION	231AC	BNDA	BND	A
F15 TRANSDUCER NOZZLE POSITION	231AM	BND	BND	A
F15 BOX,INTERCONNECT	23KAR	BND	BND	A
F15 OIL PRESSURE		BNF	BNA	I BGAA AAAAAA
F15 OIL PRESSURE INDICATION		BNF	BNF	11111111
F15 INDICATOR,OIL PRESSURE	231AG	BNFA	BNF	A
F15 TRANSMITTER,OIL PRESSURE	231AP	BNFB	BNF	A
F15 BOX INTERCONNECT	23KAR	BNFC	BNF	A
F15 PRESS LOW WARNING		BNG	BNE	11111111
F15 DISPLAY UNIT,CAUTION LIGHT	44EAO	BNGA	BNG	A
F15 HARNESS ASSY,PCB WIRING	44EAA	BNGB	BNG	A
F15 LOGIC UNIT,CAUTION LIGHT	44ECC	BNGC	BNG	A
F15 BRD ASSY,DRIVER/RESET	44ECA	BNGD	BNG	A
F15 BRD ASSY,CAUTION CONTROL	44ECB	BNGE	BNG	A
F15 BRD ASSY,MODE CONTROL	44ECC	BNGF	BNG	A
F15 POWER SUPPLY,LOW VOLTAGE	44ECD	BNGG	BNG	A
F15 POWER SUPPLY,ASSY LAMP PWR	44ECE	BNGH	BNG	A
F15 CABLE ASSY,BRANCHED	44ECF	BNGJ	BNG	A
F15 WIRE BUNDLE,CAUTION LIGHT	44EDC	BNGK	BNG	A
F15 ENGINE ANTI-ICE		BNH	BCR	88888888
F15 ICE DETECTION SYSTEM EA	49CAO	BNHA	BNH	1
F15 DETECTOR,ICE,ENGINE	49CAA	BNHB	BNH	A
F15 PRINTED WIRE ASSY,EMI REG	49CAP	BNHC	BNH	A
F15 PRINTED WIRE ASSY,SW/TIMER	49CAC	BNHD	BNH	A
F15 PRINTED WIRE ASSY,MAG OSC	49CAD	BNHE	BNH	A
F15 WIRING ASSY,STRUT	49CAE	BNHF	BNH	A
F15 DISPLAY UNIT,CAUTION LIGHT	44EAO	BNHG	BNH	A
F15 HARNESS ASSY,PCB WIRING	44EAA	BNHH	BNH	A
F15 LOGIC UNIT,CAUTION LIGHT	44ECO	BNHJ	BNH	A
F15 BRD ASSY,DRIVER/RESET	44ECA	BNHK	BNH	A
F15 BRD ASSY,CAUTION CONTROL	44ECR	BNHL	BNH	A

PGG095.JIR1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

```

0000000001111111112222222222333333333344444444445555555555666666666677777777778
12345678901234567890123456789012345678901234567890123456789012345678901234567890
F15 BRD ASSY,MODE CONTROL 44ECC BNHM BNH A
F15 POWER SUPPLY,LOW VOLTAGE 44ECD BNHN BNH A
F15 POWER SUPPLY,ASSY,LAMP PWR 44ECE BNHP BNH A
F15 CABLE ASSY,BRANCHED 44ECF BNHQ BNH A
F15 WIRE BUNDLE,CAUTION LIGHT 44EDD BNHR BNH A
F15 CKB,ENGINE ANTI-ICE 42CDA BNHS BNH A
F15 CKB,ENGINE ANTI-ICE 42CDA BNHT BNH A
F15 OVERHEAT/FIRE COMMON BNJ BNK AAAAAAAAAA
F15 OVERHEAT FIRE COMMON BNJ BNL AAAAAAAAAA
F15 FIRE DET,PWR SW RELAY 42CHA BNJA BNJ A
F15 FIRE DET,TEST RELAY 42CHA BNJB BNJ C
F15 PANEL TEST 49AGO BNJC BNJ O
F15 ENGINE WARN AND CONT BNK BXB AAAAAAAAAA
F15 ENG OVERHEAT/FIRE DET SYST 49AAO BNKA BNK 1
F15 CONTROL,ALARM,ENG OVH/FIRE 49AAC BNKB BNK A
F15 ELEMENT,ENG,-251,F-15A 49AAA BNKC BNK 1
F15 ELEMENT,ENG,-231,F-15A 49AAB BNKCA BNK 1
F15 ELEMENT,ENG,-245,F-15A 49AAD BNKCB BNK 1
F15 ELEMENT,ENG,-253,F-15A 49AAE BNKCC BNK 1
F15 ELEMENT,ENG,-243,F-15A 49AAF BNKCD BNK 1
F15 ELEMENT,ENG,-233,F-15A 49AAG BNKCE BNK 1
F15 ELEMENT,ENG,-237,F-15A 49AAH BNKCF BNK 1
F15 ELEMENT,ENG,-259,F-15A 49AAL BNKCG BNK 1
F15 ELEMENT,ENG,-269,F-15A 49AAM BNKCH BNK 1
F15 ELEMENT,ENG,-271,F-15A 49AAN BNKCJ BNK 1
F15 ELEMENT,ENG,-273,F-15A 49AAP BNKCK BNK 1
F15 PANEL CONT AND WARN. 49AEO BNKCL BNK A
F15 AMAD & JFS FIRE WARN & CONT BNL BXD AAAAAAAAAA
F15 CONTROL,ALARM,AMAD OH/FORE 49ABC BNLA BNL A
F15 AMAD/JFS OVH/FIRE DET SYST 49ABO BNLB BNL A
F15 ELEMENT,AMAD,-235 49ABA BNLC BNL A
F15 PANEL CONT AND WARN. 49AEO BNLO BNL A
F15 VAR RAMP POSITION WARNING BNN BCC I BCD 000010000
F15 SW,INLET RAMP 9911A BNNA BNN A
F15 DISPLAY UNIT,CAUTION LIGHT 44EAO BNNB BNN A
F15 HARNESS ASSY,PCB WIRING 44EAA BNNC BNN A
F15 BRD ASSY,DRIVER/RESET 44ECA BNND BNN A
F15 BRD ASSY,CAUTION CONTROL 44ECB BNNE BNN A
F15 BRD ASSY,MODE CONTROL 44ECC RNNF BNN A
F15 POWER SUPPLY,LOW VOLTAGE 44ECD BNNG BNN A
F15 POWER SUPPLY,ASSY LAMP PWR 44ECE BNNH BNN A
F15 CABLE ASSY,BRANCHED 44ECF BNNJ BNN A
F15 WIRE BUNDLE,CAUTION LIGHT 44EDD BNNK BNN A
F15 ONE ENGINE FUEL FEED BRA BAA AAAAAAAAAA
F15 FUEL FILTER ASSY 23QDO BRAA BRA O
F15 VALVE,FUEL SHUTOFF 46ADJ BRAAA BRA O
F15 ELEMENT,FUEL FILTER 23QDA BRAB BRA O
F15 ACTUATOR,ENG FUEL SHUTOFF 46ADP BRABA BRA O
F15 SW.,MASTER,ENG 231RF BRAC BRA O
F15 VALVE,BODY ASSY 46ADQ BRAD BRA 1

```

PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

```

0000000001111111112222222222333333333344444444445555555555666666666677777777778
12345678901234567890123456789012345678901234567890123456789012345678901234567890
F15 LINE ASSY,A/F-ENG 46ADG BRAE BRA 1
F15 HEAT EXCHANGER FUEL-OIL 46ADE BRAF BRA 1
F15 MAIN ENGINE BOOST BRB BJA AAAAAAAAAA
F15 MAIN ENGINE BOOST BRB BRA K BRC AAAAAAAAAA
F15 PUMP,FUEL,MAIN ENG 23HAD BRBA BRB A
F15 TANK BOOST BRC BRA K BRB AAAAAAAAAA
F15 NORMAL BOOST %SAME SIDE< BRD BRC HRE 11111111
F15 ELEMENT,PUMP,FUEL BOOSTER 46ADM BRDA BRD A
F15 RLY,CONTROL,BOOST PUMP 9946B BRDB BRD A
F15 BACK-UP BRE BRC K BRD AAAAAAAAAA
F15 OTHER SIDE BOOST BRG BRE BRH 11111111
F15 ELEMENT,FUEL BOOSTER 46ADM BRGA BRG A
F15 RLY,CONTROL,BOOST PUMP 9946B BRGB BRG A
F15 EMERGENCY BOOST BRH BRE K BRG AAAAAAAAAA
F15 PUMP,EMER BOOST 46ADK BRHA BRH A
F15 RLY,CONTROL,EMER BOOST 42CHA BRHB BRH A
F15 SW.,CHECK,EMER BOOST PUMP 46EAB BRHC BRH O
F15 SW.,PRESS,BOOST PUMP SENS 46ECA BRHD BRH A
F15 BOOST PUMP EMER CONTR SW 46FAC BRHE BRH 1
F15 CROSS-FEED BRJ BRE 55555555
F15 VALVE,CHK,AUTO CROSS-FEED 46ADD BRJA BRJ A
F15 VALVE,FEED,INTERCONNECT 46ADR BRJB BRJ 1
F15 VALVE,FEED,INTERCONNECT 46ADS BRJC BRJ 1
F15 HOT FUEL BY PASS BRK BRA 100000001
F15 THERMOSTAT FLOW CONTROL 23HAC BRKA BRK A
F15 FUEL SUPPLY MAIN TANKS BSA B 0AAAAAAAA50
F15 ENGINE FUEL SUPPLY SYSTEM 46ADO BSAA BSA K BSC AAAAAAAAAA
F15 LEFT ENGINE FEED TANK BSB BSA 1
F15 TANK,FUEL,A/C NO 3A 46AEE BSBA BSB 1
F15 TANK,FUEL,A/C NO 3B 46AEF BSBB BSB 1
F15 HOUSING-PUMP 46ADN BSBC BSB 1
F15 RIGHT ENGINE FEED TANK BSC BSA K BSB AAAAAAAAAA
F15 TANK,FUEL,A/C NO 2 46AEC BSCA BSC 1
F15 FUEL PUMP HOUSING 46ADL BSCB BSC 1
F15 REPLENISH TRANSFER ATTENUATE BSD BSA 11111111
F15 INTERNAL FUEL TRANSFER BSE BSD C00111000
F15 INT FUEL TRANS/DUMP SYSTEM 46AAO BSEA BSE 0
F15 SW.,PRESS,FUEL XFER DUMP 46ECC BSEB BSE 0
F15 VALVE,FLT,FUEL LEVL CNT12 46AAK BSED BSE 1
F15 VALVE,POP,FUEL LEVL CNT12 46AAL BSEE BSE 1
F15 VALVE,FLT,FUEL LEVL CNT13A 46AAX BSEF BSE 1
F15 VALVE,POP,FUEL LEVL CNT13A 46AAY BSEG BSE 1
F15 COVER,SELF SEAL,FUEL LINES 46AAP BSEM BSE 0
F15 TANK NO 1 FUEL TRANSFER BSF BSE 000011000
F15 TANK,FUEL,A/C NO 1 46AEA BSFA BSF 1
F15 TANK NO 1 PRESS TRANSFER BSG BSH 11111111
F15 PUMP,FUEL TRANSFER %NO-1< 46AAM BSGA BSG A
F15 VALVE,CHK,NORM TRANSFER 46AAU BSGB BSG 0
F15 VALVE,DRAIN,AUTOMATIC 46ABH BSGE BSG 0
F15 TANK NO 1 GRAVITY TRANSFER BSH BSF K BSG AAAAAAAAAA

```

PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

```

0000000001111111112222222223333333334444444445555555556666666667777777778
1234567890123456789012345678901234567890123456789012345678901234567890
F15 VALVE,FEED TANK INTERCONN 46AAZ BSHA BSH A
F15 VALVE,CHK,GRAVITY TRANSFER 46AAG BSHB BSH 1
F15 LEFT WING FUEL TRANSFER BSJ RSE 000011000
F15 LEFT WING FUEL TRANSFER BSJ LBSW AAAAAAAAA
F15 TANK,INTEGRAL,FUEL,LH 11KGA BSJA BSJ 1
F15 TANK,SURGE,INTEGRAL,LH 11KGB BSJB BSJ 0
F15 PUMP,FUEL,EJECT SCAVENGE 46ACR BSJC BSJ 0
F15 VALVE,DRAIN,AUTOMATIC LFT 46ABH BSJD BSJ 0
F15 LEFT WING PRESS TRANSFER BSK BSJ BSL 111111111
F15 PUMP,FUEL TRANSFER,WING 46AAA BSKA BSK A
F15 LEFT WING GRAVITY TRANSFER BSL BSJ K BSK AAAAAAAAA
F15 VALVE,CHK,GRAV TRANSFER 46AAH BSJA BSL 1
F15 VALVE,FEED INTERCONNECT 46ADR BSLB BSL 1
F15 VALVE,FEED INTERCONNECT 46ADS BSLC BSL 1
F15 RIGHT WING FUEL TRANSFER BSM BSE 000011000
F15 RIGHT WING FUEL TRANSFER BSM RBSW AAAAAAAAA
F15 TANK,INTEGRAL FUEL,RH 11KKA BSMA BSM 1
F15 TANK,SURGE,INTEGRAL 11KKB BSMB BSM 0
F15 PUMP,FUEL,EJECT SCAVENGE 46ACR BSMC BSM 0
F15 VALVE DRAIN,AUTOMATIC RT 46ABH BSMD BSM 0
F15 RIGHT WING PRESS TRANSFER BSP BSQ BSL 111111111
F15 PUMP,FUEL TRANSFER,WING 46AAA BSPA BSP A
F15 RIGHT WING GRAVITY TRANSFER BSQ BSM K BSP AAAAAAAAA
F15 VALVE,CHK,GRAV TRANSFER 46AAH BSQA BSQ 1
F15 VALVE,FEED INTERCONNECT 46ADR BSQB BSQ 1
F15 VALVE,FEED INTERCONNECT 46ADS BSQC BSQ 1
F15 EXTERNAL FUEL TRANSFER BSR BSD 000000000
F15 EXT FUEL XFER SYSTEM 46BRO BSRA BSR 0
F15 TANK,FUEL,600 GAL X3< 46BAA BSRB BSR 1
F15 CAP/ADAPTOR,GRAV FILL X3< 46BAC BSRC BSR 0
F15 DISCONNECT ASSY,WING X2< 46BBA BSRD BSR 1
F15 DISCONNECT ASSY,PYLON X3< 46BBB BSRE BSR 1
F15 VALVE,REFUEL/XFER SHUTOFF 46BBC BSRF BSR 3
F15 DISCONNECT ASSY,FUSELAGE 46BBD BSRG BSR 1
F15 VALVE,REFUEL/TRANSFER X3< 46BBE BSRH BSR 3
F15 SOL,FUEL SHUTOFF 46BBF BSRJ BSR 3
F15 EXT TANK PRESS/VENT SYSTEM 46BCO BSRK BSR 0
F15 REGULATOR,AIR PRESS,WING X2< 46BCA BSRL BSR 5
F15 VALVE,SAFETY RELIEF,EXT 46BCB BSRM BSR 1
F15 DISCONNECT ASSY,EXT PRESS 46BCC BSRN BSR 1
F15 DISCONNECT AIR,PYLON/TANK 46BCD BSRP BSR 1
F15 DISCONNECT ASSY,EXT PRESS 46BCF BSRQ BSR 1
F15 REGULATOR,AIR PRESS,CTL 46BCH BSRR BSR 5
F15 VALVE,PRESS RELIEF,EMET X3< 46BCL BSRS BSR 1
F15 VALVE CHK,AIR,PYLON X3< 46BCM BSRT BSR 1
F15 SW.,NEG "G" X3< 46EAF BSRV BSR 2
F15 VALVE,FLT,FUEL LV CONT,WNG 46ABD BSRW BSR 1
F15 VALVE,POP,FUEL LV CONT,WNG 46ABE BSRX BSR 1
F15 VALVE,FLT,FUEL LV CONT,| 146ABF BSRY BSR 1
F15 VALVE,POP,FUEL LV CONT,| 146ABG BSPZ BSR 1

```


PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

```

000000000011111111122222222233333333344444444455555555566666666677777777778
12345678901234567890123456789012345678901234567890123456789012345678901234567890
F15 WIRE CABLE ASSY 75EBJ BSRZA BSR 1
F15 INTERNAL TANK PRESS BSS BSA 000111000
F15 INTERNAL TANK PRESS ATTN BST BSS 111111111
F15 NORMAL PRESSURE BSU BST BSV 111111111
F15 REGULATOR PRESS INT TANKS 46ACG BSUA BSU 8
F15 VALVE,CHK,DIVE VENT 46ACC BSUB RSU 0
F15 VALVE CHECK-HOT AIR 46ACL BSUC BSU 0
F15 VALVE AIR SHUT OFF 46ACM BSUD BSU 8
F15 EMERGENCY PRESSURE -RAM- BSV BST K BSU AAAAAAAAAA
F15 VALVE,SAFETY RLV,FUEL PRES 46ACB BSVA BSV 1
F15 VALVE RAM AIR CONTROL 46ACP BSVB BSV A
F15 VALVE SAFETY RELIEF 46ACA BSVB RSV 1
F15 FUEL DUMP,LEFT WING LBSW FG 111111111
F15 FUEL DUMP,RIGHT WING RBSW FG 111111111
F15 ACTUATOR,FUEL DUMP SHUTOFF 46AAV LBSWA LBSW A
F15 ACTUATOR,FUEL DUMP SHUTOFF 46AAV RBSWA RBSW A
F15 VALVE,BF,FUEL DUMP SHUTOFF 46AAW LBSWB LBSW A
F15 VALVE,BF,FUEL DUMP SHUTOFF 46AAW RBSWB RBSW A
F15 ARRESTER,FLAME/LIGHTENING 46ACS LBSWC LBSW 1
F15 ARRESTER,FLAME/LIGHTENING 46ACS RBSWC RBSW 1
F15 AERIAL REFUEL BTA BSO 000001000
F15 PANEL,PWR DIST,FUEL CONTR 46EAA BTAA BTA 1
F15 HARNESS ASSY 46DAR BTAB RTA 1
F15 SLIPWAY DOOR ACTUATION BTB BTA AAAAAAAAAA
F15 CYL ASSY,ACT,LIN,SLIPWAY 46DAC BTBA RTB A
F15 SW.,LIMIT,A/R DOOR OPEN 46EEB BTBB RTB 0
F15 SW.,LIMIT,A/R DOOR CLOSE 46EEC BTBC RTB A
F15 AMPLIFIER,SIGNAL,A/R 46EFE BTBD RTB 8
F15 NORMAL ACTUATION BTC BTH BTB 111111111
F15 RECEPTACLE,A/R,SUBASSY 46DAP BTCA BTC 8
F15 VALVE,LIN DIR CONTROL 46DAD BTDB BTC A
F15 VALVE,RESTRICTOR 46DAL BTCC BTC 1
F15 RLY,DOWN LOCK,TIME DELAY 42CHY BTCD BTC 1
F15 RLY,A/R OVERRIDE 42CHM BTCE BTC 1
F15 EMER ACTUATION BTD BTB K BTC AAAAAAAAAA
F15 THRUSTER,CARTR,ACT,EMER 46DAF BTDA BTD A
F15 CARTRIDGE,EMER,A/R 97AAL BTDB BTD A
F15 BATTERY,THERMAL 97AAN BTDC BTD A
F15 LIGHT,A/R RECEPTACLE IND 46FEA BTDD BTD 1
F15 BATTERY,THERMAL 97AAD BTDE BTU A
F15 A/R ENGAGEMENT BTE BTA AAAAAAAAAA
F15 RECEPTACLE,SEQ,A/R SUBASSY 46DAP BTFA BTE 8
F15 AMPLIFIER,SIGNAL,A/R 46EEE BTEB BTE 8
F15 ACTUATOR,NOZZLE LOCK 9946C BTEC BTE A
F15 SW.,NOZZLE LOCK 9946D BTED BTE A
F15 RLY,A/R RELEASE 42CCM BTEE BTE A
F15 VALVE LIN DIR. CONT.DUMP 46DAG BTEF BTE 8
F15 FITTING ASSY 46DAK BTEG BTE 8
F15 CYLINDER ASSY 46DAQ BTEH BTE 8
F15 COMPENSATING CHECK VALVE 46DAT BTEJ RTE 0

```

PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

0000000001111111112222222222333333333344444444445555555555666666666677777777778
12345678901234567890123456789012345678901234567890123456789012345678901234567890

F15 SWITCH PRESSURE	46EFF	BTEK	BTE	1	
F15 GROUND DEFUEL		BTJ	BSA		000000000
F15 ADAPTER,PRESS DEFUEL	46AHR	BTJA	BTJ	A	
F15 VALVE,CHK,GND DEFUEL LINE	46ABC	BTJB	BTJ	1	
F15 VALVE,DRAIN,FUSELAGE TANKS	46AEH	BTJC	BTJ	1	
F15 VALVE,DRAIN,WING TANKS	46AEJ	BTJD	BTJ	1	
F15 VALVE,DRAIN,EXT FUEL TANKS	46BAE	BTJE	BTJ	1	
F15 GROUND REFUEL		BTN	BSA		000000000
F15 ADAPTER,PRESS REFUEL	46ABA	BTNA	BTN	A	
F15 VALVE,CHK,REFUEL MANIFOLD	46AAJ	BTNB	BTN	A	
F15 PANEL,GND PREFLIGHT TEST	46EAB	BTNC	BTN	8	
F15 PANEL,PWR DIST,FUEL CONTR	46EAA	BTND	BTN	8	
F15 MISC.RLY PANEL NO 1	42CHA	BTNE	BTN	8	
F15 MISC.RLY PANEL NO 2	42CHG	BTNF	BTN	8	
F15 AVIONICS MISC RLY PANEL	1342CJD	BTNG	BTN	8	
F15 SW.FLOAT,INTERCONNECT 2EA	46EAE	BTNH	BTN	1	
F15 FUEL STATUS		BTR	R		0AAAAAAAO
F15 QUANTITY INDICATION		BTS	BTR	K BSA	AAAAAAAAA
F15 TOTAL QTY & TANK MONITORING		BTT	BTS		011111100
F15 INDICATOR,FUEL QTY	46EBA	BTUA	BTT	A	
F15 EXTERNAL SENSE		BTU	BTT		0AA100000
F15 XMITTER,FUEL QTY XEA OF 3<	46EEP	BTUA	BTU	3	
F15 RLY,LEFT TANK ABOARD	42CHM	BTUB	BTU	A	
F15 RLY,CTL TANK ABOARD	42CHM	BTUC	HTU	A	
F15 RLY,RIGHT TANK ABOARD	42CHS	BTUD	BTU	A	
F15 INTERNAL QTY		BTV	BTS		011111100
F15 INTERNAL INDICATION		BTW	BTV	RTY	111111111
F15 INDICATOR,FUEL QTY	46EBA	BTWA	BTW	A	
F15 INTERNAL SENSE		BTX	BTS		S666666666
F15 INTERNAL SENSE		BTX	BTT		FAAAAAAAA
F15 INTERNAL SENSE		BTX	BTW		FAAAAAAAA
F15 XMITTER,FUEL QTY,TNK 1	46EBF	BTXA	BTX	A	
F15 XMITTER,FUEL QTY,TNK 2	46EBH	BTXB	BTX	A	
F15 XMITTER,FUEL QTY,TNK 3A	46EBJ	BTXC	BTX	A	
F15 XMITTER,FUEL QTY,TNK 3B	46ERK	BTXD	BTX	A	
F15 XMITTER,FUEL QTY,WNG 1	46EBL	BTXE	BTX	A	
F15 XMITTER,FUEL QTY,WNG 2	46EBM	BTXF	BTX	A	
F15 XMITTER,FUEL QTY,WNG 3	46ERN	BTXG	BTX	A	
F15 FUEL LOW WARNING		BTY	BTV	K BTW	AAAAAAAAA
F15 DISPLAY UNIT,CAUTION	44EAO	BTYA	BTY	A	
F15 HARNESS ASY,PCB	44FAA	BTYB	BTY	A	
F15 LOGIC UNIT,CAUTION LIGHT	44ECO	BTYC	BTY	A	
F15 BRD ASSY,DRIVER/RESET	44FCA	BTYD	BTY	A	
F15 BRD ASSY,CAUTION CONTROL	44ECB	BTYE	BTY	A	
F15 BRD ASSY,CAUTION CONTROL	44FCC	BTYF	BTY	A	
F15 PWR SUPPLY,LOW VOLT	44ECD	BTYG	BTY	A	
F15 PWR SUPPLY,LAMP POWER	44ECE	BTYH	BTY	A	
F15 CABLE ASSY,BRANCHED	44ECF	BTYJ	BTY	A	
F15 WIRE BUNDLE CAUTION LIGHT	44EDG	BTYK	BTY	A	
F15 RLY,FUEL LOW	42CHA	BTYL	BTY	A	

PGG95.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

```

00000000111111112222222222333333333344444444445555555555666666666677777777778
12345678901234567890123456789012345678901234567890123456789012345678901234567890
F15 FUEL LOW SENSE BTZ BTY AAAAAAAAAA
F15 CONTROL ASSY,LEVEL SENSE 46ECD BTZA BTZ A
F15 FUEL FLOW BUA BTR K BRA 111111111
F15 INDICATOR,FUEL,RATE/FLOW 46EDA BUAA BUA A
F15 XMITTER,FUEL,RATE/FLOW 46EDB BUAB BUA A
F15 BOX,ENG INTERCONNECT 23KAR BUAC BUA 1
F15 HOT FUEL WARNING BUB BTR K BRK 111111111
F15 SENSOR,TEMP,HOT FUEL 46EAG BUBA BUB A
F15 DISPLAY UNIT,CAUTION 44FAO BUBB BUB B
F15 HARNESS ASSY,PCB 44EAA BUBC BUB A
F15 LOGIC UNIT CAUTION LIGHT 44ECO BUBD BUB B
F15 BRD ASSY,DRIVER/RESET 44ECA BUBE BUB B
F15 BRD ASSY,CAUTION CONTROL 44ECB BUBF BUB B
F15 BRD ASSY,MODE CONTROL 44ECC BUBG BUB B
F15 PWR SUPPLY,LOW VOLT 44ECD BUBH BUB B
F15 PWR SUPPLY,LAMP POWER 44ECF BUBJ BUB B
F15 WIRE BUNDLE,CAUTION LIGHT 44EDO BUBK BUB B
F15 PANEL,GND,PRE-FLIGHT TEST 44EAB BUBL BUB 0
F15 BOOST PRESS LOW WARNING BUC BTR K BRC 010010000
F15 BOOST PUMP PRESSURE SW 46ECA BUCA BUC A
F15 DISPLAY UNIT,CAUTION 44EAO BUCC BUC B
F15 HARNESS ASSY,PCB 44EAA BUCD BUC A
F15 LOGIC UNIT CAUTION LIGHT 44ECO BUCE BUC A
F15 BRD ASSY,DRIVER/RESET 44ECA BUCF BUC A
F15 BRD ASSY,CAUTION CONTROL 44ECB BUCG BUC A
F15 BRD ASSY,MODE CONTROL 44ECC BUCH BUC A
F15 PWR SUPPLY,LOW VOLT 44ECD BUCJ BUC A
F15 PWR SUPPLY,LAMP POWER 44ECF BUCK BUC A
F15 WIRE BUNDLE,CAUTION LIGHT 44EDO BUCL BUC 1
F15 PANEL,GND,PRE-FLIGHT TEST 44EAB BUCM BUC 0
F15 FIRE EXTINGUISH BXA B AAAAAAAAAA
F15 ENG & AMAD FIRE EXT SYSTEM 49ACO BXAA BXA 0
F15 ENG FIRE EXT REA OF TWJC BXB BXA X BAA AAAAAAAAAA
F15 PUSH-BUTTON,ENG FIRE 49AEO BXBA BXB A
F15 LINES,DISTRIBUTION 49ACE BXB B 1
F15 RELAY,ENG FIRE EXT 42CHA LBXBC BXB A
F15 RELAY,ENG FIRE EXT 42CHG RBXBC BXB A
F15 VALVE,SOL,FUEL SHUT-OFF 46ADJ BXBE BXB A
F15 VALVE,BODY ASSY 46ADQ BXBF BXB 1
F15 ACTUATOR,ENG FUEL SHUT-OFF 46ADP BXBG BXB A
F15 ENGINE AGENT RELEASE BXC BXB AAAAAAAAAA
F15 SW,DISCHARGE,FIRE EXT 49AEO BXCA BXC A
F15 CARTRIDGE,FIRE EXT DSCH 97AAK BXCB BXC A
F15 AMAD AND JFS FIRE EXT BXD BXA X BMC AAAAAAAAAA
F15 AMAD AND JFS FIRE EXT BXD BXDD X BXX AAAAAAAAAA
F15 PUSH-BUTTON,AMAD/JFS FIRE 49AEO BXDA BXD A
F15 RELAY,AMAD FIRE EXT 42CHA BXDB BXD A
F15 DISTRIBUTION LINES 49ACE BXDC BXD 1
F15 DUAL PROVISOY DUMMY BXDD BXA AAAAAAAAAA
F15 AMAD AGENT RELEASE BXE BXD AAAAAAAAAA

```


PGG095.JIR1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

```

0000000001111111112222222223333333334444444445555555556666666667777777778
12345678901234567890123456789012345678901234567890123456789012345678901234567890
F15 SW,DISCHARGE,FIRE EXT 49AEO BXEA BXE A
F15 CARTRIDGE,FIRE EXT USCHG 97AAK BXEB BXE A
F15 SUPPLY & PRESSURIZATION BXJ BXR AAAAAAAAAA
F15 SUPPLY & PRESSURIZATION BXJ BXD AAAAAAAAAA
F15 CONTAINER,FIRE EXT 49ACA BXJA BXJ A
F15 OUTLET,DISCHARGE 49ACD BXJB BXJ A
F15 AMAD FIRE FREQUENCY BXX RXX FAAAAAAAAA
F15 ONE ENGINE FAILED BZZ RZZ FAAAAAAAAA
F15 COM/NAV/IDENT C C E 011111120
F15 COMMUNICATIONS CA CA 111111111
F15 UHF COMMUNICATIONS CAA CBH AAAAAAAAAA
F15 UHF COMMUNICATIONS CAA 1
F15 CTRL PANEL,MAIN COMM 63BHO CAAA CAA 1
F15 CHASSIS 63BHA CAAB CAA 0
F15 PANEL,EDGE LIGHT 63BHB CAAC CAA 333333333
F15 NORMAL TRANSMIT/RECEIVE CAC CAD 2
F15 REC,TRANS RT-967 63AAC CACA CAC 1
F15 CHASSIS ASSY 63AAA CACB CAC 8
F15 MODULE,RF TRANSLATOR 63AAB CACC CAC 5
F15 AMPLIFIER 63AAC CACD CAC 5
F15 MODULE,EXCITER 63AAD CACE CAC A
F15 MODULATOR ASSY 63AAE CACF CAC 1
F15 MODULE,FREQ. SYN. 63AAF CACG CAC A
F15 MODULE,IF/AUDIO AMP 63AAG CACH CAC A
F15 MODULE,POWER SUPPLY 63AAH CACJ CAC A
F15 MODULE,TUNER,MECH 63AAJ CACK CAC 1
F15 RECEIVER,RADIO GUARD 63AAL CACL CAC 2
F15 SELECTOR,ANTENNA C-9634 63ACO CACM CAC 5
F15 CKT BKR,AUT SELECT 83CBC01 42CCG CACN CAC 1
F15 ANTENNA,AS-2817,2 EA 63ADO CACP CAC 2
F15 SELECTOR,ANT C-9129 63AFO CACQ CAC 0
F15 MOUNTING,MT-4474 63AJU CACR CAC 1
F15 FILTER,LOW PASS 63ALO CACS CAC A
F15 CKT BKR,UHF 76CBC002 42CCG CACT CAC A
F15 CKT BKR,UHF 76CBC003 42CCG CACU CAC A
F15 CKT BKR,UHF 76CBC004 42CCG CACV CAC 8
F15 MODULE,COMPARATOR 63AAK CACW CAC K CAC AAAAAAAAAA
F15 AUX RECEIVE CAD CAA 8
F15 RECEIVER,AUX,R1789 63AGO CADA CAD 1
F15 CHASSIS ASSY 63AGA CADB CAD 8
F15 POWER SUPPLY ASSY 63AGC CADC CAD 8
F15 TRANSLATOR 63AGD CADD CAD 8
F15 SYNTHESIZER 63AGE CADE CAD 8
F15 TUNER 63AGF CADF CAD 8
F15 COMPARATOR 63AGG CADG CAD 8
F15 AMPLIFIER 63AGH CADH CAD 0
F15 MODULE,BIT 63AGJ CADJ CAD 0
F15 MOUNTING,MT 4441 63AKO CADK CAD 8
F15 ANTENNA,UHF/TACAN 63ADO CADL CAD A
F15 CKT BKR,UHF AUX 77CBF004 42CCA CADM

```

PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

```

0000000001111111112222222222333333333344444444445555555555666666666677777777778
12345678901234567890123456789012345678901234567890123456789012345678901234567890
F15 CKT BKR,UHF AUX 77CBE003 42CCA CADN CAD A
F15 CKT BKR,UHF AUX 77CBE002 42CCA CADP CAD A
F15 FILTER,AUX LOW PASS 63ALO CADQ CAD 1
F15 COMM INTERFACE CAE CA 111111111
F15 CKT CARD,BLACK AUDIO 63RCF CAEA CAE 8
F15 CKT CARD,RED AUDIO 63BCJ CAER CAE 0
F15 CKT CARD,COMM INTERFACE 63HCK CAEC CAE 8
F15 AUX INTERFACE CAG DADC AAAAAAAAAA
F15 AUX INTERFACE CAG MMA 000010000
F15 AUX INTERFACE CAG NAY 000000000
F15 CKT CARD TONE GEN 63RCG CAGA CAG 8
F15 CKT CARD,AUX INTERFACE 63BCD CAGB CAG 8
F15 AUDIO PROCESSING CAH CAE AAAAA/AAA
F15 AUDIO PROCESSING CAH CAG AAAAA,AAA
F15 AUDIO PROCESSING CAH CBF 111111111
F15 AUDIO PROCESSING CAH CBG 000000010
F15 AUDIO PROCESSING CAH CBH 222222222
F15 CONTROL PANEL C9011 63BCO CAHA CAH 8
F15 CHASSIS ASSY 63BCA CAHB CAH 1
F15 PANEL,EDGE LIGHT 63BCB CAHC CAH 0
F15 CKT CARD,BIT LOGIC 63BCH CAHD CAH 0
F15 CKT CARD,MEMORY 63BCL CAHE CAH 8
F15 CKT CARD,MEMORY 63BCP CAHF CAH 8
F15 CKT CARD,MEMORY 63BCQ CAHG CAH 8
F15 CKT CARD,POWER SUPPLY 63PCT CAHH CAH A
F15 CKT CARD,POWER SUPPLY 63RCU CAHJ CAH A
F15 CKT BKR,ICS 78CBC013 42CCG CAHK CAH A
F15 CKT BKR,ICS 78CBC012 42CCG CAHL CAH A
F15 SECURE VOICE CAJ CAA 000000000
F15 SPEECH SECURITY UNIT 63ABO CAJA CAJ 8
F15 CKT BKR,KY-28 78CBE014 42CCA CAJB CAJ A
F15 NAVIGATION CR C E 001222240
F15 NAV SOLUTIONS CBA CB 111111111
F15 CENTRAL COMPUTER SOLUTIONS CBB CBA 111111111
F15 COMPUTER,DIGITAL 57AAO CBBA CBB 8
F15 FILTER,RFI 57AAH CBHB CBB 1
F15 PAGE CPU CLOCK 57AAF CBBC CBB 8
F15 PAGE,CPU LO DATA 57AAG CBBD CBB 8
F15 PAGE,CPU HI DATA 57AAH CBBE CBB 8
F15 PAGE,CPU CONTROL 57AAJ CBBF CBB 8
F15 PAGE,IO SERIAL 57AAK CBBG CBB 8
F15 PAGE,MEMORY CORE 57AAL CBBH CBB 8
F15 PAGE,MAIN STORE TIMING 57AAM CBBJ CBB 8
F15 PAGE,IO TR REC 57AAN CBBK CBB 8
F15 PAGE,IO SERIAL CONTROL 57AAP CBBL CBB 8
F15 RELAY ASSY 57AAQ CBBM CBB 8
F15 CONNECTOR ASSY 57AAP CBBN CBB 1
F15 BACKPANEL,MAIN STORE 57AAS CBBP CBB 1
F15 HARNESS,AC POWER 57AAT CBBQ CBB 1
F15 HARNESS,DC POWER 57AAU CBBR CBB 1

```

PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

000000001111111112222222233333333444444445555555666666667777777778
1234567890123456789012345678901234567890123456789012345678901234567890

F15	HARNESS, I D	57AAV	CBB5	CBB	1
F15	POWER SUPPLY	57AAX	CBBT	CBB	8
F15	CKT CARD, CONTROL, SEQ	57AAY	CBBU	CBB	8
F15	CKT CARD, INTERNAL VOLT	57AAZ	CBBV	CBB	8
F15	CKT BKR 84CBL002	42CFA	CBBW	CBB	A
F15	CKT BKR 84CBL003	42CFA	CBBX	CBB	A
F15	CKT BKR 84CBL004	42CFA	CBBY	CBB	A
F15	CONTROL-IND, NAV, C-8849	71AKO	CBBZA	CBB	8
F15	CKT CARD, LOGIC NO.1	71AKA	CBBZB	CBB	8
F15	CKT CARD, LOGIC NO.2	71AKD	CBBZC	CBB	8
F15	CKT CARD, DATA BUS	71AKG	CBBZD	CBB	8
F15	CKT CARD, DISPLAY LOGIC	71AKK	CBBZE	CBB	8
F15	POWER SUPPLY	71AKN	CBBZF	CBB	A
F15	PANEL, EDGE LIGHT	71AKR	CBBZG	CBB	1
F15	BEZEL ASSY	71AKT	CBBZH	CBB	0
F15	CKT BKR 72CBEC03	42CCA	CBBZJ	CBB	A
F15	CKT BKR 72CBEC04	42CCA	CBBZK	CBB	A
F15	CKT BKR 72CBEC05	42CCA	CBBZL	CBB	A
F15	FLIGHT DIRECTOR SOLUTIONS		CBC	CBA	1111111A1
F15	ADAPTER, FLT DIRECTOR	51NBC	CBCA	CBC	8
F15	CHASSIS ASSY	51NBA	CBCB	CBC	1
F15	PWR SUPPLY	51NBB	CBCC	CBC	A
F15	CKT CARD CCC INTERFACE	51NBE	CBCE	CBC	2
F15	CKT CARD CCC INTERFACE	51NBF	CBCE	CBC	2
F15	CKT CARD CCC INTERFACE	51NBG	CBCE	CBC	2
F15	CKT CARD, MEMORY MODE	51NBH	CBCE	CBC	8
F15	CKT CARD, HSI/ADI INTER.	51NBJ	CBCH	CBC	8
F15	CKT CARD, DATA CONTROL	51NBK	CBCH	CBC	8
F15	CKT CARD, DATA CONVERT	51NBL	CBCK	CBC	8
F15	CKT CARD, DATA COUPLER	51NBM	CBCL	CBC	8
F15	SWITCH, ROTARY	51NCO	CBCL	CBC	A
F15	CKT BKR 92CBC005	42CCG	CBCL	CBC	A
F15	INERTIAL NAV SOLUTIONS		CBD	CBA	001111100
F15	INERTIAL NAV SOLUTIONS		CBD	DACA	111111111
F15	INERTIAL NAV SOLUTIONS		CBD	FCM	111111111
F15	INERTIAL NAV SOLUTIONS		CBD	MDA	111111111
F15	INERTIAL MEASUREMENT		CBD	CBD	AAAAAAAAA
F15	INERTIAL MEASURE UNIT	71AEO	CBDAA	CBD	8
F15	PLATFORM ASSY	71AED	CBDAB	CBD	8
F15	QUANTIZER	71AEY	CBDAC	CBD	8
F15	MEMORY	71AE2	CBDAD	CBD	8
F15	PRECISION TORQUE	71AF7	CBDAD	CBD	8
F15	INTERCONNECT ASSY	71AFD	CBDAD	CBD	8
F15	FRONT PANEL ASSY	71AFL	CBDAG	CBD	8
F15	POWER SUPPLY ASSY	71AFP	CBDAG	CBD	8
F15	CONVERTER REG ASSY	71AFQ	CBDAG	CBD	8
F15	MODE MONITOR	71AFV	CBDAG	CBD	8
F15	BATTERY ASSY	71AF1	CBDAL	CBD	1
F15	INT ASSY NO.1	71AF4	CBDAM	CBD	8
F15	INT ASSY NO.2	71AF7	CBDAN	CBD	8

PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

0000000011111111112222222222333333333344444444445555555555666666666677777777778
12345678901234567890123456789012345678901234567890123456789012345678901234567890

F15	INT ASSY NO.3	71AGB	CBDA	CBDA	8
F15	INT ASSY NO.4	71AGE	CBDAQ	CBDA	8
F15	C1000 MODE	71AGH	CBDA	CBDA	8
F15	C1000 MONITOR	71AGL	CBDA	CBDA	8
F15	PLATFORM MEMORY	71AGP	CBDA	CBDA	8
F15	DATA SEQ	71AGS	CBDA	CBDA	8
F15	BINARY DECIMAL CONV	71AGV	CBDA	CBDA	8
F15	NAV CONT IND INTERFACE	71AGY	CBDA	CBDA	8
F15	SCRATCHPAD MEMORY	71AG2	CBDA	CBDA	8
F15	BACKUP CONTROL LOGIC	71AG5	CBDA	CBDA	8
F15	ANALOG/DIGITAL NO.1	71AG8	CBDA	CBDA	8
F15	ANALOG/DIGITAL NO.2	71AHC	CBDA	CBDA	8
F15	GYRO SPIN	71AHF	CBDA	CBDA	8
F15	SYNCHRO BUFFER	71AHJ	CBDA	CBDA	8
F15	MODE SEQUENCE	71AHM	CBDA	CBDA	8
F15	DATA BUS	71AHQ	CBDA	CBDA	8
F15	CCC/RADAR I/O	71AHT	CBDA	CBDA	8
F15	TEMP CONTROL	71AHW	CBDA	CBDA	8
F15	MOUNT, IMU	71AMO	CBDA	CBDA	8
F15	CKT BKR 72CBE006	42CCA	CBDA	CBDA	A
F15	CKT BKR 72CBE007	42CCA	CBDA	CBDA	A
F15	CKT BKR 72CBE008	42CCA	CBDA	CBDA	A
F15	CONTROL/INDICATION		CBDB	CBDB	AAAAA
F15	CONTROL-INDICATOR	71AKO	CBDB	CBDB	8
F15	LOGIC NO 1	71AKA	CBDB	CBDB	8
F15	LOGIC NO 2	71AKD	CBDB	CBDB	8
F15	DATA BUS	71AKG	CBDB	CBDB	8
F15	DISPLAY LOGIC	71AKK	CBDB	CBDB	8
F15	POWER SUPPLY	71AKN	CBDB	CBDB	8
F15	PANEL EDGE LIGHT	71AKR	CBDB	CBDB	0
F15	BEZEL ASSY	71AKT	CBDB	CBDB	0
F15	INTERCONNECT ASSY	71AK1	CBDB	CBDB	8
F15	RACKING, PANEL	71AK4	CBDB	CBDB	1
F15	CKT BKR 72CBE003	42CCA	CBDB	CBDB	A
F15	CKT BKR 72CBE004	42CCA	CBDB	CBDB	A
F15	CKT BKR 72CBE005	42CCA	CBDB	CBDB	A
F15	ATTITUDE/HEADING REF DATA		CBC	CBC	AAAAA
F15	AHRS DATA		DACA	DACA	11111111
F15	AHRS DATA		MDA	MDA	11111111
F15	AMPLIFIER, ELECT CONTROL	71FA0	CBE	CBE	8
F15	MODULE, COMPENSATING	71FAA	CBE	CBE	8
F15	POWER MODULE CC	71FAB	CBE	CBE	A
F15	DATA PROCESS CC	71FAD	CBE	CBE	8
F15	CONTROL CC	71FAF	CBE	CBE	8
F15	INTERFACE A CC	71FAG	CBE	CBE	8
F15	A/D CONV CC	71FAH	CBE	CBE	8
F15	CURRENT SERVO CC	71FAJ	CBE	CBE	8
F15	ERECTION CONTROL CC	71FAK	CBE	CBE	8
F15	OUTER ROLL SERVO CC	71FAL	CBE	CBE	8
F15	AMP SUBASSY	71FAM	CBE	CBE	8

PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

000000001111111112222222223333333334444444445555555556666666667777777778
12345678901234567890123456789012345678901234567890123456789012345678901234567890

F15	POWER SUPPLY CC	71FAN	CBFM	CBE	8
F15	INTERFACE B CC	71FAP	CBEN	CBE	8
F15	ARITHMETIC CC	71FAQ	CREP	CBE	8
F15	I/O CC	71FAR	CBEQ	CBE	8
F15	POWER REGULATOR CC	71FAS	CBER	CBE	8
F15	GYRO DISPLACEMENT	71FBO	CBES	CPE	A
F15	CONTROL COMPASS	71FCO	CBET	CBE	8
F15	DETECTOR, MAG AZIMUTH	71FEO	CBEU	CBE	1
F15	CKT BKR 85CBC004	42CCG	CREV	CBE	A
F15	CKT BKR 85CBC005	42CCG	CBEW	CBE	A
F15	CKT BKR 85CBC006	42CCG	CBEX	CBE	A
F15	TACAN DATA		CBF	CBC	111111100
F15	RECEIVER-TRANSMITTER	71DAO	CBFA	CBF	8
F15	POWER AMP	71DAA	CBFB	CBF	8
F15	FREQ GEN	71DAB	CBFC	CBF	8
F15	DECODER	71DAC	CBFO	CBF	8
F15	INTERNAL CONTROL	71DAD	CBFE	CBF	8
F15	BEARING COMPUTER	71DAE	CBFF	CBF	8
F15	RANGE COMPUTER	71DAF	CBFG	CBF	2
F15	CIRCULATOR-MONITOR	71DAG	CBFH	CBF	8
F15	SELF TEST	71DAH	CBFJ	CBF	0
F15	POWER SUPPLY	71DAK	CBFK	CBF	8
F15	CHASSIS	71DAM	CBFL	CBF	1
F15	INTERFACE ASSY	71DAN	CBFM	CBF	8
F15	ELECT COMP ASSY	71DAP	CBFN	CBF	8
F15	ELECT COMP ASSY	71DAQ	CBFP	CBF	8
F15	MODULE, DIGITAL INTERFACE	71DAS	CBFQ	CBF	8
F15	BOARD, CONNECTOR	71DAT	CBFR	CBF	8
F15	CARD DATA I/O	71DAU	CBFS	CBF	8
F15	CARD, ROUTINE CONTROL	71DAV	CBFT	CBF	8
F15	CARD, PAR/SERIAL CONV	71DAW	CBFU	CBF	8
F15	CARD, PAR/SERIAL CONV	71DAX	CBFV	CBF	8
F15	CARD, CONT WORD STORE	71DAY	CBFW	CBF	8
F15	CARD BIT CONTROL	71DAZ	CBFX	CBF	0
F15	CARD, SUPP PULSE OUT	71DA1	CBFY	CBF	8
F15	CARD, BRNG RATE	71DA2	CBFZ	CBF	8
F15	ANTENNA AS-2817	71DBO	CBFZA	CBF	1
F15	ANTENNA AS-2799	71DCO	CBFZB	CBF	1
F15	SWITCH, RF TRANS LINE	71DDO	CBFZC	CBF	5
F15	ILS/TACAN CONTROL PANEL	63BDO	CBFZD	CBF	8
F15	CKT BKR 78CRE010	42CCA	CBFZE	CBF	A
F15	CKT BKR 73CRE003	42CCA	CBFZF	CBF	A
F15	CHASSIS	63BDA	CBFZG	CBF	1
F15	PANEL, EDGE LIGHT	63RDB	CBFZH	CBF	0
F15	CKT CARD ASSY, TACAN	63RDC	CBFZJ	CBF	8
F15	MODULE RECEIVER RE-1	71DAL	CBFZK	CBF	8
F15	ILS STEERING		CBG	CBC	0000000A0
F15	RECEIVER, RADIO	71CAO	CBGA	CBG	8
F15	REC ASSY, LOCALIZER	71CAA	CBGB	CBG	8
F15	REC ASSY, GLIDESLOPE	71CAB	CBGC	CBG	8

PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

000000000111111111222222222333333333344444444445555555555666666666677777777778
12345678901234567890123456789012345678901234567890123456789012345678901234567890

F15	REC,MKR BCN	71CAC	CBGD	CBG	1
F15	INST ASSY,LOCAL/GS	71CAD	CBGE	CBG	8
F15	FREQ CONTROL	71CAE	CBGF	CRG	8
F15	INVERTER	71CAF	CBGG	CBG	A
F15	PWR SUPPLY NO 1	71CAG	CBGH	CBG	A
F15	PWR SUPPLY NO 2	71CAH	CBGJ	CBG	A
F15	CHASSIS ASSY	71CAJ	CBGK	CRG	1
F15	ANTENNA AS-2796	71CFO	CBGL	CBG	1
F15	ANTENNA AS-2704	71CCO	CBGM	CBG	8
F15	CKT BKR 74CBE003	42CCA	CBGN	CBG	A
F15	ILS/TACAN CONTROL PANEL	63BDO	CBGP	CBG	8
F15	CHASSIS	63BDA	CBGQ	CBG	1
F15	PANEL,EDGE LIGHT	63BDB	CBGR	CBG	0
F15	ADF BEARING		CBH	CBG	111111100
F15	AMPLIFIER,ELECTRONIC	71BDO	CBHA	CBH	8
F15	CHASSIS	71BDA	CBHB	CBH	1
F15	PREAMP	71BDB	CBHC	CBH	8
F15	POWER SUPPLY MODULE	71BDC	CBHD	CBH	8
F15	BIT MODULE	71BDD	CBHE	CBH	0
F15	ANTENNA CONTROL MODULE	71BDE	CBHF	CBH	8
F15	FILTER/DET MODULE	71BDF	CBHG	CBH	8
F15	CLOCK/COUNTER MODULE	71BDG	CBHH	CBH	8
F15	HSI INTERFACE MODULE	71BDH	CBHJ	CBH	8
F15	POWER SUPPLY MODULE	71BDJ	CBHK	CBH	8
F15	POWER INPUT MODULE	71BDK	CBHL	CBH	8
F15	ANTENNA	71BEO	CBHM	CBH	8
F15	CKT BKR 75CBC003	42CCG	CBHN	CBH	A
F15	NAVIGATION DISPLAYS		CBJA	CB	111111111
F15	STEERING		CBKA	CBJA	111111111
F15	REDUNDANCY ATTENUATION		CBKB	CBKA	111111111
F15	AI STEERING		CBKC	CBKB	111111111
F15	INDICATOR,ATT AUR-39/A	51ADO	CBKCA	CBKC	A
F15	CKT BKR 94CBC003	42CCG	CBKCB	CBKC	A
F15	HSI STEERING		CBKD	CBKB	111111111
F15	INDICATOR,HSI	51NAO	CBKDA	CBKD	A
F15	HUD STEERING		CBKE	CBKB	111111111
F15	DISPLAY UNIT	74KAO	CBKEA	CBKE	8
F15	CKT CARD,LIN CORR	74KAH	CBKEB	CBKE	8
F15	CKT CARD,AUTO BRITE	74KAC	CBKEC	CBKE	1
F15	CKT CARD,CONT.BORESIGHT	74KAE	CBKED	CBKE	8
F15	CKT CARD,AMP,DEFLECT	74KAF	CBKEE	CBKE	8
F15	LOW VOLT,PWR SUPPLY	74KAG	CBKEF	CBKE	A
F15	HI VOLT PWR SUPPLY	74KAH	CBKEG	CBKE	A
F15	BLOWER ASSY	74KAK	CBKEH	CBKE	8
F15	ELECTRON TUBE,CATHODE	74KAL	CBKEJ	CBKE	8
F15	SENSOR ASSY,AMBIENT LIGHT	74KAN	CBKEK	CBKE	1
F15	PANEL ASSY,CONTROL	74KAP	CBKEL	CBKE	8
F15	SENSOR ASSY,AUTO BRITE	74KAQ	CBKEM	CBKE	1
F15	COMBINING GLASS ASSY	74KAS	CBKEN	CBKE	5
F15	SENSOR ASSY,CONT BORESIGHT	74KAT	CBKEP	CBKE	8

PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

0000000001111111112222222223333333334444444445555555556666666667777777778
1234567890123456789012345678901234567890123456789012345678901234567890

F15	CKT CARD, BORE ADJ	74KAU	CBKEQ	CBKE	8
F15	COIL, CONNECTOR, TUBE DEFL.	74KAV	CBKER	CBKE	A
F15	MOUNTING BASE, HEAD UP	74KBO	CBKES	CRKE	0
F15	SWITCH ADI MODE	75NAB	CBKET	CBKE	A
F15	CKT BKR 61CBF020	42CDA	CHKEU	CBKE	A
F15	PROCESSOR, SIG DATA	74KCO	CBKEV	CBKE	8
F15	CKT CARD, IO NO.2	74KCB	CRKEW	CBKE	8
F15	CKT CARD, IO NO.3	74KCC	CBKEF	CBKE	8
F15	CKT CARD, DATA MEMORY	74KCD	CBKEY	CBKE	8
F15	CKT CARD, PROGRAM MEM	74KCF	CBKEZ	CBKF	8
F15	CKT CARD, DATA PROC NO 1	74KCF	CBKEZA	CBKE	8
F15	CKT CARD, DATA PROC NO 2	74KCG	CBKEZB	CBKE	8
F15	CKT CARD, DATA PROC NO 3	74KCH	CBKEZC	CBKE	8
F15	CKT CARD, DATA PROC NO 4	74KCJ	CBKEZD	CBKE	8
F15	CKT CARD, WAVE FORM GEN 1	74KCL	CBKEZE	CBKE	8
F15	CKT CARD, WAVE FORM GEN 2	74KCM	CBKEZF	CBKE	8
F15	CKT CARD, WAVE FORM GEN 3	74KCN	CBKEZG	CBKE	8
F15	CKT CARD, WAVE FORM GEN 4	74KCP	CBKEZH	CBKE	8
F15	CKT CARD, WAVE FORM GEN 5	74KCP	CBKEZJ	CBKE	8
F15	PWR SUPP LO VOLT	74KCR	CBKEZK	CBKE	8
F15	CKT CARD IO NO.1	74KCS	CBKEZL	CRKE	8
F15	CKT CARD, IO NO.4	74KCT	CBKEZM	CBKE	8
F15	FILTER ASSY, PWR	74KCU	CBKEZN	CRKE	8
F15	CKT CARD, MOTHER BOARD	74KCV	CBKEZP	CRKE	8
F15	CKT BKR 90CBEO04	42CCA	CBKEZQ	CBKE	A
F15	CKT BKR 90CBEO07	42CCA	CBKEZR	CBKE	A
F15	CKT BKR 90CBEO08	42CCA	CBKEZS	CBKE	A
F15	CKT BKR 90CBEO09	42CCA	CBKEZT	CBKE	A
F15	PRESENT POSITION		CBLA	CBJA	000000000
F15	CONTROL/INO	71AKO	CBLAA	CBLA	8
F15	CKT CARD LOGIC NO.1	71AKA	CBLAB	CBLA	8
F15	CKT CARD LOGIC NO.2	71AKD	CBLAC	CBLA	8
F15	CKT CARD DATA BUS	71AKG	CBLAD	CBLA	8
F15	CKT CARD DISPLAY LOGIC	71AKK	CBLAE	CBLA	8
F15	POWER SUPPLY	71AKN	CBLAF	CBLA	A
F15	PANEL EDGE LIGHT	71AKR	CBLAG	CBLA	0
F15	BEZEL ASSY	71AKT	CBLAH	CBLA	0
F15	INTERCONNECT ASSY	71AK1	CBLAJ	CBLA	1
F15	BACKING PANEL	71AK4	CBLAK	CBLA	1
F15	CKT BKR 72CBEO03	42CCA	CBLAL	CBLA	A
F15	CKT BKR 72CBEO04	42CCA	CBLAM	CBLA	A
F15	CKT BKR 72CBEO05	42CCA	CBLAN	CBLA	A
F15	RANGE		CBMA	CBJA	111111100
F15	REDUNDANCY ATTENUATION		CBMB	CBMA	111111111
F15	HSI RANGE		CBMC	CBMB	111111111
F15	INDICATOR HSI	51NAO	CBMCA	CBMC	A
F15	NCI RANGE		CBMD	CBMB	111111111
F15	CONTROL IND	71AKO	CBMDA	CBMD	8
F15	CKT CARD, LOGIC NO 1	71AKA	CBMDB	CBMD	8
F15	CKT CARD, LOGIC NO 2	71AKD	CBMDC	CBMD	8

AD-A054 496

ARINC RESEARCH CORP ANNAPOLIS MD
DEVELOPMENT OF AIR FORCE FLIGHT SAFETY MODELS. VOLUME 15. F-15 --ETC(U)
SEP 76


F09603-72-A-1132

NL

UNCLASSIFIED

C54-01-1-1406-VOL-15

20F2
AD
A054496

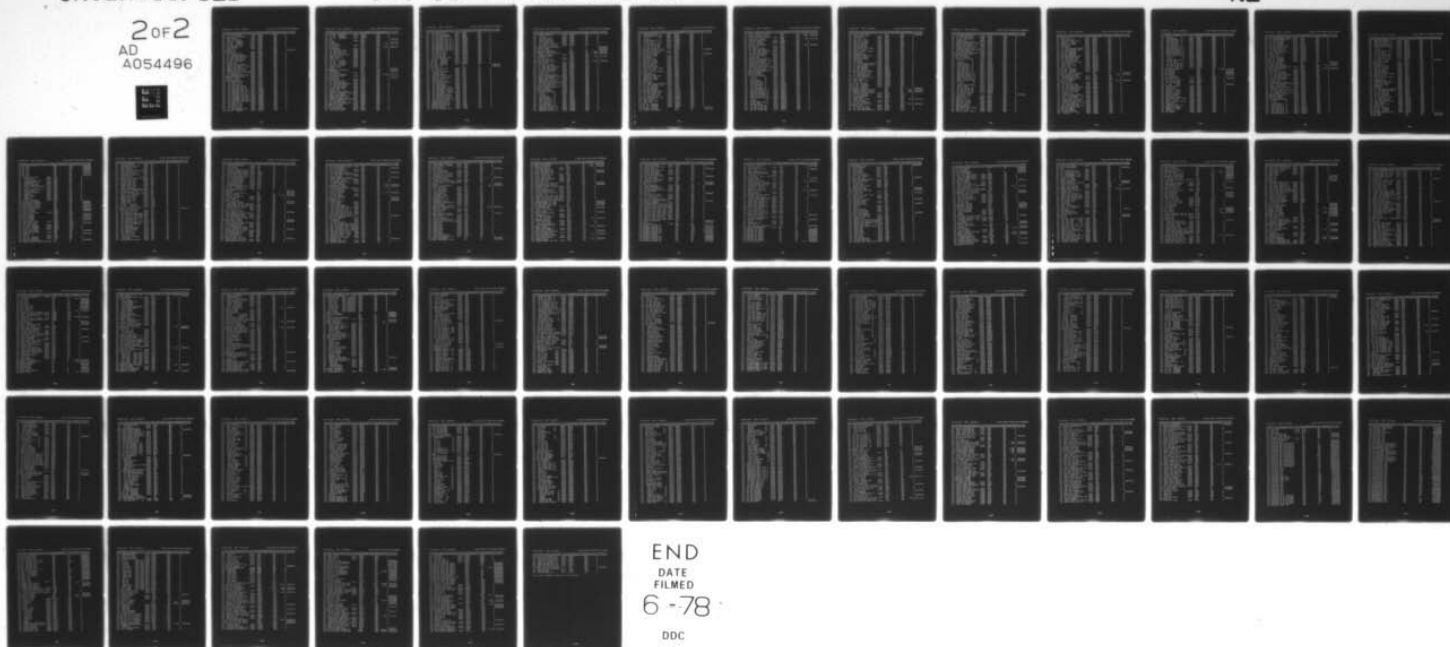

END
DATE
FILMED

6 -78

DDC

PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

0000000001111111112222222223333333334444444445555555556666666667777777778
12345678901234567890123456789012345678901234567890123456789012345678901234567890

F15	CKT CARD DATA BUS	71AKG	CBMOD	CBMD	8
F15	CKT CARD DISPLAY LOGIC	71AKK	CBMDE	CBMD	8
F15	POWER SUPPLY	71AKN	CBMDF	CBMD	8
F15	PANEL EDGE LIGHT	71AKR	CBMDG	CBMD	0
F15	CKT BKR 72CBE003	42CCA	CBMDJ	CBMD	A
F15	CKT BKR 72CBE004	42CCA	CBMDK	CBMD	A
F15	CKT BKR 72CBE005	42CCA	CBMDL	CBMD	A
F15	INTERCONNECT ASSY	71AK1	CBMDM	CBMD	1
F15	BACKING PANEL	71AK4	CBMDN	CBMD	1
F15	BEZEL ASSY	71AKT	CBMDU	CBMD	0
F15	HUD RANGE		CBME	CBMB	111111111
F15	DISPLAY UNIT	74KAO	CBMEA	CBME	8
F15	CKT CARD,LIN CORR	74KAB	CBMEB	CBME	8
F15	CKT CARD,AUTO BRITE	74KAC	CBMEC	CBME	1
F15	CKT CARD,CONT.BORESIGHT	74KAE	CBMED	CBME	8
F15	CKT CARD,AMP.DEFLECT	74KAF	CBMEE	CBME	8
F15	LOW VOLT, PWR SUPPLY	74KAG	CBMEF	CBME	A
F15	HI VOLT PWR SUPPLY	74KAH	CBMEG	CBME	A
F15	BLOWER ASSY	74KAK	CBMEH	CBME	8
F15	ELECTRON TUBE,CATHODE	74KAL	CBMEJ	CBME	8
F15	SENSOR ASSY,AMBIENT LIGHT	74KAN	CBMEK	CBME	1
F15	PANEL ASSY CONTROL	74KAP	CBMEL	CBME	8
F15	SENSOR ASSY,AUTO BRITE	74KAQ	CBMEM	CBME	1
F15	COMBINING GLASS ASSY	74KAS	CBMEN	CBME	5
F15	SENSOR ASSY,CONT. BORESIGHT	74KAT	CBMEP	CBME	8
F15	CKT CARD,BORE ADJ	74KAU	CBMEQ	CBME	8
F15	COIL,CONNECTOR,TUBE DEFL	74KAV	CBMER	CBME	A
F15	MOUNTING BASE,HEAD UP	74KRO	CBMES	CBME	0
F15	SWITCH ADI MODE	75NAB	CBMET	CBME	A
F15	CKT BKR 61CBF020	42CDA	CBMEU	CBME	A
F15	PROCESSOR,SIG DATA	74KCO	CBMEV	CBME	8
F15	CKT CARD,IO NO.2	74KCB	CBMEW	CBME	8
F15	CKT CARD,IO NO.3	74KCC	CBMEX	CBME	8
F15	CKT CARD DATA MEMORY	74KCD	CBMEY	CBME	8
F15	CKT CARD,PROGRAM MEM	74KCE	CBMEZ	CBME	8
F15	CKT CARD,DATA PROC NO 1	74KCF	CBMEZA	CBME	8
F15	CKT CARD,DATA PROC NO 2	74KCG	CBMEZH	CBME	8
F15	CKT CARD,DATA PROC NO 3	74KCH	CBMEZC	CBME	8
F15	CKT CARD,DATA PROC NO 4	74KCJ	CBMEZD	CBME	8
F15	CKT CARD,WAVE FORM GEN 1	74KCL	CBMEZE	CBME	8
F15	CKT CARD,WAVE FORM GEN 2	74KCM	CBMEZF	CBME	8
F15	CKT CARD,WAVE FORM GEN 3	74KCN	CBMEZG	CBME	8
F15	CKT CARD,WAVE FORM GEN 4	74KCP	CBMEZH	CBME	8
F15	CKT CARD,WAVE FORM GEN 5	74KCC	CBMEZJ	CBME	8
F15	PWR SUPP LO VOLT	74KCR	CBMEZK	CBME	8
F15	CKT CARD,IO NO.1	74KCS	CBMEZL	CBME	8
F15	CKT CARD,IO NO.4	74KCT	CBMEZM	CBME	8
F15	FILTER ASSY,PWR	74KCU	CBMEZN	CBME	8
F15	CKT CARD,MOTHER BOARD	74KCV	CBMEZP	CBME	8
F15	CKT BKR 90CBE004	42CCA	CBMEZQ	CBME	A

PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

```

0000000001111111112222222223333333334444444445555555556666666667777777778
1234567890123456789012345678901234567890123456789012345678901234567890
F15 CKT BKR 90CBE007 42CCA CBMEZR CBME A
F15 CKT BKR 90CBE008 42CCA CBMEZS CBME A
F15 CKT BKR 90CBE009 42CCA CBMEZT CBME A
F15 TIME CBNA CBJA 000000000
F15 CLOCK 51MAO CBNA 1
F15 BEARING CBPA CBJA 111111100
F15 HSI BEARING CBPB CBPA CBPC 111111111
F15 INDICATOR HSI 51NAO CBPBA CBPB A
F15 NCI BEARING CBPC CBPA K CBPR AAAAAAAAAA
F15 CONTROL.IND 71AKO CBPCA CBPC 8
F15 CKT CARD,LOGIC NO.1 71AKA CBPCB CBPC 8
F15 CKT CARD,LOGIC NO.2 71AKO CBPCC CBPC 8
F15 CKT CARD DATA BUS 71AKG CBPCD CBPC 8
F15 CKT CARD DISPLAY LOGIC 71AKK CBPCE CBPC 8
F15 POWER SUPPLY 71AKN CBPCF CBPC 8
F15 PANEL,EDGE LIGHT 71AKR CBPCG CBPC 0
F15 BEZEL ASSY 71AKT CBPCH CBPC 0
F15 CKT BKR 72CBE003 42CCA CBPCJ CBPC A
F15 CKT BKR 72CBE004 42CCA CBPCK CBPC A
F15 CKT BKR 72CBE005 42CCA CBPCL CBPC A
F15 INTERCONNECT ASSY 71AK1 CBPCM CBPC 1
F15 BACKING PANEL 71AK4 CBPCN CBPC 1
F15 HEADING CBQA CBJA 111111111
F15 REDUNDANCY ATTENUATION CBQB CBQA 111111111
F15 HSI HEADING CBQC CBQB 111111111
F15 INDICATOR HSI 51NAO CBQCA CBQC A
F15 STBY COMPASS HEADING CBQD CBQB K CBQC 111111111
F15 COMPASS,STBY MAG 51MBO CBQDA CBQD A
F15 HUD HEADING CBQE CBQB 111111111
F15 DISPLAY UNIT 74KAO CBQEA CBQE 8
F15 CKT CARD,LIN CORR 74KAB CBQEB CBQE 8
F15 CKT CARD,AUTO BRITE 74KAC CBQEC CBQE 1
F15 CKT CARD,CONT.BoRESIGHT 74KAE CBQED CBQE 8
F15 CKT CARD,AMP DEFLECT 74KAF CBQEE CBQE 8
F15 LOW VOLT,PWR SUPPLY 74KAG CBQEF CBQE A
F15 HI VOLT PWR SUPPLY 74KAH CBQEG CBQE A
F15 BLOWER ASSY 74KAK CBQEH CBQE 8
F15 ELECTRON TUBE,CATHODE 74KAL CBQEJ CBQE 8
F15 SENSOR ASSY,AMBIENT LIGHT 74KAN CBQEK CBQE 1
F15 PANEL ASSY,CONTROL 74KAP CBQEL CBQE 8
F15 SENSOR ASSY,AUTO BRITE 74KAQ CBQEM CBQE 1
F15 COMBINING GLASS ASSY 74KAS CBQEN CBQE 5
F15 SENSOR ASSY,CONT BoRESIGHT 74KAT CBQEP CBQE 8
F15 CKT CARD,RORE ADJ 74KAU CBQEQ CBQE 8
F15 COIL,CONNECTOR,TUBE DEFL. 74KAV CBQER CBQE A
F15 MOUNTING BASE,HEAD UP 74KRO CBQES CBQE 0
F15 SWITCH,ADI MODE 75NAB CBQET CBQE A
F15 CKT BKR 61CBF020 42CDA CBQEU CBQE A
F15 PROCESSOR,SIG DATA 74KCO CBQEV CBQE 8
F15 CKT CARD,IO NO.2 74KCB CBQEW CBQE 8

```

PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

0000000001111111112222222223333333334444444445555555556666666667777777778
12345678901234567890123456789012345678901234567890123456789012345678901234567890

F15	CKT CARD, IC NO.3	74KLC	CBQEX	CBQE	8
F15	CKT CARD, DATA MEMORY	74KCD	CBQY	CBQE	8
F15	CKT CARD PROGRAM MEM	74KCE	CBQEZ	CBQE	8
F15	CKT CARD, DATA PROC NO 1	74KCF	CBQZA	CBQE	8
F15	CKT CARD, DATA PROC NO 2	74KCG	CBQZB	CBQE	8
F15	CKT CARD, DATA PROC NO 3	74KCH	CBQZC	CBQE	8
F15	CKT CARD, DATA PROC NO 4	74KCJ	CBQZD	CBQE	9
F15	CKT CARD, WAVE FORM GEN 1	74KCL	CBQZE	CBQE	8
F15	CKT CARD, WAVE FORM GEN 2	74KCM	CBQZF	CBQE	8
F15	CKT CARD, WAVE FORM GEN 3	74KCN	CBQZG	CBQE	8
F15	CKT CARD, WAVE FORM GEN 4	74KCP	CBQZH	CBQE	8
F15	CKT CARD, WAVE FORM GEN 5	74KCQ	CBQZJ	CBQE	8
F15	PWR SUPP LO VOLT	74KCR	CBQZK	CBQE	8
F15	CKT CARD, IO NO.1	74KCS	CBQZL	CBQE	8
F15	CKT CARD, IO NO.4	74KCT	CBQZM	CBQE	8
F15	FILTER ASSY, PWR	74KCU	CBQZN	CBQE	8
F15	CKT CARD, MOTHER BOARD	74KCV	CBQZP	CBQE	8
F15	CKT BKR 90CB004	42CCA	CBQZQ	CBQE	A
F15	CKT BKR 90CB007	42CCA	CBQZR	CBQE	A
F15	CKT BKR 90CB008	42CCA	CBQZS	CBQE	A
F15	CKT BKR 90CB009	42CCA	CBQZT	CBQE	A
F15	IDENTIFICATION		CC	C	000000000
F15	IFF IDENT		CCA	CC	AAAAAAAAA
F15	REC-TRANS RT-1063B	65AA0	CCAA	CCA	8
F15	BIT RF ASSY	65AAA	CCAB	CCA	1
F15	RECEIVER ASSY, DUAL	65AAB	CCAC	CCA	8
F15	DIPLEXER ASSY A	65AAC	CCAD	CCA	8
F15	DIPLEXER ASSY B	65AAD	CCAE	CCA	8
F15	DIVERSITY SWITCH ASSY	65AAE	CCAF	CCA	8
F15	MODULE, L BAND SOURCE	65AAF	CCAG	CCA	8
F15	AMP ASSY, ARRAY	65AAG	CCAH	CCA	8
F15	POWER SUPPLY ASSY	65AAH	CCAJ	CCA	A
F15	CKT CARD, PULSE WIDTH	65AAJ	CCAK	CCA	8
F15	CKT CARD, CLOCK	65AAK	CCAL	CCA	8
F15	CKT CARD, DECODER	65AAL	CCAM	CCA	8
F15	CKT CARD, CODER A AND B	65AAM	CCAN	CCA	8
F15	CKT CARD CODER C AND D	65AAN	CCAP	CCA	8
F15	CKT CARD, AUTO OVERLOAD	65AAP	CCAQ	CCA	1
F15	CKT CARD, MODE 4 INTERFA	65AAQ	CCAR	CCA	1
F15	CKT CARD MODE 4 CONT	65AAR	CCAS	CCA	1
F15	CKT CARD, BIT EVALUATE	65AAS	CCAT	CCA	1
F15	CKT CARD, VIDEO PROCESS	65AAT	CCAU	CCA	A
F15	CKT CARD, SUPPRESSOR	65AAU	CCAV	CCA	8
F15	CKT CARD BIT STIMULATOR	65AAV	CCAW	CCA	1
F15	FRONT PANEL/CHASSIS	65AAW	CCAX	CCA	8
F15	ANTENNA, AS-2817, 2 EA	63ADC	CCAY	CCA	1
F15	COMPUTER, KIT-1A/TSEC	65ABC	CCAZ	CCA	1
F15	SWITCH ASSY, IFF, EZPL	65AEC	CCAZA	CCA	5
F15	ANTENNA SELECTOR	63AC0	CCAZB	CCA	5
F15	INT COMM CONTROL PANEL	63BCC	CCAZC	CCA	5

PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

0000000001111111112222222223333333334444444445555555556666666667777777778
1234567890123456789012345678901234567890123456789012345678901234567890

F15 CONTROL PANEL,IFF	63BF0	CCA2D	CCA	8
F15 CHASSIS	63BFA	CCA2E	CCA	8
F15 CKT CARD, LOGIC	63BF8	CCA2F	CCA	8
F15 CKT,PWR SUPPLY	63BFC	CCA2G	CCA	A
F15 PANEL,EDGE LIGHT	63BFD	CCA2H	CCA	1
F15 CKT CARD,IFF RIT	63BFE	CCA2J	CCA	0
F15 CKT BKR,IFF 78CR009	42CCG	CCA2L	CCA	A
F15 CKT BKR,KIT 80CB002	42CCA	CCA2M	CCA	1
F15 INFORMATION AND DISPLAYS		D		AAAAAAAAA
F15 FLIGHT STATUS		DA	D	011111130
F15 ALTITUDE DISPLAYS		DAA	DA	00A111AA0
F15 NORM ALTITUDE DISPLAY		DAAA	DAA F	111111111
F15 STANDBY ALTITUDE DISPLAY		DAAB	K DAAA	AAAAAAAAA
F15 STANDBY ALTIMETER	51AK0	DAABA	DAAB	A
F15 ALTIMETER DISPLAY		DAAC	DAAA	DAAD 111111111
F15 ALTIMETER	51AH0	DAACA	DAAC	A
F15 CKT BKR 96CR003	42CFA	DAACB	DAAC	A
F15 HUD ALTITUDE DISPLAY		DAAD	DAAA	K DAAC AAAAAAAAAA
F15 DISPLAY UNIT	74KA0	DAADA	DAAD	8
F15 CKT CARD LIN CORR	74KAB	DAADB	DAAD	8
F15 CKT CARD AUTO BRITE	74KAC	DAADC	DAAD	1
F15 CKT CARD,CONT.BORESIGHT	74KAE	DAADD	DAAD	8
F15 CKT CARD,AMP,DEFLECT	74KAF	DAADE	DAAD	8
F15 LOW VOLT, PWR SUPPLY	74KAG	DAADF	DAAD	A
F15 HI VOLT PWR SUPPLY	74KAH	DAADG	DAAD	A
F15 BLOWER ASSY	74KAK	DAADH	DAAD	8
F15 ELECTRON TUBE,CATHODE	74KAL	DAADJ	DAAD	8
F15 SENSOR ASSY,AMBIENT LIGHT	74KAN	DAADK	DAAD	1
F15 PANEL ASSY,CONTROL	74KAP	DAADL	DAAD	8
F15 SENSOR ASSY, AUTO BRITE	74KAQ	DAADM	DAAD	1
F15 COMBINING GLASS ASSY	74KAS	DAADN	DAAD	5
F15 SENSOR ASSY,CONT BORESIGHT	74KAT	DAADP	DAAD	8
F15 CKT CARD, BORE ADJ	74KAU	DAADQ	DAAD	8
F15 COIL,CONNECTOR,TUBE DEFL.	74KAV	DAADR	DAAD	A
F15 MOUNTING BASE,HEAD UP	74KRO	DAADS	DAAD	0
F15 SWITCH,ADIMODE	75NAB	DAADT	DAAD	A
F15 CKT BKR 61CRF020	42CDA	DAADU	DAAD	A
F15 PROCESSOR,SIG DATA	74KCO	DAADV	DAAD	8
F15 IO NO.2 CC	74KCB	DAADW	DAAD	8
F15 IO NO.3 CC	74KCC	DAADX	DAAD	8
F15 DATA MEMORY CC	74KCD	DAADY	DAAD	8
F15 PROGRAM MEMORY CC	74KCE	DAADZ	DAAD	8
F15 DATA PROC.NO.1 CC	74KCF	DAADZA	DAAD	8
F15 DATA PROC.NO.2 CC	74KCG	DAADZH	DAAD	8
F15 DATA PROC.NO.3 CC	74KCH	DAADZC	DAAD	8
F15 DATA PROC.NO.4 CC	74KCJ	DAADZD	DAAD	8
F15 WAVEFORM GEN.NO.1 CC	74KCL	DAADZE	DAAD	8
F15 WAVEFORM GEN.NO.2 CC	74KCM	DAADZF	DAAD	8
F15 WAVEFORM GEN.NO.3 CC	74KCN	DAADZG	DAAD	8
F15 WAVEFORM GEN.NO.4 CC	74KCP	DAADZH	DAAD	8

PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

```

0000000001111111112222222223333333334444444445555555556666666667777777778
12345678901234567890123456789012345678901234567890123456789012345678901234567890
F15 WAVEFORM GEN.NO.5 CC 74KCQ DAADZJ DAAD 8
F15 POWER SUPPLY LO VOLT 74KCK DAADZK DAAD A
F15 IO NO.1 CC 74KCS DAADZL DAAD 8
F15 IO NO.4 CC 74KCT DAADZM DAAD 8
F15 FILTER ASSY, POWER 74KCU DAADZN DAAD 8
F15 MOTHER BOARD CC 74KCV DAADZP DAAD 8
F15 CKT BKR 90 CBE 004 42CCA DAADZQ DAAD A
F15 CKT BKR 90 CBE 007 42CCA DAADZR DAAD A
F15 CKT BKR 90 CBE 008 42CCA DAADZS DAAD A
F15 CKT BKR 90 CBE 009 42CCA DAADZT DAAD A
F15 VERTICAL VELOCITY DISPLAY DAAD DAAD 000000000
F15 INDICATOR, VERT SPEED 51AFO DAADZU DAAD A
F15 CKT BKR 97CBL003 42CFA DAADZV DAAD A
F15 CC ALTITUDE DATA DAAD DAAD AAAAAA
F15 COMPUTER,DIGITAL 57AA0 DAADZJ DAAD 8
F15 FILTER,RFI 57AAB DAADZK DAAD 1
F15 PAGE,CPU CLOCK 57AAF DAADZL DAAD 8
F15 PAGE,CPU LO DATA 57AAG DAADZM DAAD 8
F15 PAGE,CPU HI DATA 57AAH DAADZN DAAD 8
F15 PAGE,CPU CONTROL 57AAJ DAADZO DAAD 8
F15 PAGE,IO SERIAL 57AAK DAADZP DAAD 8
F15 PAGE,MEMORY CORE 57AAL DAADZQ DAAD 8
F15 PAGE,MAIN STORE TIMING 57AAM DAADZR DAAD 8
F15 PAGE,IO TR REC 57AAN DAADZS DAAD 8
F15 PAGE,IO SERIAL CONTROL 57AAP DAADZT DAAD 8
F15 RELAY ASSY 57AAQ DAADZU DAAD 8
F15 CONNECTOR ASSY 57AAR DAADZV DAAD 1
F15 BACKPANEL MAIN STORE 57AAS DAADZJ DAAD 1
F15 HARNESS,AC POWER 57AAT DAADZK DAAD 1
F15 HARNESS,DC POWER 57AAU DAADZL DAAD 1
F15 HARNESS,IO 57AAV DAADZM DAAD 1
F15 PWR SUPPLY 57AAX DAADZN DAAD 8
F15 CKT CARD,CONTROL/SEQUENCE 57AAY DAADZO DAAD 8
F15 CKT CARD,INTERNAL VOLT 57AAZ DAADZP DAAD 8
F15 CKT BKR 84CBL002 42CFA DAADZQ DAAD A
F15 CKT BKR 84CBL003 42CFA DAADZR DAAD A
F15 CKT BKR 84CBL004 42CFA DAADZS DAAD A
F15 CONTROL-IND,NAV,C-8849 71AKO DAADZT DAAD 8
F15 CKT CARD,LOGIC NO.1 71AKA DAADZU DAAD 8
F15 CKT CARD,LOGIC NO.2 71AKD DAADZV DAAD 8
F15 CKT CARD,DATA BUS 71AKG DAADZJ DAAD 8
F15 CKT CARD,DISPLAY LOGIC 71AKK DAADZK DAAD 8
F15 POWER SUPPLY 71AKN DAADZL DAAD A
F15 PANEL,EDGE LIGHT 71AKR DAADZM DAAD 1
F15 BEZEL ASSY 71AKT DAADZN DAAD 0
F15 CKT BKR 72CBE003 42CCA DAADZO DAAD A
F15 CKT BKR 72CBE004 42CCA DAADZP DAAD A
F15 CKT BKR 72CBE005 42CCA DAADZQ DAAD A
F15 AIRSPEED DISPLAYS DAB DA 0A1010140
F15 AIRSPEED ATTENUATION DABA DAB 111111111

```

PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

```

0000000001111111112222222222333333333344444444445555555555666666666677777777778
12345678901234567890123456789012345678901234567890123456789012345678901234567890
F15 NORMAL AIRSPEED DISPLAYS DABH DABA DABC 111111111
F15 STANDBY AIRSPEED DISPLAY DARC DABA K DABB AAAAAAAAAA
F15 INDICATOR,STBY AIRSPEED 51AGO DABCA DAHC A
F15 FLIGHT INST DISPLAY DABD DABB DABE 111111111
F15 AIRSPEED INDICATOR 51AEO DAHDA DABD 8
F15 MACH INDICATOR 51AFO DAHDB DABD 1
F15 CKTBKR 95CBL003 42CFA DABDC DABD A
F15 HUD AIRSPEED DISPLAY DABE DABB K DABD AAAAAAAAAA
F15 DISPLAY UNIT 74KAO DABEA DABE 8
F15 CKT CARD LIN CORR 74KAB DABEB DABE 8
F15 CKT CARD AUTO BRITE 74KAC DABEC DABE 1
F15 CKT CARD,CONT.BORESIGHT 74KAE DABED DABE 8
F15 CKT CARD,AMP,DEFLECT 74KAF DABEE DABE 8
F15 LOW VOLT, PWR SUPPLY 74KAG DABEF DABE A
F15 HI VOLT PWR SUPPLY 74KAH DABEG DABE A
F15 BLOWER ASSY 74KAK DABEH DABE 8
F15 ELECTRON TURE,CATHODE 74KAL DABEJ DABE 8
F15 SENSOR ASSY,AMBIENT LIGHT 74KAN DABEK DABE 1
F15 PANEL ASSY,CONTROL 74KAP DABEL DABE 8
F15 SENSOR ASSY, AUTO BRITE 74KAQ DABEM DABE 1
F15 COMBINING GLASS ASSY 74KAS DABEN DABE 5
F15 SENSOR ASSY,CONT BORESIGHT 74KAT DABEP DABE 8
F15 CKT CARD, BORE ADJ 74KAU DABEQ DABE 8
F15 COIL,CONNECTOR,TUBE DEFL. 74KAV DABER DABE A
F15 MOUNTING BASE,HEAD UP 74KBO DABES DABE 0
F15 SWITCH,ADIMODE 75NAB DABET DABE A
F15 CKT BKR 61CBF020 42CDA DABEU DABE A
F15 PROCESSOR,SIG DATA 74KCO DABEV DABE 8
F15 IO NO.2 CC 74KCB DABEW DABE 8
F15 IO NO.3 CC 74KCC DABEX DABE 8
F15 DATA MEMORY CC 74KCD DABEY DABE 8
F15 PROGRAM MEMORY CC 74KCE DABEZ DABE 8
F15 DATA PROC.NO.1 CC 74KCF DABEZA DABE 8
F15 DATA PROC.NO.2 CC 74KCG DABEZB DABE 8
F15 DATA PROC.NO.3 CC 74KCH DABEZC DABE 8
F15 DATA PROC.NO.4 CC 74KCI DABEZD DABE 8
F15 WAVEFORM GEN.NO.1 CC 74KCL DABEZE DABE 8
F15 WAVEFORM GEN.NO.2 CC 74KCM DABEZF DABE 8
F15 WAVEFORM GEN.NO.3 CC 74KCN DABEZG DABE 8
F15 WAVEFORM GEN.NO.4 CC 74KCP DABEZH DABE 8
F15 WAVEFORM GEN.NO.5 CC 74KCQ DABEZJ DABE 8
F15 POWER SUPPLY LO VOLT 74KCR DABEZK DABE A
F15 IO NO.1 CC 74KCS DABEZL DABE 8
F15 IO NO.4 CC 74KCT DABEZM DABE 8
F15 FILTER ASSY, POWER 74KCU DABEZN DABE 8
F15 MOTHER BOARD CC 74KCV DABEZP DABE 8
F15 CKT BKR 90 CBE 004 42CCA DABEZQ DABE A
F15 CKT BKR 90 CBE 007 42CCA DABEZR DABE A
F15 CKT BKR 90 CRE 008 42CCA DABEZS DABE A
F15 CKT BKR 90 CBE 009 42CCA DABEZT DABE A

```

PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

0000000001111111112222222223333333333344444444455555555566666666677777777778
1234567890123456789012345678901234567890123456789012345678901234567890

F15 CC AIR SPEED DATA		DABF	DABE	AAAAAAAAA
F15 COMPUTER,DIGITAL	57AAO	DABFA	DABF	8
F15 FILTER,RFI	57AAB	DABFB	DABF	1
F15 PAGE,CPU CLOCK	57AAF	DABFC	DABF	8
F15 PAGE,CPU LO DATA	57AAG	DABFD	DAHF	8
F15 PAGE,CPU HI DATA	57AAH	DABFE	DABF	8
F15 PAGE,CPU CONTROL	57AAJ	DABFF	DABF	8
F15 PAGE,IO SERIAL	57AAK	DABFG	DABF	8
F15 PAGE,MEMORY CORE	57AAL	DABFH	DABF	8
F15 PAGE,MAIN STORE TIMING	57AAM	DABFJ	DABF	8
F15 PAGE,IO TR REC	57AAN	DABFK	DABF	8
F15 PAGE,IO SERIAL CONTROL	57AAP	DABFL	DABF	8
F15 RELAY ASSY	57AAQ	DABFM	DAHF	8
F15 CONNECTOR ASSY	57AAR	DABFN	DABF	1
F15 BACKPANEL MAIN STORE	57AAS	DABFP	DABF	1
F15 HARNESS,AC POWER	57AAT	DABFQ	DABF	1
F15 HARNESS,DC POWER	57AAU	DABFR	DABF	1
F15 HARNESS,IO	57AAV	DABFS	DABF	1
F15 PWR SUPPLY	57AAX	DABFT	DABF	8
F15 CKT CARD,CONTROL/SEQUENCE	57AAZ	DABFU	DAHF	8
F15 CKT CARD,INTERNAL VOLT	57AAZ	DABFV	DAHF	8
F15 CKT BKR 84CBLO02	42CFA	DABFW	DABF	A
F15 CKT BKR 84CBLO03	42CFA	DABFX	DABF	A
F15 CKT BKR 84CBLO04	42CFA	DABFY	DABF	A
F15 CONTROL-IND,NAV,C-8849	71AKO	DABFZA	DABF	8
F15 CKT CARD,LOGIC NO.1	71AKA	DABFZB	DABF	8
F15 CKT CARD,LIGIC NO.2	71AKD	DABFZC	DABF	8
F15 CKT CARD,DATA BUS	71AKG	DABFZO	DABF	8
F15 CKT CARD,DISPLAY LOGIC	71AKK	DABFZE	DABF	8
F15 POWER SUPPLY	71AKN	DABFZF	DAHF	A
F15 PANEL,EDGE LIGHT	71AKR	DABFZG	DABF	1
F15 BEZEL ASSY	71AKT	DABFZH	DABF	0
F15 CKT BKR 72CBE003	42CCA	DABFZJ	DABF	A
F15 CKT BKR 72CBE004	42CCA	DABFZK	DABF	A
F15 CKT BKR 72CBE005	42CCA	DABFZL	DAHF	A
F15 ATTITUDE DISPLAYS		DAC	DA	E 0000000AO
F15 NORMAL ATTITUDE DISPLAYS		DACA	DAC	DACB 111111111
F15 STANDBY ATTITUDE DISPLAY		DACB	DAC	K DACA AAAAAAAAAA
F15 INDICATOR,STBY,VERT REF	51AJ0	DACRA	DACB	A
F15 CKT BKR 30CBC003	42CLG	DACBB	DACB	A
F15 CKT BKR 30CBC004	42CCG	DACBC	DACB	A
F15 TRANSFORMER	44BFB	DACBD	DACB	A
F15 FLIGHT INST DISPLAY		DACC	DACA	DACD 111111111
F15 INDICATOR,ATT	51AD0	DACCA	DACC	A
F15 CKT BKR 94CBC003	42CCG	DACCB	DACC	A
F15 HUD ATTITUDE DISPLAYS		DACD	DACA	K DACC AAAAAAAAAA
F15 DISPLAY UNIT	74KAO	DACDA	DACD	8
F15 CKT CARD LIN CORR	74KAB	DACDB	DACD	8
F15 CKT CARD AUTO BRITE	74KAC	DACDC	DACD	1
F15 CKT CARD,CONT.BORESIGHT	74KAE	DACDD	DACD	8

PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

000000000111111111222222222333333333344444444445555555555666666666677777777778
12345678901234567890123456789012345678901234567890123456789012345678901234567890

F15	CKT CARD,AMP,DEFLECT	74KAF	DACDE	DACD	8
F15	LOW VOLT, PWR SUPPLY	74KAG	DACDF	DACD	A
F15	HI VOLT PWR SUPPLY	74KAH	DACDG	DACD	A
F15	BLOWER ASSY	74KAK	DACDH	DACD	8
F15	ELECTRON TUBE,CATHODE	74KAL	DACDJ	DACD	8
F15	SENSOR ASSY,AMBIENT LIGHT	74KAN	DACDK	DACD	1
F15	PANEL ASSY,CONTROL	74KAP	DACDL	DACD	8
F15	SENSOR ASSY, AUTO BRITE	74KAQ	DACDM	DACD	1
F15	COMBINING GLASS ASSY	74KAS	DACDN	DACD	5
F15	SENSOR ASSY,CONT BORESIGHT	74KAT	DACDP	DACD	8
F15	CKT CARD, BORE ADJ	74KAU	DACDQ	DACD	8
F15	COIL,CONNECTOR,TUBE DEFL.	74KAV	DACDR	DACD	A
F15	MOUNTING BASE,HEAD UP	74KAW	DACDS	DACD	0
F15	SWITCH,ADIMODE	75NAP	DACDT	DACD	A
F15	CKT BKR 61CBF020	42CDA	DACDU	DACD	A
F15	PROCESSOR,SIG DATA	74KCO	DACDV	DACD	8
F15	IO NO.2 CC	74KCB	DACDW	DACD	8
F15	IO NO.3 CC	74KCC	DACDX	DACD	8
F15	DATA MEMORY CC	74KCD	DACDY	DACD	8
F15	PROGRAM MEMORY CC	74KCE	DACDZ	DACD	8
F15	DATA PROC.NO.1 CC	74KCF	DACDZA	DACD	8
F15	DATA PROC.NO.2 CC	74KCG	DACDZB	DACD	8
F15	DATA PROC.NO.3 CC	74KCH	DACDZC	DACD	8
F15	DATA PROC.NO.4 CC	74KCJ	DACDZD	DACD	8
F15	WAVEFORM GEN.NO.1 CC	74KCL	DACDZE	DACD	8
F15	WAVEFORM GEN.NO.2 CC	74KCM	DACDZF	DACD	8
F15	WAVEFORM GEN.NO.3 CC	74KCN	DACDZG	DACD	8
F15	WAVEFORM GEN.NO.4 CC	74KCP	DACDZH	DACD	8
F15	WAVEFORM GEN.NO.5 CC	74KCQ	DACDZJ	DACD	8
F15	POWER SUPPLY LO VOLT	74KCR	DACDZK	DACD	A
F15	IO NO.1 CC	74KCS	DACDZL	DACD	8
F15	IO NO.4 CC	74KCT	DACDZM	DACD	8
F15	FILTER ASSY, POWER	74KCU	DACDZN	DACD	8
F15	MOTHER BOARD CC	74KCV	DACDZP	DACD	8
F15	CKT BKR 90 CBE 004	42CCA	DACDZQ	DACD	A
F15	CKT BKR 90 CBE 007	42CCA	DACDZR	DACD	A
F15	CKT BKR 90 CBE 008	42CCA	DACDZS	DACD	A
F15	CKT BKR 90 CRE 009	42CCA	DACDZT	DACD	A
F15	CC ATTITUDE DATA		DACF	DACD	8
F15	COMPUTER,DIGITAL	57AAC	DACFA	DACF	8
F15	FILTER,RFI	57AAB	DACFB	DACF	1
F15	PAGE,CPU CLOCK	57AAF	DACFC	DACF	8
F15	PAGE,CPU LO DATA	57AAG	DACFD	DACF	8
F15	PAGE,CPU HI DATA	57AAH	DACFE	DACF	8
F15	PAGE,CPU CONTROL	57AAJ	DACFF	DACF	8
F15	PAGE,IO SERIAL	57AAK	DACFG	DACF	8
F15	PAGE,MEMORY CORE	57AAL	DACFH	DACF	8
F15	PAGE,MAIN STORE TIMING	57AAM	DACFJ	DACF	8
F15	PAGE,IO TR REC	57AAN	DACFK	DACF	8
F15	PAGE,IO SERIAL CONTROL	57AAP	DACFL	DACF	8

AAAAAAAAA

PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

00000000111111112222222222333333333344444444445555555555666666666677777777778
12345678901234567890123456789012345678901234567890123456789012345678901234567890

F15 RELAY ASSY	57AAQ	DACFM	DACF	8
F15 CONNECTOR ASSY	57AAR	DACFN	DACF	1
F15 BACKPANEL MAIN STORE	57AAS	DACFP	DACF	1
F15 HARNESS, AC POWER	57AAT	DACFQ	DACF	1
F15 HARNESS, DC POWER	57AAU	DACFR	DACF	1
F15 HARNESS, ID	57AAV	DACFS	DACF	1
F15 PWR SUPPLY	57AAX	DACFT	DACF	8
F15 CKT CARD, CONTROL/SEQUENCE	57AAY	DACFU	DACF	8
F15 CKT CARD, INTERNAL VOLT	57AAZ	DACFV	DACF	8
F15 CKT BKR 84CBL002	42CFA	DACFW	DACF	A
F15 CKT BKR 84CBL003	42CFA	DACFX	DACF	A
F15 CKT BKR 84CBL004	42CFA	DACFY	DACF	A
F15 CONTROL-IND, NAV, C-8849	71AKO	DACFZA	DACF	8
F15 CKT CARD, LOGIC NO.1	71AKA	DACFZB	DACF	8
F15 CKT CARD, LOGIC NO.2	71AKD	DACFZC	DACF	8
F15 CKT CARD, DATA BUS	71AKG	DACFZD	DACF	8
F15 CKT CARD, DISPLAY LOGIC	71AKK	DACFZE	DACF	8
F15 POWER SUPPLY	71AKN	DACFZF	DACF	A
F15 PANEL, EDGE LIGHT	71AKR	DACFZG	DACF	1
F15 BEZEL ASSY	71AKT	DACFZH	DACF	0
F15 CKT BKR 72CRE003	42CCA	DACFZJ	DACF	A
F15 CKT BKR 72CRE004	42CCA	DACFZK	DACF	A
F15 CKT BKR 72CRE005	42CCA	DACFZL	DACF	A
F15 ANGLE OF ATTACK DISPLAYS		DAD	DA E	000000010
F15 FLT INST AOA DISPLAY		DADA	DAD DADB	111111111
F15 INDICATOR, AOA, LOCAL	51ALO	DADAA	DADA	2
F15 INDICATOR, AOA, OPTIMUM	51ALO	DADAB	DADA	2
F15 CKT BKR 88CBL007	42CFA	DADAC	DADA	A
F15 HUD AOA DISPLAY		DADB	DAD K DADA	888888888
F15 DISPLAY UNIT	74KAO	DADBA	DADB	8
F15 CKT CARD LIN CORR	74KAB	DADBB	DADB	8
F15 CKT CARD AUTO BRITE	74KAC	DADBC	DADB	1
F15 CKT CARD, CONT. BORE SIGHT	74KAE	DADBD	DADB	8
F15 CKT CARD, AMP, DEFLECT	74KAF	DADBE	DADB	8
F15 LOW VOLT, PWR SUPPLY	74KAG	DADBF	DADB	A
F15 HI VOLT PWR SUPPLY	74KAH	DADBG	DADB	A
F15 BLOWER ASSY	74KAK	DADBH	DADB	8
F15 ELECTRON TUBE, CATHODE	74KAL	DADBJ	DADB	8
F15 SENSOR ASSY, AMBIENT LIGHT	74KAN	DADBK	DADB	1
F15 PANEL ASSY, CONTROL	74KAP	DADBL	DADB	8
F15 SENSOR ASSY, AUTO BRITE	74KAQ	DADBM	DADB	1
F15 COMBINING GLASS ASSY	74KAS	DADBN	DADB	5
F15 SENSOR ASSY, CONT BORE SIGHT	74KAT	DADBP	DADB	8
F15 CKT CARD, BORE ADJ	74KAU	DADBQ	DADB	8
F15 COIL, CONNECTOR, TUBE DEFL.	74KAV	DADBR	DADB	A
F15 MOUNTING BASE, HEAD UP	74KRG	DADBS	DADB	0
F15 SWITCH, ADIMODE	75NAB	DADBT	DADB	A
F15 CKT BKR 61CBF020	42CDA	DADBU	DADB	A
F15 PROCESSOR, SIG DATA	74KCO	DADBV	DADB	8
F15 IO NO.2 CC	74KCB	DADBW	DADB	8

PGG095.JIR1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

00000000011111111122222222333333333344444444445555555555666666666677777777778
 12345678901234567890123456789012345678901234567890123456789012345678901234567890

F15	IO NO.3	CC	74KCC	DA0BX	DA0B	8
F15	DATA MEMORY	CC	74KCD	DA0BY	DA0B	8
F15	PROGRAM MEMORY	CC	74KCE	DA0BZ	DA0B	8
F15	DATA PROC.NO.1	CC	74KCF	DA0BZA	DA0B	8
F15	DATA PROC.NO.2	CC	74KCG	DA0BZB	DA0B	8
F15	DATA PROC.NO.3	CC	74KCH	DA0BZC	DA0B	8
F15	DATA PROC.NO.4	CC	74KCJ	DA0BZD	DA0B	8
F15	WAVEFORM GEN.NO.1	CC	74KCL	DA0BZE	DA0B	8
F15	WAVEFORM GEN.NO.2	CC	74KCM	DA0BZF	DA0B	8
F15	WAVEFORM GEN.NO.3	CC	74KCN	DA0BZG	DA0B	8
F15	WAVEFORM GEN.NO.4	CC	74KCP	DA0BZH	DA0B	8
F15	WAVEFORM GEN.NO.5	CC	74KCQ	DA0BZJ	DA0B	8
F15	POWER SUPPLY LO VOLT		74KCR	DA0BZK	DA0B	A
F15	IO NO.1	CC	74KCS	DA0BZL	DA0B	8
F15	IO NO.4	CC	74KCT	DA0BZM	DA0B	8
F15	FILTER ASSY, POWER		74KCU	DA0BZN	DA0B	8
F15	MOTHER BOARD	CC	74KCV	DA0BZP	DA0B	8
F15	CKT BKR 90 CBE 004		42CCA	DA0BZQ	DA0B	A
F15	CKT BKR 90 CBE 007		42CCA	DA0BZR	DA0B	A
F15	CKT BKR 90 CBE 008		42CCA	DA0BZS	DA0B	A
F15	CKT BKR 90 CBE 009		42CCA	DA0BZT	DA0B	A
F15	AOA AURAL WARNING			DA0C	DA0	K DADA 11111111
F15	AOA SENSING			DA0D	BCC	11111111
F15	AOA SENSING			DA0D	DA0	AAAAAAAAAA
F15	AOA SENSING			DA0D	DBA	F11111111
F15	AOA SENSING			DA0D	FCM	11111111
F15	AOA TRANSMITTER	51ED0		DA0DA	DA0D	A
F15	AOA PROBE HEAT			DA0E	DA0D	A
F15	CKT BKR 88CBE008	42CCA		DA0EA	DA0E	A
F15	PROBE HEAT RELAY	42CHA		DA0EB	DA0E	1
F15	CKT BKR 88CBE009	42CDA		DA0EC	DA0E	A
F15	CC AOA DATA			DA0F	DA0B	AAAAAAAAAA
F15	COMPUTER, DIGITAL	57AA0		DA0FA	DA0F	8
F15	FILTER, RFI	57AA8		DA0FB	DA0F	1
F15	PAGE, CPU CLOCK	57AAF		DA0FC	DA0F	8
F15	PAGE, CPU LO DATA	57AAG		DA0FD	DA0F	8
F15	PAGE, CPU HI DATA	57AAH		DA0FE	DA0F	8
F15	PAGE, CPU CONTROL	57AAJ		DA0FF	DA0F	8
F15	PAGE, IO SERIAL	57AAK		DA0FG	DA0F	8
F15	PAGE, MEMORY CORE	57AAL		DA0FH	DA0F	8
F15	PAGE, MAIN STORE TIMING	57AAM		DA0FJ	DA0F	8
F15	PAGE, IO TR REC	57AAN		DA0FK	DA0F	8
F15	PAGE, IO SERIAL CONTROL	57AAP		DA0FL	DA0F	8
F15	RELAY ASSY	57AAQ		DA0FM	DA0F	8
F15	CONNECTOR ASSY	57AAR		DA0FN	DA0F	1
F15	BACKPANEL MAIN STORE	57AAS		DA0FP	DA0F	1
F15	HARNESS, AC POWER	57AAT		DA0FQ	DA0F	1
F15	HARNESS, DC POWER	57AAU		DA0FR	DA0F	1
F15	HARNESS, IO	57AAV		DA0FS	DA0F	1
F15	PWR SUPPLY	57AAX		DA0FT	DA0F	8

PGG095.J1P1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

000000000111111111222222222333333333344444444445555555555666666666677777777778
12345678901234567890123456789012345678901234567890123456789012345678901234567890

F15	CKT CARD, CONTROL /SEQUENCE	57AAV	DADFU	DADF	8
F15	CKT CARD, INTERNAL VOLT	57AAZ	DADFV	DADF	8
F15	CKT BKR 84CRL002	42CFA	DADFW	DADF	A
F15	CKT BKR 84CRL003	42CFA	DADFX	DADF	A
F15	CKT BKR 84CRL004	42CFA	DADFY	DADF	A
F15	CONTROL-IND, NAV, C-8849	71AKO	DADFZA	DADF	8
F15	CKT CARD, LOGIC NO.1	71AKA	DADFZB	DADF	8
F15	CKT CARD, LOGIC NO.2	71AKD	DADFZC	DADF	8
F15	CKT CARD, DATA BUS	71AKG	DADFZD	DADF	8
F15	CKT CARD, DISPLAY LOGIC	71AKK	DADFZE	DADF	8
F15	POWER SUPPLY	71AKN	DADFZF	DADF	A
F15	PANEL, EDGE LIGHT	71AKR	DADFZG	DADF	1
F15	REZEL ASSY	71AKT	DADFZH	DADF	0
F15	CKT BKR 72CBEO03	42CCA	DADFZJ	DADF	A
F15	CKT BKR 72CBEO04	42CCA	DADFZK	DADF	A
F15	CKT BKR 72CBEO05	42CCA	DADFZL	DADF	A
F15	G-LOAD DISPLAYS		DAE	DA	000050000
F15	G-LOAD ATTENUATION		DAEA	DAE	111111111
F15	FLIGHT INST DISPLAY		DAEB	DAEA	111111111
F15	INDICATOR, ACCELEROMETER	51AMO	DAERA	DAER	A
F15	HUD G-LOAD DISPLAY		DAEC	DAEA	K DAEB
F15	DISPLAY UNIT	74KAQ	DAECA	DAEC	8
F15	CKT CARD LIN CORR	74KAB	DAECB	DAEC	8
F15	CKT CARD AUTO BRITE	74KAC	DAECC	DAEC	1
F15	CKT CARD, CONT. BORE SIGHT	74KAE	DAECD	DAEC	8
F15	CKT CARD, AMP, DEFLECT	74KAF	DAECE	DAEC	8
F15	LOW VOLT, PWR SUPPLY	74KAG	DAECF	DAEC	A
F15	HI VOLT PWR SUPPLY	74KAH	DAECG	DAEC	A
F15	BLOWER ASSY	74KAK	DAECH	DAEC	8
F15	ELECTRON TUBE, CATHODE	74KAL	DAECJ	DAEC	8
F15	SENSOR ASSY, AMBIENT LIGHT	74KAN	DAECK	DAEC	1
F15	PANEL ASSY, CONTROL	74KAP	DAECL	DAEC	8
F15	SENSOR ASSY, AUTO BRITE	74KAQ	DAECM	DAEC	1
F15	COMBINING GLASS ASSY	74KAS	DAECN	DAEC	5
F15	SENSOR ASSY, CONT BORE SIGHT	74KAT	DAECP	DAEC	8
F15	CKT CARD, BORE ADJ	74KAU	DAECQ	DAEC	8
F15	COIL, CONNECTOR, TUBE DEFL.	74KAV	DAECR	DAEC	A
F15	MOUNTING BASE, HEAD UP	74KBO	DAECS	DAEC	0
F15	SWITCH, ADIMODE	75NAB	DAECT	DAEC	A
F15	CKT BKR 61CBF020	42CDA	DAECU	DAEC	A
F15	PROCESSOR, SIG DATA	74KCO	DAECV	DAEC	8
F15	IO NO.2 CC	74KCB	DAECW	DAEC	8
F15	IO NO.3 CC	74KCC	DAECX	DAEC	8
F15	DATA MEMORY CC	74KCD	DAECY	DAEC	8
F15	PROGRAM MEMORY CC	74KCE	DAECZ	DAEC	8
F15	DATA PROC. NO.1 CC	74KCF	DAECZA	DAEC	8
F15	DATA PROC. NO.2 CC	74KCG	DAECZB	DAEC	8
F15	DATA PROC. NO.3 CC	74KCH	DAECZC	DAEC	8
F15	DATA PROC. NO.4 CC	74KCJ	DAECZD	DAEC	8
F15	WAVEFORM GEN. NO.1 CC	74KCL	DAECZE	DAEC	8

PGG095.JIR1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

000000000111111111222222222333333333344444444445555555555666666666677777777778
 12345678901234567890123456789012345678901234567890123456789012345678901234567890

F15	WAVEFORM GEN.NO.2 CC	74KCM	DAECZF	DAEC	8
F15	WAVEFORM GEN.NO.3 CC	74KCN	DAECZG	DAEC	8
F15	WAVEFORM GEN.NO.4 CC	74KCP	DAECZH	DAEC	8
F15	WAVEFORM GEN.NO.5 CC	74KCQ	DAECZJ	DAEC	8
F15	POWER SUPPLY LO VOLT	74KCR	DAECZK	DAEC	A
F15	IO NO.1 CC	74KCS	DAECZL	DAEC	8
F15	IO NO.4 CC	74KCT	DAECZM	DAEC	8
F15	FILTER ASSY, POWER	74KCU	DAECZN	DAEC	8
F15	MOTHER BOARD CC	74KCV	DAECZP	DAEC	8
F15	CKT BKR 90 CBE 004	42CCA	DAECZQ	DAEC	A
F15	CKT BKR 90 CBE 007	42CCA	DAECZR	DAEC	A
F15	CKT BKR 90 CBE 008	42CCA	DAECZS	DAEC	A
F15	CKT BKR 90 CBE 009	42CCA	DAECZT	DAEC	A
F15	CC G-LOAD DATA		DAEF	DAEC	AAAAAAAA
F15	COMPUTER,DIGITAL	57AA0	DAEFA	DAEF	8
F15	FILTER,RFI	57AA8	DAEFB	DAEF	1
F15	PAGE,CPU CLOCK	57AAF	DAEFC	DAEF	8
F15	PAGE,CPU LO DATA	57AAG	DAEFD	DAEF	8
F15	PAGE,CPU HI DATA	57AAH	DAEFE	DAEF	8
F15	PAGE,CPU CONTROL	57AAJ	DAEFF	DAEF	8
F15	PAGE,IO SERIAL	57AAK	DAEFG	DAEF	8
F15	PAGE,MEMORY CORE	57AAL	DAEFH	DAEF	8
F15	PAGE,MAIN STORE TIMING	57AAM	DAEFJ	DAEF	8
F15	PAGE,IO TR REC	57AAN	DAEFK	DAEF	8
F15	PAGE,IO SERIAL CONTROL	57AAP	DAEFL	DAEF	8
F15	RELAY ASSY	57AAQ	DAEFM	DAEF	8
F15	CONNECTOR ASSY	57AAR	DAEFN	DAEF	1
F15	BACKPANEL MAIN STORE	57AAS	DAEFP	DAEF	1
F15	HARNESS,AC POWER	57AAT	DAEFQ	DAEF	1
F15	HARNESS,DC POWER	57AAU	DAEFR	DAEF	1
F15	HARNESS,IO	57AAV	DAEFS	DAEF	1
F15	PWR SUPPLY	57AAX	DAEFT	DAEF	8
F15	CKT CARD,CONTROL/SEQUENCE	57AAY	DAEFU	DAEF	8
F15	CKT CARD,INTERNAL VOLT	57AAZ	DAEFV	DAEF	8
F15	CKT BKR 84CBL002	42CFA	DAEFW	DAEF	A
F15	CKT BKR 84CBL003	42CFA	DAEFX	DAEF	A
F15	CKT BKR 84CRL004	42CFA	DAEFY	DAEF	A
F15	CKT CARD,LOGIC NO.1	71AKA	DAEFZB	DAEF	8
F15	CKT CARD,LIGIC NO.2	71AKD	DAEFZC	DAEF	8
F15	CKT CARD,DATA BUS	71AKG	DAEFZD	DAEF	8
F15	CKT CARD,DISPLAY LOGIC	71AKK	DAEFZE	DAEF	8
F15	POWER SUPPLY	71AKN	DAEFZF	DAEF	A
F15	PANEL,EDGE LIGHT	71AKR	DAEFZG	DAEF	1
F15	BEZEL ASSY	71AKT	DAEFZH	DAEF	0
F15	CKT BKR 72CRE003	42CCA	DAEFZJ	DAEF	A
F15	CKT BKR 72CRE004	42CCA	DAEFZK	DAEF	A
F15	CKT BKR 72CRE005	42CCA	DAEFZL	DAEF	A
F15	CONTROL-IND,NAV,C-8849	71AKO	DAEVZA	DAEF	8
F15	ADC DATA		DBA	RCC	11111111
F15	ADC DATA		DBA	CBR	11111111

PGG095.JIR1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

```

0000000001111111112222222223333333334444444445555555556666666667777777778
1234567890123456789012345678901234567890123456789012345678901234567890
F15 ADC DATA DBA DAAA AAAAAAAAAA
F15 ADC DATA DBA DARB AAAAAAAAAA
F15 ADC DATA DBA DAD 00000000
F15 ADC DATA DBA EPG AAAAAAAAAA
F15 ADC DATA DBA FCM 11111111
F15 ADC DATA DBA MDA 11111111
F15 ADC DATA DBA NAY 11111111
F15 COMPUTER, AIR DATA 51FAO DBAA DBA 8
F15 CONVERTER 51EAB DBAB DBA 8
F15 TIMING CONTROL CC 51EAC DBAC DBA 8
F15 PROGRAM CONTROL CC 51EAD DBAD DBA 8
F15 ARITHMETIC CC 51EAE DBAE DBA 8
F15 ANALOG CONVERTER 51EAG DBAF DBA 8
F15 PAR TO SERIAL CONVERTER 51FAH DBAG DBA 8
F15 CONTROL CC 51EAJ DBAH DBA 8
F15 SIGNAL CONDITIONER CC 51EAK DBAJ DBA 8
F15 ANALOG OUTPUT CC 51EAL DBAK DBA 8
F15 DISCRETE OUTPUT CC 51FAM DBAL DBA 8
F15 CONVERTER 51EAR DBAM DBA 8
F15 POWER SUPPLY 51EAS DBAN DBA A
F15 MEMORY CC 51EAV DBAP DBA 8
F15 CONVERTER 51FAW DBAQ DBA 8
F15 CKT BKR 87CBL002 42CFA DBAR DBA A
F15 PITOT/STATIC SENSING DBB DABA AAAAAAAAAA
F15 PITOT/STATIC SENSING DBB DBA FAAAAAAAAA
F15 PITOT/STATIC SENSING DBB FAC 11111111
F15 PITOT/STATIC SENSING DBB FDQ AAAAAAAAAA
F15 PITOT/STATIC SENSING DBB NAY S11111111
F15 STATIC SENSING DBBA DAA AAAAAAAAAA
F15 STATIC SENSING DBBA DBB AAAAAAAAAA
F15 TUBE, PITOT STATIC 51EEA DBBAA DBBA 1
F15 PITOT SENSING DBBB BCC 11111111
F15 PITOT SENSING DBBB DBB AAAAAAAAAA
F15 PITOT SENSING DBBB FCK 11111111
F15 PITOT SENSING DBBB FCM S11111111
F15 PITOT SENSING DBBB FON 11111111
F15 TUBE, PITOT STATIC 51EEA DBBBA DBBB 1
F15 PITOT PROBE HEAT DBBC DBBB A AAAAAAAAAA
F15 CKT BKR 39CBH002 9951A DBBCA DBBC 1
F15 CKT BKR 39CBJ001 9951A DBBCH DBRC 1
F15 CKT BKR 39CRE003 42CCA DBBCC DBBC A
F15 PITOT HEAT SWITCH 9951B DBBCD DBRC A
F15 TOTAL TEMP SENSING DBD DBA 001111000
F15 SENSOR TOTAL TEMP 51FEO DBDA DBD 5
F15 PROBE HEAT DBE DBD A AAAAAAAAAA
F15 RELAY 42CHA DBEA DBE 1
F15 CKT BKR 89CBF004 42CCA DBEB DBE 5
F15 CKT BKR 89CBF003 42CDA DBEC DBE 5
F15 MALFUNCTION ANALYSIS DC D 000000000
F15 PANEL, AVIONICS STATUS 55AC55ABO DCA DC 0

```


PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

000000001111111122222222333333333333444444445555555555666666666677777777778
12345678901234567890123456789012345678901234567890123456789012345678901234567890

F15	CKT CARD, DRIVER	55ABA	DCR	DC	0
F15	TRANSIENT FILTER ASSY	55ABB	DCC	DC	0
F15	PANEL SWITCH ASSY	55ARC	DCD	DC	0
F15	PANEL SUBASSY	55ABD	DCE	DC	0
F15	PANEL, AVIONICS STATUS	55AB55ACD	DCF	DC	0
F15	TEST, RESET PANEL ASSY	55ACH	DCG	DC	0
F15	PANEL SWITCH ASSY	55ACC	DCH	DC	0
F15	TRANSIENT FILTER ASSY	55ACD	DCJ	DC	0
F15	CHASSIS ASSY	55ACF	DCK	DC	0
F15	PANEL, BITE CONTROL AND DIS	55ADD	DCL	DC	1
F15	MODULE, LOGIC NO.1	55ADA	DCM	DC	1
F15	MODULE, LOGIC NO.2	55ADB	DCN	DC	1
F15	MODULE, LOGIC NO.3	55ADC	DCP	DC	1
F15	MODULE, LOGIC NO.4	55ADD	DCQ	DC	1
F15	POWER SUPPLY ASSY	55ADE	DCR	DC	A
F15	PANEL ASSY, FRONT	55ADF	DCS	DC	1
F15	MOTHER BOARD, CONNECTOR AS	55ADG	DCT	DC	8
F15	PANEL, LIGHT TRANSMITTING	55ADJ	DCU	DC	1
F15	PRINTED WIRING ASSY	55ADK	DCV	DC	1
F15	PANEL, BITE CONTROL AND DIS	55AEC	DCW	DC	1
F15	PANEL, LIGHT TRANSMIT	55AFA	DCX	DC	1
F15	PANEL ASSY, FRONT	55AFB	DCY	DC	1
F15	MODULE, LOGIC NO.1	55AFC	DCZ	DC	1
F15	MODULE, LOGIC NO.2	55AFD	DCZA	DC	1
F15	MODULE, LOGIC NO.3	55AFE	DCZB	DC	1
F15	CABLE ASSY	55AEF	DCZC	DC	1
F15	CKT BKR 66CRE004	42CCA	DCZD	DC	A
F15	CKT BKR 98CBL003	42CFB	DCZE	DC	1
F15	RELAY, EXCEEDANCE COUNTER	42CJD	DCZF	DC	1
F15	SIGNAL DATA RECORDING		DD	D	000000000
F15	RECORDER, SIGNAL DATA	55BCD	DDA	DD	8
F15	CKT CARD 10 CLOCK	55BCA	DOB	DD	8
F15	CKT CARD, SIG CONDITIONER	55BCB	DDC	DD	8
F15	CKT CARD, SIG CONDITIONER	55BCC	DDD	DD	8
F15	CKT CARD, SIG CONDITIONER	55BCD	DDF	DD	8
F15	CKT CARD, SIG CONDITIONER	55BCE	DDF	DD	8
F15	CKT CARD, GYRO REF	55BCF	DDG	DD	8
F15	CKT CARD, GYRO DECK DRIVE	55BCG	DDH	DD	8
F15	CKT CARD, AD CONVERTER	55BCH	DDJ	DD	8
F15	CKT CARD, TIME BASE GEN	55BCK	DDK	DD	8
F15	CKT CARD, LOGIC	55BCL	DDL	DD	9
F15	CKT CARD, MULTIPLEXER	55BCM	DDM	DD	8
F15	CKT CARD, PROGRAMMER	55BCN	DDN	DD	8
F15	CKT CARD, VOLT REG	55BES	DDP	DD	8
F15	PWR SUPPLY ASSY	55BET	DDQ	DD	A
F15	TAPE DECK ASSY	55BEC	DDR	DD	8
F15	RATE GYRO 3 AXIS	55BET	DDS	DD	1
F15	GYRO, RATE, PITCH/YAW	55BEB	DDT	DD	8
F15	GYRO, ROLL	55BDA	DDU	DD	8
F15	ACCELEROMETER, AUGULAR	55BDF	DDV	DD	8

FLIGHT SAFETY PREDICTION TECHNIQUE

ITEM	DESCRIPTION	QTY	UNIT	PRICE	TOTAL	REMARKS
F15	ACCELEROMETER, AXIAL	55B0N	DDW	DD	8	
F15	CKT CARD, IN	55B0U	DDX	DD	8	
F15	CASSETTE, TAPE	55BLO	DDY	DD	8	
F15	TRANSDUCER, ROTARY, AILERON	55BFO	DDZ	DD	1	
F15	TRANSDUCER, ROTARY, RUDDER	55BGO	DDZA	DD	1	
F15	RECORDER, EVENTS HISTORY	23QA4	DDZAM	DD	0	
F15	SWITCH, SPEED BRAKE POSIT	55BHC	DDZB	DD	1	
F15	COUNTER, ELECTRONIC, ACCEL	55CAO	DDZC	DD	1	
F15	CKT CARD, PWR SUPPLY	55CAA	DDZD	DD	1	
F15	CKT CARD, PWR SUPPLY	55CAB	DDZE	DD	1	
F15	CKT CARD, QUANTIZER	55CAO	DDZF	DD	1	
F15	CKT CARD, BIT LOGIC	55CAE	DDZG	DD	0	
F15	TRANSFORMER ASSY	55CAF	DDZH	DD	1	
F15	ACCELEROMETER, ELECTRICAL	55CFO	DDZJ	DD	1	
F15	CKT BKR 104CBEC03	42CCA	DDZK	DD	A	
F15	CHASIS AND HARNESS ASSY	55BDW	DDZL	DD	1	
F15	ENVIRONMENTAL CONTROL		F			AAAAAAAAAA
F15	LIGHTING		EA	F	D	11111121
F15	INTERIOR LIGHTING ATTEN		EAA	FA		0AAAAAAAA0
F15	PRIMARY LIGHTING		EAH	EAA	K EAN	AAAAAAAAAA
F15	CKT BKR 32 CBE 083	42CCA	EAPA	FAB	A	
F15	RELAY ASSY MISC	44BFA	EABB	EAB	1	
F15	LIGHT PANEL	44BBM	EABF	EAB	0	
F15	CONSOLE LIGHTING		EAC	EAB		111111111
F15	LEFT CONSOLE LIGHTING		EAD	FAC		AAAAAAAAAA
F15	LIGHT CONTROL, CONTROL PANE	44BBO	EADA	EAD	A	
F15	TRANSFORMERS 2EA PWR SUPPL	44BFC	EAOB	FAD	5	
F15	CKT BKRS, 4EA, PWR SUPPLY	44BFC	EADC	FAD	3	
F15	TRIMPOTS EACH OF 7	44BAR	EADD	EAD	1	
F15	TRIM POTS EACH OF 7	44BAR	FADE	EAD	1	
F15	RIGHT CONSOLE LIGHTING		EAE	EAC		AAAAAAAAAA
F15	LIGHT CONTROL, CONTROL PANE	44BBO	EAEA	EAE	A	
F15	TRANSFORMER, PWR SUPPLY	44BFB	EAEB	EAE	A	
F15	CKT BKRS, 2EA, PWR SUPPLY	44BFB	EAE C	EAE	5	
F15	TRIM POTS, 11EA, TRIM PANEL	44BAR	EAE D	EAE	1	
F15	INSTRUMENT LIGHTING		EAF	EAF		22222222
F15	FLIGHT INST LIGHTING		EAG	EAF		AAAAAAAAAA
F15	LIGHT CONTROL, CONTROL PANE	44BBO	EAGA	EAG	A	
F15	TRANSFORMER, PWR SUPPLY	44BFA	EAGB	EAG	A	
F15	CKT BKR, PWR SUPPLY	44BFA	EAGC	EAG	A	
F15	TRIM POTS, 8EA, TRIM PANEL	44BAR	EAGD	EAG	1	
F15	ENGINE INSTRUMENT LIGHTING		EAH	EAF		01000000
F15	LIGHT CONTROL, CONT PANEL	44BBO	EAHA	EAH	A	
F15	TRANSFORMER, PWR SUPPLY	44BFA	EAHB	EAH	A	
F15	CKT BKR, PWR SUPPLY	44BFA	EAHC	EAH	A	
F15	TRIM POTS, EACH OF 8	44BAR	EAHD	EAH	1	
F15	TRIM POTS EACH OF 8	44BAR	EAHE	FAH	1	
F15	AUX/STRY INST. LIGHTING		EAJ	EAF		000000010
F15	LIGHT CONTROL CONT PANEL	44BBO	EAJA	EAJ	A	
F15	TRANSFORMER, PWR SUPPLY	44BFA	EAJB	EAJ	A	

PGG095.J1R1 DATE = 09/C9/76

FLIGHT SAFETY PREDICTION TECHNIQUE

```

0000000001111111112222222233333333334444444445555555556666666667777777778
1234567890123456789012345678901234567890123456789012345678901234567890
F15 CKT BKRS,2EA,PWR SUPPLY 44BFA EAJC EAJ 5
F15 AUX INST LIGHTING EAK EAJ 555555555
F15 TRIM POTS,EACH,OF 9 44BAR EAKA EAK 1
F15 TRIM POTS EACH OF 9 44BAR EAKB EAK 1
F15 STRY INSTRUMENT LIGHTING EAL FAJ 555555555
F15 STBY INST SWITCH CONT PANE44BBO EALA EAL A
F15 TRIM POTS,4EA 44BAR EALB EAL 1
F15 ARMAMENT CONTROL LIGHTING EAM MCA D 111111111
F15 LIGHT CONTROL,ARM CONT PAN75MAC EAMA EAM A
F15 CKT BKR,PWR SUPPLY 44BFB EAMB EAM A
F15 TRANSFORMER,PWR SUPPLY 44BFB EAMC EAM A
F15 CKT BKR,31CBE008 42CCA EAMD EAM A
F15 SECONDARY LIGHTING EAN EAA K EAB AAAAAAAAAA
F15 STORM/FLOOD LIGHTING EAP EAN EAQ 111111111
F15 LIGHT CONTROL,CONTROL PANE44BBO EAPA EAP A
F15 CKT BKR 32CBC006 42CCG EAPB FAP A
F15 FLOOD LIGHTS,4EA 44RAA EAPC EAP 2
F15 UTILITY LIGHTING FAQ EAN K EAP AAAAAAAAAA
F15 UTILITY LIGHT 44RAJ EAQA EAQ A
F15 CKT BKR 36CHC003 42CCG EAQB EAQ A
F15 EXTERIOR LIGHTING EAR EA 111111121
F15 ATTENUATION EARA EAR 111111111
F15 FORMATION LIGHTS EAS EARA 000000000
F15 LIGHT CONTROL 44ACO EASA EAS A
F15 LIGHT PANEL 44ACE EASB EAS 0
F15 CKT BKR 31CBE008 42CCA EASC EAS A
F15 FORM LIGHT,RIGHT WING 44AAN EASD EAS 2
F15 FORM LIGHT,RIGHT AFT FUS 44AAS EASE FAS 2
F15 FORM LIGHT,LEFT WING 44AA1 EASF EAS 2
F15 FORM LIGHT,LEFT AFT FUS 44AA2 EASG FAS 2
F15 FORM LIGHT,RIGHT FWD FUS 44AA3 EASH EAS 2
F15 FORM LIGHT,LEFT FWD FUS 44AA4 EASJ EAS 2
F15 ANTI COLLISION/POSITION LIG EAT EARA 000000000
F15 CKT BKR 25CBE008 42CCA EATA EAT A
F15 FLASHER UNIT 44ADC EATB FAT 5
F15 CKT BOARD 44ADA EATC EAT 1
F15 CKT BKR,25CBE002 42CCA EATD EAT 5
F15 ANTI COLLISION LIGHT CONTR44ACO EATE EAT 5
F15 ANTI COLLISION LIGHT RELAY42CHA EATF CAT 5
F15 ANTI COLLISION LIGHT R WIN44AAD EATG EAT 1
F15 ANTI COLLISION LIGHT L WIN44AAZ EATH EAT 1
F15 ANTI COLLISION LIGHT R FIN44AAL EATJ EAT 1
F15 POSITION LIGHTS CONTROL 44ACO EATK EAT 5
F15 POSITION LIGHTS R WING 44AAA EATL EAT 1
F15 POSITION LIGHTS L WING 44AAY EATM EAT 1
F15 POSITION LIGHTS L FIN 44AAC EATN EAT 1
F15 RELAY,POS LT FLASHER 42CHG EATP EAT 1
F15 LANDING LIGHT EAU EARA 000000010
F15 LANDING LIGHT ASSY 44AAF EAU A
F15 CKT BKR 27CBF008 42CDA Eaub EAU A

```


PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

0000000001111111112222222223333333334444444445555555556666666667777777778
12345678901234567890123456789012345678901234567890123456789012345678901234567890

F15 RELAY, LAND LT 27KF004	9944A	EAUC	EAU	A
F15 SWITCH, LAND LT 27SH005	9944B	EAUD	FAU	A
F15 RELAY, NLG DN	42CH5	EAUE	EAU	A
F15 TAXI LIGHT		EAV	FARA	000000000
F15 TAXI LIGHT ASSY	44AAE	EAVA	EAV	A
F15 CKT BKR 27CRF006	42CDA	FAVR	FAV	A
F15 RELAY, TAXI LT 27K F002	9944C	EAVC	EAV	A
F15 RELAY, NLG DN 41KL093	42CH5	EAVD	EAV	A
F15 SWITCH, TAXI LT 27SH005	9944B	FAVE	EAV	A
F15 AIR REFUEL LIGHTS		EAW	RTA	D AAAAAA
F15 FLOODLIGHT ASSY, AR	44AAV	EAWA	EAW	A
F15 SLIPWAY LIGHT ASSY, 2EA	44AAX	EAWB	FAW	5
F15 CKT BKR, ARR FLD LT 29CRC00	42CCG	SAWC	FAW	A
F15 OXYGEN		ER	F	002555000
F15 NORMAL OXYGEN SUPPLIED		EBA	EB	EBR 555555555
F15 HOSE ASSY VENT	47AAB	EBAA	EBA	0
F15 HOSE ASSY SUPPLY	47AAC	EBAB	EBA	8
F15 HEAT EXCHANGOR	47AAD	EBAC	EBA	8
F15 REGULATOR, DEMAND	47AAH	EBAD	EBA	8
F15 HOSE ASSY, OXY	47AAL	EBAE	EBA	8
F15 DISCONNECT VENT	47AAQ	EBAF	EBA	0
F15 DISCONNECT SUPPLY	47AAP	EBAG	EBA	8
F15 VALVE RELIEF	47AAS	EBAH	EBA	8
F15 CONVERTER 5 LITER	47AAX	EBAJ	EBA	8
F15 CONTAINER LIQ OX	47AAY	EBAK	EBA	A
F15 VALVE, FILL, BUILDUP, VENT	47AAZ	EBAL	EBA	5
F15 VALVE, RELIEF	47AA1	EBAM	EBA	2
F15 VALVE, PRESSURE CLOSING	47AA2	EBAN	EBA	8
F15 EMERGENCY OXYGEN SUPPLIED		EBB	EB	K EBA AAAAAA
F15 EMER OXY CYLINDER	91CCA	EBBA	EBB	A
F15 PRESSURE GAGE	91CCB	EBBB	EBB	0
F15 HOSE ASSY	91CCC	EBBC	EBB	A
F15 OXYGEN QUANTITY STATUS		EBD	EBB	111111111
F15 INDICATOR, LOX QUANTITY	47AAE	EBCA	EBD	8
F15 TEST SWITCH	47AAG	EBCB	EBD	1
F15 OXYGEN LOW RELAY	42CHG	EBCC	EBD	1
F15 OXY LOW CAUTION LIGHT	44EAO	EBCD	EBD	1
F15 HARNESS ASSY CAUTION LIGHT	44EAA	EBCE	EBD	1
F15 LOGIC UNIT	44ECO	EBCE	EBD	1
F15 BOARD ASSY	44ECA	EBCE	EBD	1
F15 BOARD ASSY	44ECB	EBCH	EBD	1
F15 BOARD ASSY	44ECC	EBCH	EBD	1
F15 POWER SUPPLY	44ECD	EBCK	EBD	1
F15 BOARD ASSY	44ECE	EBCL	EBD	1
F15 CABLE ASSY	44ECF	EBCL	EBD	1
F15 WIRE BUNDLE	44EDG	EBCN	EBD	1
F15 CKT BKR 110CBF008	42CDA	EBCP	EBD	8
F15 CABLE ASSY, ELECTRICAL	47AAK	EBDQ	EBD	1
F15 CABIN ENVIRONMENT		EC	F	001222100
F15 CABIN ENVIRONMENT ATTEN.		ECA	EC	003333100

PGG095.JIR1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

```

0000000001111111112222222223333333334444444445555555556666666667777777778
1234567890123456789012345678901234567890123456789012345678901234567890
F15 NORMAL AIR PRESSURE ECB ECA ECC 444444440
F15 EMERGENCY VENT AIR ECC ECA K ECB AAAAAAAAAA
F15 EMER VENT HANDLE 9941A ECCA ECC A
F15 VALVE, RAM AIR CABIN 41AAT ECCB ECC A
F15 CABIN CONDITIONED AIR ECD ECB AAAAAAAAAA
F15 CABIN CONDITIONED AIR ECD FDA AAAAAAAAAA
F15 VALVE, CABIN HOT AIR 41AAA ECDA ECD 8
F15 VALVE, CABIN INLET 41AAL ECDB ECD 8
F15 VALVE, CABIN CHECK 41AAM ECDC ECD 0
F15 WATER SEPERATOR, CABIN 41AAW ECDD ECD 1
F15 COALESCER, CABIN 41AAZ ECDE ECD 1
F15 DUCT, AIR DIST 41AA1 ECDF ECD 0
F15 REFRIGERATED AIR SUPPLIED ECF ECD AAAAAAAAAA
F15 REFRIGERATED AIR SUPPLIED ECF EFD AAAAAAAAAA
F15 TURBINE, AIRCRAFT COOLING 41ACA ECEA ECE A
F15 VALVE, HOT AIR 41ACF ECED ECE 8
F15 SENSOR, TEMP, WATER SEP. 41ACG ECEE ECE 8
F15 WATER SEPERATOR, PRI. 41ACH ECEF ECE 1
F15 SECONDARY HEAT EXCHANGER 41ACP ECEG ECE 1
F15 DUCT, AIR DIST. 41ACY ECEH ECE 0
F15 COALESCER, PRI. WATER SEP. 41ACZ ECEJ FCE 1
F15 WATER SEP RELAY 107K-L078 42CHA ECEK FCE 0
F15 WATER SEP ASP COUT RELAY K42CJD ECEL FCE 0
F15 RELAY, ELAPSED TIME 107K-L042CHG ECEM ECE 0
F15 PRECONDITIONED AIR INPUT ECF ECD FAAAAAAAAA
F15 PRECONDITIONED AIR INPUT ECF ECE AAAAAAAAAA
F15 PRECONDITIONED AIR INPUT ECF EFD FAAAAAAAAA
F15 VALVE, MOD/SHUTOFF 41ACM ECFA ECF A
F15 EJECTOR AIR FLOW ECG ECE 550000055
F15 VALVE, EJECT SHUTOFF 41ACV ECGA ECG A
F15 EJECTOR ASSY 41ACW ECGB ECG 1
F15 CABIN TEMP CONTROLLED ECL ECB AAAAAAAAAA
F15 CONTROL BOX 41AAG ECLA ECL 1
F15 CONTROLLER, CABIN AIR 41AAC ECLB ECL 8
F15 CKT BKR 107C8C045 42CCG ECLC ECL A
F15 AUTOMATIC CONTROL ECM ECL ECN 111111111
F15 SENSOR, CABIN AIR 41AAB ECMA ECM 8
F15 CABIN TEMP CONTROL 41AAG ECMB ECM A
F15 CABIN AUTO/MANUAL SW 41AAG ECMC ECM A
F15 SENSOR, CABIN OVERTEMP 41AAH ECMD ECM 8
F15 MANUAL CONTROL ECN ECL K ECM AAAAAAAAAA
F15 CABIN AUTO/MANUAL SW 41AAG ECNA ECN A
F15 CABIN TEMP CONTROL 41AAG ECNB ECN A
F15 CABIN PRESSURE CONTROLLED ECP ECB AAAAAAAAAA
F15 ALTITUDE INDICATOR 41AAU ECPA ECP 0
F15 NORMAL PRESSURE CONTROL ECQ ECP ECR 555555555
F15 VALVE, CABIN PRESS REG 41AAR ECQA ECQ 5
F15 VALVE, CABIN SAFETY 41AAS ECQB ECQ 5
F15 EMERGENCY DUMP ECR ECP K ECQ AAAAAAAAAA
F15 VALVE, SOLENOID AIR PUMP 41AAX ECRA ECR A

```

PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

```

000000000111111112222222223333333334444444445555555556666666667777777778
1234567890123456789012345678901234567890123456789012345678901234567890
F15 CKT BKR 107CBC070 42CCG ECRB ECR A
F15 EMERG VENT HANDLE ASSY 9941A FCRC ECR A
F15 CANOPY SEALED ECU ECB 001222100
F15 CANOPY SEAL REGULATOR 12CFA ECUA ECU 8
F15 CANOPY SEAL,FRONT 12CFB ECUB ECU 1
F15 CANOPY SEAL,REAR 12CFC ECUC ECU 1
F15 CANOPY SEAL BELLAWS 12CFD ECUD ECU 8
F15 HIGH MACH COMPENSATION ECV ECE F 000080000
F15 HEAT EXC REGEN 41ACH ECVA ECV 1
F15 VALVE,MOD REGEN. EXCH 41ACE ECVB ECV 5
F15 SENSOR, RAM AIR TEMP 41ACJ ECVC ECV 8
F15 WINDSHIELD CLEAR ED E 010000020
F15 ANTI FOG EDA ED Y 000000010
F15 VALVE,ANTI/FUG 41CCA EDAA FDA 8
F15 SENSOR,TEMP,ANTI-FUG 41CCB EDAB FDA 8
F15 VALVE,CHECK,ANTI-FUG 41CCC EDAC FDA 0
F15 HEAT EXCHANGER,ANTI-FUG 41CCD EDAD FDA 1
F15 SOLENOID ASSY 41CAB EDAE FDA 8
F15 ANTI ICE EDB ED A 0100000A0
F15 VALVE,ANTI-ICE REG. 41CAA EDBA EDB 8
F15 DUCT SYSTEM, ANTI-ICE 41CAH EDHB EDB 1
F15 CKT BKR,ANTI-ICE 42CDA EDBC EDB A
F15 ANTI ICE CONTROL SWITCH 9941C ED8D EDB A
F15 WINDSHIELD OVERHEAT WARNING EDC EDB 111111111
F15 SENSOR, OVERHEAT 41CAC EDCA EDC 1
F15 RELAY,WINDSHIELD OVERHEAT 42CHA EDCB EDC 0
F15 CAUTION LIGHT DISPLAY UNIT44FAO EDCC EDC 1
F15 CAUTION LIGHT HARNESS ASSY44EAA ENCD EDC 1
F15 CAUTION LIGHT LIGIC UNIT 44ECO EDCE EDC 1
F15 CAUTION LIGHT BOARD ASSY 44FCA EDCF EDC 1
F15 CAUTION LIGHT BOARD ASSY 44ECR EDCG EDC 1
F15 CAUTION LIGHT BOARD ASSY 44ECC EDCH EDC 1
F15 CAUTION LIGHT POWER SUPP. 44ECD EDCJ EDC 1
F15 CAUTION LIGHT PWR SUPP 44ECE EDCK EDC 1
F15 CAUTION LIGHT CABLE ASSY 44ECF EDCL EDC 1
F15 CAUTION LIGHT WIRE BUNDLE 44EDO EDCM EDC 1
F15 ANTI-G ATTENUATION EE E 000G10G00
F15 ANTI-G EEA EE 111111111
F15 VALVE,ANTI G 41AAJ EEAA EEA 8
F15 AVIONICS COOLING AIR EFA CAA 111111111
F15 AVIONICS COOLING AIR EFA CRA 111111111
F15 AVIONICS COOLING AIR EFA CRKE F111111111
F15 AVIONICS COOLING AIR EFA CBME F111111111
F15 AVIONICS COOLING AIR EFA CRQE F111111111
F15 AVIONICS COOLING AIR EFA CCA 111111111
F15 AVIONICS COOLING EFA DBA 111111111
F15 AVIONICS COOLING AIR EFA EFB AAAAAAAAAA
F15 AVIONICS COOLING AIR EFA EFC AAAAAAAAAA
F15 AVIONICS COOLING AIR EFA MCA 111111111
F15 AVIONICS COOLING AIR EFA MD 111111111

```


PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

```

0000000001111111112222222223333333334444444445555555556666666667777777778
1234567890123456789012345678901234567890123456789012345678901234567890
F15 AVIONICS COOLING AIR          EFA          MX          111111111
F15 DUCT,AIR DIST                41ABX        EFAA         EFA          0
F15 RADAR LIQUID COOLING          EFB          MD3          AAAAAAAAA
F15 HOSE ASSY                    41ABE        EFBA         EFB          8
F15 HEAT EXCHANGER,LIQ COOL      41ABF        EFBB         EFB          8
F15 PUMP/RESERVOIR PADKAGE        41ABG        EFBC         EFB          A
F15 CKT BKRS, 4 FA               42CCA        EFBD         EFB          A
F15 COOLANT PUMP RELAY 107K-LC42CH5 EFBE         EFB          A
F15 ICMS COOLING                  EFC          MY          111111111
F15 VALVE,SOLENOID               41ABU        EFCA         EFC          A
F15 NORMAL COOLING AIR            EFD          EFA          EFE          111111111
F15 SENSOR,AVIONIC OVRTEMP        41ABA        EFDA         EFD          8
F15 SENSOR,AVIONIC FLOW/TEMP      41ABC        EFDB         EFD          8
F15 CONTROLLER AVIONIC AIR        41ABL        EFDC         EFD          8
F15 VALVE,AVIC HOT AIR            41ABM        EFDD         EFD          8
F15 VALVE,AVIC COLD AIR           41ABB        EFDE         EFD          8
F15 EMERGENCY COOLING AIR         EFE          EFA          K EFD      AAAAAAAAA
F15 VALVE,DIVERTER               41ABD        EFEA         EFB          8
F15 VALVE,CHECK                  41ABW        EFEB         EFB          0
F15 AVIONICS OVRTEMP WARNING      EFF          EFB          111111111
F15 OVRTEMP RELAY K-6            42CJD        EFFA         EFF          A
F15 DISPLAY UNIT CAUTION LT       44EAC        EFFB         EFF          1
F15 HARNESS ASSY CAUTION LT       44EAA        EFFC         EFF          1
F15 LOGIC UNIT CAUTION LT         44ECO        EFFD         EFF          1
F15 BOARD ASSY CAUTION LT         44ECA        EFFE         EFF          1
F15 BOARD ASSY CAUTION LT         44FCB        EFFF         EFF          1
F15 BOARD ASSY CAUTION LT         44ECC        EFFG         EFF          1
F15 POWER SUPPLY CAUTION LT        44ECD        EFFH         EFF          1
F15 P S ASSY CAUTION LT           44ECF        EFFJ         EFF          1
F15 CABLE ASSY CAUTION LT         44ECF        EFFK         EFF          1
F15 WIRE BUNDLE CAUTION LT        44ED0        EFFL         EFF          1
F15 SENSOR,LOW FLOW WARNING        41ABY        EFFM         EFF          1
F15 GROUND COOLING AIR            EFG          EFA          000000000
F15 RECEPTACLE,GROUND AIR       41AEN        EFGA         EFG          1
F15 VALVE,CHECK,GROUND AIR        41ABV        EFGB         EFG          0
F15 WAVEGUIDE PRESSURE            EFH          MDB          AAAAAAAAA
F15 FILTER                       41ABP        EFHA         EFH          1
F15 VALVE,REGULATOR             41AFQ        EFHB         EFH          8
F15 DESSICANT                    41AES        EFHC         EFH          0
F15 FUEL TANK PRESSURIZATION      EG          RSJ          AAAAAAAAA
F15 HEAT EXCHANGER,FUEL           41ACK        EGA          EG          1
F15 PRECOND AIR SUPPLY            EP          ECF          AAAAAAAAA
F15 PRECOND AIR SUPPLY            EP          ECG          FAAAAAAAA
F15 PRECOND AIR SUPPLY            EP          ECU          FAAAAAAAA
F15 PRECOND AIR SUPPLY            EP          EDA          FAAAAAAAA
F15 PRECOND AIR SUPPLY            EP          EDB          AAAAAAAAA
F15 PRECOND AIR SUPPLY            EP          FEA          AAAAAAAAA
F15 PRECOND AIR SUPPLY            EP          EFH          FAAAAAAAA
F15 PRECOND AIR SUPPLY            EP          EG          AAAAAAAAA
F15 AIR SOURCE EACH OF 2          EPA          EP          K EPX      AAAAAAAAA

```

PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

```

0000000001111111112222222222333333333344444444445555555555666666666677777777778
12345678901234567890123456789012345678901234567890123456789012345678901234567890
F15 AIR SOURCE FA OF 2 EPA EPX SAAAAAAAAA
F15 HEAT EXCHANGER 41AEA EPAA EPA 8
F15 CHECK VALVE 41AEC EPAB EPA 0
F15 BYPASS VALVE 41AEF EPAC EPA 5
F15 TEMP SENSOR 41AEL EPAD EPA 5
F15 OVERTEMP SENSOR 41AEU EPAE EPA 5
F15 DUCT, INSTALLATION 41AEP EPAF EPA 1
F15 AIR SOURCE SWITCH 41AAG EPAG EPA A
F15 BLEED AIR INPUT EPB EPA AAAAAAAAAA
F15 VALVE,REGULATOR,SHUTOFF 41AEB EPBA EPB 8
F15 VALVE,REG.SHUTOFF 41AEH EPBB EPB 5
F15 INSULATION 41AEN EPBC EPB A
F15 HOT AIR DUCTS 41AEQ EPBD EPB A
F15 OVERPRESSURE SENSOR 41AEM EPBE EPB 0
F15 SOLENOID VALVE 41AET EPBF EPB 1
F15 COOLING AIR INPUT EPC EPA AAAAAAAAAA
F15 ENGINE INLET DUCT AIR EPD EPC 015AAA510
F15 CHECK VALVE 41AEY EPDA EPD 0
F15 AUX RAM AIR EPE EPC 121000121
F15 AUX RAM AIR INLET DOOR 41AEG EPEA EPE 1
F15 DOOR ACTUATOR 41AEK EPEB EPE 1
F15 RESTRICTOR 41AEX EPEC EPE 0
F15 HYDRAULIC ACTUATION EPF EPE 000000888
F15 SELECTOR VALVE 41AEJ EPFA EPF A
F15 SELECTOR RELAY 42CHG EPFB EPF A
F15 EJECTOR AIR FLOW EPB EPC 521000125
F15 EJECTOR 41AEE EPGB EPB 1
F15 VALVE 41AED EPGB EPB A
F15 EJECTOR RELAY 42CH5 EPGB EPB 1
F15 DOOR SELECT RELAY 42CHG EPGB EPB 1
F15 CKT BKR 107CB071 42CCG EPGE EPB A
F15 BLEED AIR WARNINGS EPH EPA 555555555
F15 BLEED AIR LEAK DET 49BAA EPHA EPH A
F15 BLEED AIR LEAK DET 49BAC EPHB EPH A
F15 CONTROL UNIT 49BAB EPHC EPH A
F15 BLEED AIR CAUTION LIGHT RE42CHA EPHD EPH A
F15 PRECOND AIR OVERTIMP SENS09941B EPHE EPH 8
F15 PRECOND AIR OVERTEMP RELAY42CJD EPHF EPH A
F15 HARNESS ASSY WIRE 44EAA EPHG EPH 1
F15 LOGIC UNIT CAUTION LIGHTS 44ECO EPHH EPH 1
F15 BOARD ASSY 44ECA EPHJ EPH 1
F15 BOARD ASSY 44FCB EPHK EPH 1
F15 BOARD ASSY 44FCC EPHL EPH 1
F15 POWER SUPPLY 44ECD EPHM EPH 1
F15 BOARD ASSY 44ECF EPHN EPH 1
F15 CABLE ASSY 44ECF EPHP EPH 1
F15 WIRE BUNDLE 44FDO EPHQ EPH 1
F15 CKT BKR 47CB-C001 42CCG EPHR EPH A
F15 CKT BKR 47CB-C002 42CCG EPHS EPH A
F15 DISPLAY UNIT, CAUTION LIGH44EAO EPHT EPH 1

```

PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

```

00000000011111111122222222233333333334444444445555555556666666667777777778
1234567890123456789012345678901234567890123456789012345678901234567890
F15 AIR SOURCE FAIL EPX EPX FAAAAAAAAA
F15 FLIGHT CONTROL F FAAAAAAAAA
F15 LIFT AUGMENTATION FA F 010000010
F15 FLAP POSITIONING FAA FA AAAAAAAAAA
F15 FLAP ASSY WING LANDING 14HA0 LFAAA FAA 1
F15 FLAP ASSY WING LANDING 14HA0 RFAAA FAA 1
F15 FAIRING FORWARD OUTER 14HAA LFAAB FAA 0
F15 FAIRING FORWARD OUTER 14HAA RFAAB FAA 0
F15 FLAP INTIATION FAC FAA AAAAAAAAAA
F15 SWITCH CONTROL 14HBB FACA FAC A
F15 SWITCH AIR SPEED FLAP 14HRF FACB FAC 5
F15 PANEL RELAY MISC 2 46KLO1742CHG FACC FAC A
F15 FLAP INDICATION FAD FA I FAA 111111111
F15 INDICATION FLAP POSITION 14HRC FADA FAD A
F15 INTERIOR LITES PWR SUPPLY 44BFO FADB FAD A
F15 HYDRAULIC FLAP ACTUATION LFAE FAA AAAAAAAAAA
F15 HYDRAULIC FLAP ACTUATION RFAE FAA AAAAAAAAAA
F15 ACT ASSY, HYD, FLAP 14HEK LFAEA LFAE A
F15 ACT ASSY, HYD, FLAP 14HBK RFAEA RFAE A
F15 PANEL CKT BREAKER LH 42CCG LFAEB LFAE A
F15 PANEL CKT BREAKER LH 42CCG RFAEB RFAE A
F15 ROD END ASSY 14HBL LFAEC LFAE A
F15 ROD END ASSY 14HBL RFAEC RFAE A
F15 HYDRAULIC CONTROL LFAF LFAE AAAAAAAAAA
F15 HYDRAULIC CONTROL LFAF LFDL AAAAAAAAAA
F15 HYDRAULIC CONTROL RFAF RFAE AAAAAAAAAA
F15 HYDRAULIC CONTROL RFAF RFDL AAAAAAAAAA
F15 VALVE SWITCHING 14GCC LFAFA LFAF 1
F15 VALVE SWITCHING 14GCC RFAFA RFAF 1
F15 TUBING 14AFF LFAFH LFAF 5
F15 TUBING 14AFF RFAFB RFAF 5
F15 ELEC FLAP ACTXEARLY CONFIG FAG FAA AAAAAAAAAA
F15 ACTUATOR ASSY ELEC FLAP 14HBA LFAGA FAG A
F15 ACTUATOR ASSY ELEC FLAP 14HBA RFAGA FAG A
F15 COMPARATOR FLAP 14HBE FAGB FAG 8
F15 YAW CONTROL FB F 010010020
F15 RUDDER POSITIONING FBA FB AAAAAAAAAA
F15 RUDDER ASSY EA OF 2 14DA0 FBAA FBA 1
F15 YAW ASSIST FBB FBE 111111111
F15 EMER XMISSION FBC FBA K FBE AAAAAAAAAA
F15 TRIM ACTUATOR 14DEA FBCE FBC A
F15 SAFETY SPRING CARTRIDGE 14GCG FBCB FBC A
F15 RUDDER ACTUATION LFBD FBA KRFB0 AAAAAAAAAA
F15 RUDDER ACTUATION RFBD FBA KLFBD AAAAAAAAAA
F15 SERVOACTUATOR HYD 14DCA LFBDA LFB0 A
F15 SERVOACTUATOR HYD 14DDA RFRDA RFB0 A
F15 MECHANICAL PROCESSING FBE FBA 111111111
F15 RUDDER CONTROL LINKAGE 14DC0 FBEA FBE 1
F15 RES, CABLE TENSION 14DDB FBEB FBE 3
F15 MANUAL ACTIVATION FBF FBE AAAAAAAAAA

```


PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

```

000000000111111112222222223333333334444444445555555556666666667777777778
1234567890123456789012345678901234567890123456789012345678901234567890
F15 PEDAL ASSY RUDDER 14AEO FBFA FBF 2
F15 RUDDER INTERCONNECT 14ACA FBG FBH 010010010
F15 ARI 14ACC FBGA FBG 1
F15 CONTROLLER,YAW RATIO 14ACA FBGB FBG A
F15 ARI INTERCONNECT LOCK 14ACR FBGC FBG A
F15 ARI INTERCONNECT RATIO 14ACC FBGD FBG A
F15 ARI INTERCONNECT BOOST 14ACD FBGE FBG A
F15 ARI INTERCONNECT LINKS 14ACE FBGF FBG A
F15 SWITCH OFF ASSY 14ACH FBGG FBG 5
F15 VALVE ASSY,BYPASS 14ACK FBGH FBG 0
F15 RUDDER AUTHORITY FBH FBA F 000021110
F15 RUDDER AUTHORITY ACTUATION FBHA FBH AAAAAA
F15 ACTUATOR LIMITER 14DCN FBHAA FBHA A
F15 PANEL RELAY 93KLO23 42CH5 FBHAB FBHA A
F15 PANEL RELAY 93KLO26 42CH6 FBHAC FBHA A
F15 RUDDER AUTHORITY IND FBH I FBHA 11111111
F15 DISPLAY UNIT CAUTION LT 44FAO FBJA FBJ 8
F15 HARNESS ASSY 44EAA FBJB FBJ 1
F15 LOGIC UNIT CAUTION LT 44ECO FBJC FBJ 8
F15 BOARD ASSY DRIVER RESET 44ECA FBJD FBJ 1
F15 BOARD ASSY CAUTION CONT 44ECB FBJE FBJ 1
F15 BOARD ASSY MODE CONTROL 44ECC FBJF FBJ 1
F15 PWR SUPPLY LO VOLT 44ECD FBJG FBJ 5
F15 PWR SUPPLY ASSY 44ECE FBJH FBJ 1
F15 CABLE ASSY 44ECF FBJJ FBJ 1
F15 WIRE BUNDLE 44EDO FBJK FBJ 1
F15 PANEL CKT BREAKER LH 42CCA FBJL FBJ A
F15 PANEL CKT BREAKER RH 42CDA FBJM FBJ A
F15 YAW TRIM FBK FBB 11111111
F15 ACTUATOR,TRIM 14DRA FBKA FBK A
F15 MOTOR/BRAKE ASSY 14DRF FBKB FBK A
F15 SWITCH, RUDDER TRIM 14DBK FBKC FBK 5
F15 YAW CAS FBL FBC AAAAAA
F15 YAW CAS FBL FDQ AAAAAA
F15 COMPUTER ROLL YAW CP1105 52ARO FBLA FBL 8
F15 CARD ROLL COMP A6 A9 52ARA FBLC FBL 5
F15 CARD YAW COMP A5 A8 52ABC FBLC FBL 5
F15 CARD YAW TRIM A4 52ARE FBLC FBL 1
F15 CARD ROLL FAIL DET 1 A7 52ARC FBLC FBL 5
F15 CARD ROLL FAIL DET 2 A10 52ABH FBLC FBL 5
F15 CARD ROLL TRIM A3 52ABL FBLC FBL 1
F15 MODULE PWR SUPPLY PSI 52ABM FBLC FBL 5
F15 CARD ROLL PIC RELIEF A11 52ABQ FBLC FBL 1
F15 MODULE FILTER 52ABR FBLC FBL 1
F15 CARD PITCH TRIM A2 52ARS FBLC FBL 1
F15 CARD YAW INTEGRAT A13 A15 52APV FBLC FBL 1
F15 ACCELEROMETER LATERAL 52AIB FBLC FBL 8
F15 GYRO RATE PITCH YAW A B 52ACA FBLC FBL 8
F15 ENGAGING CONTROLLER 52AHO FBLC FBL 8
F15 SENSOR ASSY,ACCEL 52ALO FBLC FBL 8

```

PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

```

0000000001111111112222222222333333333344444444445555555555666666666677777777778
12345678901234567890123456789012345678901234567890123456789012345678901234567890
F15 PITCH CONTROL FC F 0AAAAAAAA0
F15 STAB POSITIONING FCA FC AAAAAAAAAA
F15 NORMAL PITCH XMISSION FCB FCA FCC 111111111
F15 EMER XMISSION FCC FCA K FCB AAAAAAAAAA
F15 STAB HYD DISTRIBUTION LFCD LFCH AAAAAAAAAA
F15 STAB HYD DISTRIBUTION RFCD RFCH AAAAAAAAAA
F15 MECHANICAL PROCESSING FCE FBG AAAAAAAAAA
F15 MECHANICAL PROCESSING FCE FCB AAAAAAAAAA
F15 LONGITUDINAL CONTROL LINK14CC0 FCEA FCE A
F15 PITCH TRIM FCF FCK 111111111
F15 GRIP ASSY CONTROLLER 14AAA FCFA FCF A
F15 ACTUATOR, LONG TRIM 14CBA FCFR FCF A
F15 MOTOR/BRAKE ASSY 14CHR FCFC FCF A
F15 MANUAL ACTIVATION FCG FCF AAAAAAAAAA
F15 CONTROL STICK 14AA0 FCGA FCG 8
F15 GRIP ASSY CONTROLLER 14AAA FCGB FCG 2
F15 STAB ACTUATION LFCH FCA 888888888
F15 STAB ACTUATION LFCH FDB 111111111
F15 STAB ACTUATION RFCH FCA 888888888
F15 STAB ACTUATION RFCH FDB 111111111
F15 HORIZ STAB ASSY 14CA0 LFCHA LFCH 1
F15 HORIZ STAB ASSY 14CA0 RFCHA RFCH 1
F15 TIP ASSY HORIZ STAB 14CAA LFCHB LFCH C
F15 TIP ASSY HORIZ STAB 14CAA RFCHB RFCH 0
F15 SERVOCYLINDER 14CBA LFCHC LFCH A
F15 SERVOCYLINDER 14CBA RFCHC RFCH A
F15 HYD CONTROL LFCH LFBD AAAAAAAAAA
F15 HYD CONTROL LFCH LFCD K UHCA AAAAAAAAAA
F15 HYD CONTROL RFCH RFBD AAAAAAAAAA
F15 HYD CONTROL RFCH RFCD K UHAA AAAAAAAAAA
F15 VALVE SWITCHING STAB RUD 14AFC LFCH LFCH 8
F15 VALVE SWITCHING STAB RUD 14AFC RFCH RFCH 8
F15 TUBING HYD 14AFF LFCH LFCH 5
F15 TUBING HYD 14AFF RFCH RFCH 5
F15 PITCH ASSIST FCK FCE 222222222
F15 PITCH ROLL CHAN ASSY 14AB0 FCKA FCK 8
F15 CONTROLLER PITCH RATIO 14ABA FCKB FCK 8
F15 CONTROLLER PITCH TRIM 14ABB FCKC FCK 2
F15 MODE SELECT ASSY 14ABD FCKD FCK A
F15 BOOST ASSY PITCH 14ABE FCKE FCK 8
F15 CHANGER ASSY PITCH RATIO 14ABH FCKF FCK 8
F15 BOOST RATIO CHANGER ASSY 14ABN FCKH FCK 5
F15 VALVE EMER PRESSURIZATION 14AFJ FCKJ FCK A
F15 VALVE THERMAL CONT BYPASS 14AFJ FCKL FCK 1
F15 PITCH RATIO INDICATION FCL FCG I FCK 111111111
F15 INDICATOR PITCH RATIO 14AFD FCLA FCL 1
F15 DISPLAY UNIT CAUTION LT 44EAO FCLB FCL 8
F15 HARNESS ASSY PT WIRE RD 44EAA FCLC FCL 1
F15 LOGIC UNIT CAUTION LT 44ECC FCLD FCL 8
F15 BOARD ASSY DRIVER PESET 44ECA FCLE FCL 1

```

PGG095.JIR1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

```

0000000001111111112222222223333333334444444445555555556666666667777777778
1234567890123456789012345678901234567890123456789012345678901234567890
F15 BOARD ASSY CAUTION CONT 44ECB FCLF FCL 1
F15 BOARD ASSY MODE CONTROL 44ECC FCLG FCL 1
F15 PWR SUPPLY LO VOLT 44ECD FCLH FCL 5
F15 PWR SUPPLY ASSY 44ECE FCLJ FCL 1
F15 CABLE ASSY 44ECF FCLK FCL 1
F15 WIRE BUNDLE 44ECO FCLL FCL 1
F15 PITCH CAS FCM FCC AAAAAAAAAA
F15 PITCH CAS FCM FDG S11111111
F15 PITCH CAS FCM FDQ F11111111
F15 PITCH CAS FCM FDY SAAAAAAAAA
F15 COMPUTER PITCH CP1104 52AAO FCMA FCM 8
F15 CARD PITCH COMP A2 A4 52AAA FCMB FCM 5
F15 CARD SPEED STAB A3 A5 52AAC FCMC FCM 5
F15 CARD PITCH SYNCH DVP A6 52AAF FCMD FCM 5
F15 CARD PITCH PILOT REL A7 52AAG FCME FCM 1
F15 CARD PITCH COMP FAILA10A12 52AAH FCMF FCM 1
F15 CARD SERVO FAIL DET A9 A11 52AAJ FCMG FCM 1
F15 MODULE PWR SUPPLY PSI 52AAM FCMH FCM 5
F15 MODULE FILTER AI 52AAR FCMJ FCM 1
F15 GYRO RATE PITCH YAW 52ACA FCMK FCM 8
F15 SENSOR STICK FORCE 52AFC FCML FCM 8
F15 ENGAGING CONTROLLER 52AHO FCMN FCM 8
F15 ACCELEROMETER NORMAL 52ALA FCMN FCM 8
F15 SENSOR ASSY, ACCEL 52ALG FCMN FCM 8
F15 ROLL CONTROL FD F OAAAAAAAAA
F15 AILERON POSITIONING FDA FD 010000010
F15 STAB POSITIONING FDB FD 111111111
F15 NORMAL XMISSION FDC K FDY SAAAAAAAAA
F15 NORMAL XMISSION FDC FDA FAAAAAAAAA
F15 NORMAL XMISSION FDC FDY FAAAAAAAAA
F15 PITCH ROLL MIXING FDD K FDY SOAAAAAAAAA
F15 PITCH ROLL MIXING FDD FCB FAAAAAAAAA
F15 PITCH ROLL MIXING FDD FDC FAAAAAAAAA
F15 MIXER ASSY 14ADO FDDA FDD A
F15 REG CABLE TENSION 4EA 14GCB FDDR FDD 8
F15 LATERAL CONTROL LINKAGE 14GEO FDDC FDD 8
F15 CARTRIDGE SAFETY SPRING 2 14GCG FDDD FDD 8
F15 MECHANICAL PROCESSING FDE FDC AAAAAAAAAA
F15 MANUAL ACTIVATION FDF FDE AAAAAAAAAA
F15 CONTROL STICK 14AAO FDF FDF 8
F15 GRIP ASSY CONTROLLER 14AAA FDF FDF 2
F15 EMER XMISSION FDB K FDC AAAAAAAAAA
F15 ROLL TRIM FDJ FDN 111111111
F15 ACTUATOR 14GFA FDJA FDJ A
F15 MOTOR/BRAKE ASSY 14GFD FDJB FDJ A
F15 CONTROL GRIP 14AAA FDJC FDJ A
F15 AILERON ACTUATION LFDL FDA KRFDL AAAAAAAAAA
F15 AILERON ACTUATION RFDL FDA KLFDL AAAAAAAAAA
F15 AILERON STRUCTURE ASSY 14GEO LFDLA LFDL 1
F15 AILERON STRUCTURE ASSY 14GEO RFDLA RFDL 1
F15 FAIRING FWD UPPER AILERON 14GEA LFDLB LFDL 0

```


PGG095.JIR1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

```

000000000111111111222222222233333333334444444444555555555566666666667777777778
12345678901234567890123456789012345678901234567890123456789012345678901234567890
F15 FAIRING FWD UPPER AILERON 14GRA RFDLB RFDL 0
F15 SERVOCYLINDER HYD OZONE 14GCA LFDLC LFDL A
F15 SERVOCYLINDER HYD OZONE 14GCA RFDLB RFDL A
F15 SERVOCYLINDER HYD NWL 14GCJ LFDLD LFDL A
F15 SERVOCYLINDER HYD BWL 14GCJ RFDLB RFDL A
F15 ROLL ASSIST FDN FDE 111111111
F15 PITCH ROLL CHANNEL ASSY 14ABQ FDNA FDN 8
F15 CONTROLLER PITCH RATIO 14ABA FDNB FDN 8
F15 CONTROLLER PITCH TRIM 14ABB FDNB FDN 5
F15 CONTROLLER ROLL RATIO 14ABC FDNB FDN 8
F15 MODE SELECT ASSY 14APD FONE FDN A
F15 BOOST ASSY PITCH 14ABE FDNF FDN 8
F15 BOOST ASSY ROLL 14ABF FDNF FDN 8
F15 CHANGER ASSY ROLL RATIO 14ABG FDNH FDN 8
F15 CHANGER ASSY PITCH RATIO 14ABH FDNJ FDN 8
F15 BOOST RATIO CHANGER ASSY 14ABN FDNK FDN 5
F15 VALVE EMER PRESSURIZATION 14ABJ FDNL FDN A
F15 DAMPER EDDY CURRENT 14GCF FDNM FDN 8
F15 VALVE THERMAL CONT BYPASS 14AFJ FDNM FDN 5
F15 PANEL CKT BKR LH 42CCG FDNM FDN A
F15 ROLL RATIO INDICATION FDN FDF 000000000
F15 DISPLAY UNIT CAUTION LT 44EAG FDP A
F15 HARNESS ASSY PRINT WIRE BD44EAA FDP 8
F15 LOGIC UNIT CAUTION LT 44ECO FDP 1
F15 BOARD ASSY DRIVER RESET 44ECA FDP 8
F15 BOARD ASSY CAUTION CONTROL44ECB FDP 1
F15 BOARD ASSY MODE CONTROL 44ECC FDP 1
F15 PWR SUPPLY LO VOLTAGE 44ECD FDP 5
F15 PWR SUPPLY ASSY 44ECF FDP 1
F15 CABLE ASSY 44ECF FDP 1
F15 WIRE BUNDLE 44EDC FDP 1
F15 PANEL RELAY MISC 7 41KLO2942CH5 FDP A
F15 ROLL CAS FDQ AAAAAAAAAA
F15 ROLL CAS FDQ SAAAAAAAAA
F15 COMPUTER ROLL CP1105 52ABQ FDQA 8
F15 CARD ROLL COMP A6 A9 52ABA FDQB 5
F15 CARD YAW COMP A5 A8 52ABC FDQC 5
F15 CARD YAW TRIM A4 52ABE FDQD 1
F15 CARD ROLL FAIL DET 1 A7 52ARG FDQE 5
F15 CARD ROLL FAIL DET 2 A10 52ABH FDQF 5
F15 CARD ROLL TRIM A3 52ABL FDQG 1
F15 MODULE PQR SUPPLY PSI 52ABM FDQH 5
F15 CARD ROLL PILOT RELIEF A1152ABQ FDQJ 1
F15 MODULE FILTER A1 52ABR FDQK 1
F15 CARD PITCH TRIM A2 52ABS FDQL 1
F15 CARD YAW INTEGRAT A13 A15 52ABV FDQM 1
F15 SENSOR STICK FORCE 52AFO FDQN 8
F15 SENSOR DYNAMIC PRESS 52AMO FDQP 8
F15 GYRO RATE ROLL A AND B 52ACB FDQQ 8
F15 DISPLAY UNIT CAUTION LT 44EAC FDQR 8

```

PGG095.JIR1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

```

00000000111111112222222222333333333344444444445555555555666666666677777777778
12345678901234567890123456789012345678901234567890123456789012345678901234567890
F15 ENGAGING CONTROLLER 52AHC FDQS FDQ 8
F15 CAS POWER FDR F K FDB SOAAAAAAAA
F15 CAS POWER FDR FBC AAAAAAAAAA
F15 CAS POWER FDR FCC FAAAAAAAAA
F15 CAS POWER FDR FDG FAAAAAAAAA
F15 CAS POWER FDR FDX SAAAAAAAAA
F15 PRC-A HYD DIST FDW FCK FAAAAAAAAA
F15 PRC-A HYD DIST FDW FDN FAAAAAAAAA
F15 PRC-A HYD DIST FDW FXY S11111111
F15 PRCA NORMAL FDW FDWB 11111111
F15 VALVE LIN DIRECT CONTROL 14AFA FDWAA FDWA A
F15 SWITCH PRESSURE RESERVOIR 45CFE FDWAB FDWA A
F15 PANEL CKT BKR NO1 10R 42CDA FDWAC FDWA A
F15 PRCA BACKUP FDWB K FDWA AAAAAAAAAA
F15 VALVE LIN DIRECT CONTROL 14AFA FDWBA FDWB A
F15 SWITCH PRESSURE RESERVOIR 45CFE FDWBB FDWB A
F15 CAS FAILURE FDX FAAAAAAAAA
F15 SPEED CONTROL FF F 000010000
F15 SPEED BRAKE POSITIONING FFA 11111111
F15 BRAKE AERO SPEED 14EAO FFAA 1
F15 BRAKE AERO SPEED GRAPH 14EDO FFAB 1
F15 SPEED BRAKE ACTUATION FFB FFA AAAAAAAAAA
F15 CYLINDER ASSY ACT LIN 14EBC FFBA 5
F15 SWIVEL JOINT HYD 2EA 14EBG FFBB 1
F15 RESTRICTOR FLUID FLOW 2FA 14ERD FFRC 0
F15 VALVE LIN DIRECT CONTROL 14EBA FFBD A
F15 SPEED BRAKE CONTROL FFC FAAAAAAAAA
F15 SWITCH CONTROL 14EBF FFCA 5
F15 PANEL RELAY MISC 2 48KLOO42CHG FFCE 5
F15 SPEED BRAKE INDICATION FFD J00000000
F15 PANEL RELAY MOD 2 K4 42CJD FFDA A
F15 DISPLAY UNIT CAUTION LT 44EAG FFDB 8
F15 HARNESS ASSY 44EAA FFDC 1
F15 LOGIC UNIT CAUTION LT 44ECG FFDD 8
F15 BOARD ASSY DRIVER RESET 44ECA FFDE 1
F15 BOARD ASSY CAUTION CONT 44ECB FFDF 1
F15 BOARD ASSY MODE CONTROL 44ECC FFDG 1
F15 PWR SUPPLY LO VOLT 44ECD FFDH 5
F15 PWR SUPPLY ASSY 44ECE FFDJ 1
F15 CABLE ASSY 44ECF FFDK 1
F15 WIRE BUNDLE 44EDO FFOL 1
F15 WEIGHT REDUCTION FG F K BAA 000000110
F15 NORMAL HYD DISTRIBUTION FXX F UHBH S011111110
F15 PRCA ATTENUATION FXY F S011111110
F15 GROUND CONTROL G AAAAAAAAAA
F15 ATTENUATION GA 11111111
F15 SPEED CONTROL GB C 0000000A0
F15 SPEED CONTROL GB 500000005
F15 DIRECTIONAL CONTROL GC 110000011
F15 WHEEL BRAKES GDA GB GH 40000008A

```

PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

0000000001111111112222222222333333333344444444445555555555666666666677777777778
1234567890123456789012345678901234567890123456789012345678901234567890

F15	WHEEL BRAKES		GDA	GC	K GEA	AA00000AA
F15	BRAKE, MULTIPLE DISC 2 EA	13DB0	GDAA	GDA		1
F15	PLATE END	13DBA	GDAB	GDA		A
F15	PLATE SUBASSY	13DBB	GDAC	GDA		A
F15	HOUSING, BRAKE ASSY	13DBC	GDAD	GDA		8
F15	PLATE, BACKING	13DBD	GDAE	GDA		A
F15	DISC, ROTATING	13DBE	GDAF	GDA		1
F15	DISC SUBASSY, STATIONARY	13DBF	GDAG	GDA		1
F15	PISTON ASSY, RETURN	13DBG	GDAH	GDA		8
F15	TUBE, TORQUE	13DBH	GDAJ	GDA		8
F15	VALVE, SHUTTLE	13DEJ	GDAK	GDA		1
F15	CONTROL VALVE	13DEA	GDAL	GDA		8
F15	CONTROL, PUSH PULL	13DEB	GDAM	GDA		8
F15	RESTRICTOR, FLUID FLOW	13DEC	GDAN	GDA		0
F15	VALVE, CHECK	13DED	GDAP	GDA		0
F15	SWIVEL JOINT, HYD	13DEE	GDAQ	GDA		1
F15	FLUID COMPENSATOR ASSY	13LEG	GDAR	GDA		1
F15	FILTER ASSY, INLINE	13DEN	GDAS	GDA		1
F15	VALVE ASSY, SKID CONTROL	13HCB	GDAT	GDA		5
F15	PEDAL ASSY, RUDDER/BRAKE	14AE0	GDAU	GDA		1
F15	NORMAL BRAKE OPERATION		GDB	GDA	GDE	111111111
F15	ANTI SKID		GDC	GDB		000000010
F15	CONTROLLER ASSY	13HA0	GDCA	GDC		8
F15	CKT CARD, BITE	13HAA	GDCB	GDC		0
F15	CKT CARD ASSY	13HAB	GDCC	GDC		8
F15	PANEL ASSY, FRONT	13HAC	GDCD	GDC		8
F15	DETECTOR, WHEEL SPEED 2 EA	13HCA	GDCE	GDC		A
F15	VALVE ASSY, CONTROL	13HCB	GDCF	GDC		8
F15	CKT BKR, SKID CONT 44CBC00242CCG		GDCG	GDC		A
F15	ANTI SKID SWITCH 445H003	9913C	GDCH	GDC		A
F15	SWITCH MLG DOWN LIMIT 42EAC13AGB		GDCJ	GDC		1
F15	MLG WOW RELAY 41K-L023	42CH5	GDCK	GDC		1
F15	MLG WOW RELAY 41K-L028	42CH5	GDCL	GDC		1
F15	MLG SWITCH, LIMIT PROXIMITY13AGA		GDCM	GDC		A
F15	ANTI SKID STATUS		GDD	GDB	I GDC	000000050
F15	ANTI SKID CAUTION LIGHT	44EA0	GDDA	GDD		A
F15	HARNESS ASSY	44FAA	GDDB	GDD		8
F15	LOGIC UNIT CAUT LIGHT	44FC0	GDDC	GDD		8
F15	BOARD ASSY CAUT LIGHT	44FCA	GDDD	GDD		8
F15	BOARD ASSY CAUT LIGHT	44ECB	GDD E	GDD		8
F15	BOARD ASSY CAUT LIGHT	44ECC	GDDF	GDD		8
F15	PS LO VOLT CAUT LIGHT	44ECD	GDDG	GDD		8
F15	PS LO VOLT CAUT LIGHT	44ECE	GDDH	GDD		8
F15	CABLE ASSY CAUT LIGHT	44ECF	GDDJ	GDD		8
F15	WIRE BUNDLE CAUT LIGHT	44EDO	GDDK	GDD		1
F15	EMERGENCY BRAKE OPERATION		GDE	GDA	K GDB	AAAAAAAAA
F15	EMER BK HANDLE	9913A	GDEA	GDE		A
F15	VALVE, LIFT CHECK DUAL	13BFL	GDEB	GDF		A
F15	UPPER JFS ACCUMULATOR	24DAD	GDEC	GDE		A
F15	NOSEWHEEL STEERING		GEA	GC	GDA	110000011

PGG095.JIR1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

00000000011111111222222222333333333344444444445555555555666666666677777777778
12345678901234567890123456789012345678901234567890123456789012345678901234567890

F15 DAMPER, SHIMMY, NWS	13HEB	GEAA	GEA	8
F15 CRANK, MACHINE	13REE	GEAB	GEA	A
F15 CONTROL ASSY, PUSH PULL	13BEJ	GEAC	GEA	A
F15 REGULATOR, CABLE TENSION	13REN	GEAD	GEA	1
F15 VALVE, SHUTTLE, HYD	13REX	GEAE	GEA	1
F15 DAMPER INPUT ASSY	13HEY	GEAF	GEA	A
F15 SWIVEL JOINTS, HYD	13BEZ	GEAG	GEA	5
F15 PEDAL ASSY, BRAKE	14AFO	GEAH	GEA	1
F15 NORMAL STEERING MODE		GER	GEA	GEC 111111111
F15 VALVE, CONTROL	13REC	GEHA	GER	A
F15 RELAY, NLG WDW	13REH	GERB	GER	1
F15 SWITCH, NLG WDW	13BGD	GERC	GER	8
F15 CKT BKR 43CBJ003	9913B	GERD	GFB	A
F15 CKT BKR 41CHC035	42CCG	GEHE	GFB	0
F15 SWITCH, NWS DISENGAGE	52AFO	GERF	GFB	1
F15 SWITCH, STEER RANGE LIMIT	13BE1	GERG	GER	5
F15 STEER MANEUVER MODE SWITCH	14AAA	GERH	GER	0
F15 EMERGENCY STEERING MODE		GEC	GEA	K GEB AAAAAAAAAA
F15 EMER STEER HANDLE	9913A	GECA	GEC	A
F15 VALVE, LIFT, CHECK, DUAL	13BEL	GECD	GEC	A
F15 LOWER JFS ACCUMULATOR	240AD	GECC	GEC	A
F15 ARRESTING HOOK POSITIONED		GHA	GB	K GDA C0000000A0
F15 TRUNNION, ARRESTING HOOK	13CPC	GHA	GHA	A
F15 CYLINDER ASSY, ACTUATING	13CCD	GHA	GHA	8
F15 GAGE, PRESSURE, ARR HOOK	13CCK	GHA	GHA	0
F15 DRAG BRACE ASSY	13CCM	GHA	GHA	A
F15 VALVE, CHARDING	13CCL	GHA	GHA	1
F15 SWITCH, CONTROL	13CFB	GHA	GHA	A
F15 DOOR, ARR HOOK, FWD	13CGA	GHA	GHA	0
F15 DOOR, HOOK POINT	13CGB	GHA	GHA	0
F15 FAIRING	13CGC	GHA	GHA	0
F15 SWITCH UPLIMIT 2EA	13CFA	GHA	GHA	A
F15 CKT BKR, ARG CONT 45CBC007	42CCG	GHA	GHA	A
F15 CKT BKR, ARG CONT 45CBC008	42CCG	GHA	GHA	A
F15 SHANK ASSY, HOOK	13CAA	GHA	GHA	A
F15 HOOK POINT	13CAD	GHA	GHA	8
F15 WEAR PAD	13CAE	GHA	GHA	0
F15 ARRESTING HOOK EXTENSION		GHB	GHA	00000000A0
F15 ACTUATOR, HOOK UPLATCH	13CCE	GHB	GHB	A
F15 MECHANISM, LATERAL CENTER	13CCG	GHB	GHB	1
F15 UPLATCH, FWD	13CCH	GHB	GHB	A
F15 UPLATCH, AFT	13CCJ	GHB	GHB	A
F15 DAMPER ASSY	13CCC	GHB	GHB	1
F15 ARRESTING HOOK RETRACTION		GHC	GHA	0000000000
F15 VALVE, LINEAR CONTROL	13CCF	GHC	GHC	A
F15 VALVE, RESTRICTOR, HYD	13CCN	GHC	GHC	1
F15 SWIVEL JOINT, HYD	13CCP	GHC	GHC	1
F15 VALVE, CHECK, COMP	13CCQ	GHC	GHC	0
F15 RELAY, ARRHOOK TIME DELAY	42CHA	GHC	GHC	A
F15 HOOK POSITION INDICATION		GHD	GHA	0000000000

PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

0000000001111111112222222222333333333344444444445555555555666666666677777777778
12345678901234567890123456789012345678901234567890123456789012345678901234567890

F15 SWITCH,NO.2 UPLIMIT	13CFA	GHDA	GHD	A
F15 DISPLAY UNIT	CAUT LIGHT44EA0	GHDB	GHD	A
F15 HARNESS ASSY	CAUT LIGHT44FAA	GHDC	GHD	8
F15 LOGIC UNIT	CAUT LIGHT44ECO	GHDD	GHD	8
F15 BOARD ASSY	CAUT LIGHT44ECA	GHDE	GHD	8
F15 BOARD ASSY	CAUT LIGHT44ECB	GHDF	GHD	8
F15 BOARD ASSY	CAUT LIGHT44ECC	GHDG	GHD	8
F15 PS,LOW VOLT	CAUT LIGHT44ECD	GHDH	GHD	8
F15 PS,LAMP PWR	CAUT LIGHT44ECE	GHDJ	GHD	8
F15 CARLE ASSY	CAUT LIGHT44ECF	GHDK	GHD	8
F15 WIRE BUNDLE	CAUT LIGHT44ED0	GHDL	GHD	1
F15 MISSION SUPPORT		M		AAAAAAAAAA
F15 OFFENSIVE ARMAMENT		MA	M	110000011
F15 BOMBS		MBA	MA	1100A0G00
F15 BOMB STATIONS CONFIGURED		MBB	MBA	111111111
F15 PANEL,RELAY MISC NO 6	42CH4	MBBAA	MBB	1
F15 RACKS CONFIGURED		MRC	MBB	AAAAAAAAAA
F15 RACKS CONFIGURED		MBC	MBG	111111111
F15 BOMB RACK,MAU 12,3 EA	75FA0	MBCA	MBC	1
F15 PISTON BLOCK ASSY	75FAA	MBCB	MBC	3
F15 SHACKLE AND LINK ASSY	75FAB	MBCB	MBC	3
F15 WIRE HARNESS ASSY	75FAC	MBCD	MBC	3
F15 BREECH ASSY	75FAD	MBCB	MBC	3
F15 GAS TUBE ASSY	75FAE	MBCF	MBC	3
F15 ARMING CONTROL ASSY	75FAF	MBCG	MBC	3
F15 SWITCH,STORE SENSING	75FAG	MBCB	MBC	1
F15 BOMB EJECTOR RACK,MER, 3EA	75C00	MBCJ	MBC	1
F15 RACK ASSY,EJECT UNIT	75C00	MBCK	MBC	1
F15 PISTON,RELEASE	75CCA	MBCL	MBC	3
F15 CONDUIT	75CCB	MBCM	MBC	3
F15 HARNESS ASSY	75CCC	MBCN	MBC	3
F15 EJECTOR ASSY	75CCD	MBCP	MBC	3
F15 ARMING UNIT	75CCE	MBCQ	MBC	1
F15 SPRING,PISTON RETURN	75CCF	MBCR	MBC	0
F15 SUPPORT ASSY,WIRING	75C00	MBCS	MBC	3
F15 BOX ASSY,RELAY	75CDA	MBCB	MBC	3
F15 BOX ASSY,RELAY	75CDB	MBCU	MBC	3
F15 STEPPER SWITCH	75C0C	MBCV	MBC	3
F15 HARNESS ASSY	75C0D	MBCW	MBC	3
F15 FAIRING ASSY	75CDE	MBCX	MBC	0
F15 DISPENSERS CONFIGURED		MBD	MBR	111111111
F15 SUU-20 ROCKET/BOMB DISP	75FC0	MBDA	MBD	1
F15 BOMB EJECT GUN ASSY	75FCA	MBDB	MBD	1
F15 RAM ASSY	75FCB	MBDC	MBD	1
F15 SWAY BRACE	75FCC	MBDD	MBD	1
F15 INTERVALMETER	75FCD	MBDE	MBD	1
F15 RESISTOR PANEL	75FCE	MBDF	MBD	1
F15 PYLONS CONFIGURED		MBE	MBB	AAAAAAAAAA
F15 PYLONS CONFIGURED		MBE	MBG	AAAAAAAAAA
F15 PYLON,INBOARD,2 EA	75DA0	MBEA	MBE	1

PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

000000001111111122222222333333334444444455555555666666667777777788
1234567890123456789012345678901234567890123456789012345678901234567890

F15	LATCH MECHANISM	75DAA	MBEB	MBE	3
F15	BREECH ASSY	75DAB	MBEC	MBE	3
F15	FITTING	75DAC	MBED	MBE	3
F15	WIRE CABLE ASSY,BREECH	75CAD	MBCE	MBE	3
F15	PYLON STRUCTURE	75DAE	MBEF	MBE	3
F15	RESISTOR BOX ASSY	75CAF	MBEG	MBE	3
F15	WIPE CABLE ASSY,MK-84	75DAG	MBFH	MBE	3
F15	WIRE CABLE ASSY,WPNS	75DAH	MBEJ	MBE	3
F15	PYLON,CENTERLINE	75EPO	MBEK	MBE	1
F15	LATCH MECHANISM	75ERA	MBEL	MBE	3
F15	BREECH ASSY	75EBB	MBEM	MBE	3
F15	FITTING	75EBC	MBEN	MBE	3
F15	WIRE CABLE ASSY,BREECH	75EBD	MBEP	MBE	3
F15	PYLON STRUCTURE	75EEF	MBEQ	MBE	3
F15	RESISTOR BOX ASSY	75ERF	MBER	MBE	3
F15	WIRE CABLE,MK-84	75EBG	MBES	MBE	3
F15	WIRE CABLE,WEAPONS	75EBH	MBET	MBE	3
F15	BOMB RELEASE AND ARM		MBF	MBA	0000A0000
F15	WEAPON RELEASE SWITCH	14AAA	MBFA	MBF	A
F15	CKT BKR 61CBF022	42CDB	MBFB	MBF	A
F15	A/G SELECT SW	75MAO	MBFC	MBF	2
F15	CKT BKR LUCBF039 STA2	42CDB	MBFD	MBF	3
F15	CKT BKR 61CBF040 STA5	42CDB	MBFE	MBF	3
F15	CKT BKR 61CBF041 STA8	42CDB	MBFF	MBF	3
F15	A/G MODE SELECT SWITCH	75NAA	MBFG	MBF	A
F15	CKT BKR 61CBF020	42CDA	MBFH	MBF	A
F15	CKT BKR 61CBC031	42CCG	MBFJ	MBF	1
F15	CKT BKR 61CBC032	42CCG	MBFK	MBF	1
F15	A/G INVENTORY IND NO.1	75MC2	MBFL	MBF	0
F15	A/G INVENTORY IND NO.2	75MC3	MBFM	MBF	0
F15	A/G STATION CONTROL	75MDF	MBFN	MBF	1
F15	CARTRIDGE ARD 446	97ADA	MBFP	MBF	1
F15	JETTISON ATTENUATION		MBG	MJA	111111111
F15	CARTRIDGE ARD 446	97ADA	MBGA	MBG	1
F15	ARMAMENT CONTROL		MCA	MA	0000A0000
F15	ARMAMENT CONTROL PANEL	75MAO	MCAA	MCA	1
F15	MASTER BIT NO.1 CC	75MAB	MCAAA	MCA	0
F15	OPTION DRIVER CC	75MAC	MCAAB	MCA	1
F15	MONITOR DRIVER CC	75MAD	MCAAC	MCA	1
F15	MONITOR DRIVER CC	75MAE	MCAAD	MCA	1
F15	CHASSIS ASSY	75MAN	MCAAE	MCA	1
F15	CONVERTER PROGRAMMER	75MCO	MCAB	MCA	1
F15	ANALOG SWITCHING CC	75MCB	MCABA	MCA	1
F15	PHASE LOCK LOOP CC	75MCC	MCABH	MCA	1
F15	MASTER BIT NO.7 CC	75MCD	MCABC	MCA	0
F15	MASTER BIT NO.8	75MCE	MCABD	MCA	0
F15	MASTER BIT NO.5 CC	75MCG	MCABE	MCA	0
F15	INTERVALOMETER CC	75MCH	MCABF	MCA	1
F15	MASTER BIT NO.6 CC	75MCJ	MCABG	MCA	0
F15	MASTER BIT NO.1 CC	75MCK	MCABH	MCA	0

PGG095.JIR1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

0000000001111111112222222223333333334444444445555555556666666667777777778
12345678901234567890123456789012345678901234567890123456789012345678901234567890

F15	MASTER BIT NO.2	CC	75MCL	MCABJ	MCA	0
F15	MASTER BIT NO.3	CC	75MCM	MCABK	MCA	0
F15	MASTER BIT NO.4	CC	75MCN	MCABL	MCA	0
F15	CCC INTERFACE NO.1	CC	75MCQ	MCARM	MCA	1
F15	CCC INTERFACE NO.2	CC	75MCR	MCABN	MCA	1
F15	CCC INTERFACE NO.3	CC	75MCS	MCABP	MCA	1
F15	CCC INTERFACE NO.4	CC	75MCT	MCABQ	MCA	1
F15	CCC INTERFACE NO.5	CC	75MCU	MCABR	MCA	1
F15	WEAPON RELEASE CONTROL	CC	75MCX	MCABS	MCA	8
F15	ANALOG,DIG CONV	CC	75MCZ	MCABT	MCA	1
F15	DIG,ANALOG CONV NO.1	CC	75MC4	MCABU	MCA	1
F15	DIG,ANALOG CONV NO.2	CC	75MC5	MCABV	MCA	1
F15	POWER SUPPLY		75MDL	MCABW	MCA	8
F15	CHASSIS ASSY		75MDR	MCABX	MCA	1
F15	IND UPDATE LOGIC	CC	75MDV	MCABY	MCA	1
F15	IND UPDATE POWER	CC	75MDW	MCABZ	MCA	1
F15	TRANSMIT,REC ASSY		75MDK	MCABZA	MCA	1
F15	CKT BKR 61CBL016		42CFA	MCACA	MCA	A
F15	CKT BKR 61CBL017		42CFA	MCACB	MCA	A
F15	CKT BKR 61CBL018		42CFA	MCACC	MCA	A
F15	CKT BKR 61CBL019		42CFA	MCACD	MCA	A
F15	MASTER ARM BUS RELAY		42CH5	MCACE	MCA	A
F15	MASTER ARM SWITCH		75MA0	MCACF	MCA	A
F15	CKT BKR,MAST ARM 54CBF018		42CDB	MCACG	MCA	1
F15	CKT BKR,MAST ARM 54CBF019		42CDB	MCACH	MCA	1
F15	CKT BKR 61CRF021		42CDB	MCACJ	MCA	A
F15	ARM SYSTEM POWER APPLIED			MCB	MCA	
F15	ARM SYSTEM POWER APPLIED			MCB	MJC	AAAAAAAAA
F15	ARM BUS CONTROL CONTACTOR		42ECA	MCBA	MCB	A
F15	ARMAMENT SAFETY SWITCH		75NAD	MCRB	MCB	1
F15	LAND GR CONTROL SWITCH		13FAC	MCBC	MCB	1
F15	CKT BKR 54CBF016		42CDA	MCBD	MCB	A
F15	ATTACK AIDS			MD	MA	000080C00
F15	CENT COMP ATTACK SOLUTIONS			MDA	MD	888888888
F15	COMPUTER,DIGITAL		57AAC	MDAA	MDA	8
F15	FILTER,RFI	PAGE	57AAB	MDAAA	MDA	1
F15	CPU CLOCK	PAGE	57AAF	MDAAB	MDA	8
F15	CPU LO DATA	PAGE	57AAG	MDAAC	MDA	8
F15	CPU HI DATA	PAGE	57AAH	MDAAD	MDA	8
F15	CPU CONTROL	PAGE	57AAJ	MDAAE	MDA	8
F15	IO SERIAL	PAGE	57AAK	MDAAF	MDA	8
F15	MEMORY CORE	PAGE	57AAL	MDAAG	MDA	8
F15	MAIN STORE TIMING	PAGE	57AAM	MDAAH	MDA	8
F15	IO TR REC	PAGE	57AAN	MDAAJ	MDA	8
F15	IO SERIAL CONTROL	PAGE	57AAP	MDAAK	MDA	8
F15	RELAY ASSY		57AAQ	MDAAL	MDA	1
F15	CONNECTOR ASSY		57AAR	MDAAM	MDA	1
F15	BACKPANEL ASSY		57AAS	MDAAN	MDA	1
F15	HARNESS,AC POWER		57AAT	MDAAP	MDA	8
F15	HARNESS,DC POWER		57AAU	MDAAQ	MDA	8

PGG095.JIR1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

0000000001111111112222222223333333334444444445555555556666666667777777778
12345678901234567890123456789012345678901234567890123456789012345678901234567890

F15 HARNESS, IO	57AAV	MDAAR	MDA	8
F15 POWER SUPPLY	57AAX	MDAAS	MDA	8
F15 CONTROL SEQUENCE CC	57AAZ	MDAAT	MDA	8
F15 INTERNAL VOLT CC	57AAZ	MDAAU	MDA	8
F15 CKT BKR 84CBL002	42CFA	MDAAV	MDA	A
F15 CKT BKR 84CBL003	42CFA	MDAAW	MDA	A
F15 CKT BKR 84CHL004	42CFA	MDAAX	MDA	A
F15 CONTROL-IND, NAV, C-8849	71AKC	MDAB	MDA	8
F15 CKT CARD LOGIC NO.1	71AKA	MDABA	MDA	8
F15 CKT CARD, LOGIC NO.2	71AKD	MDABB	MDA	8
F15 CKT CARD, DATA BUS	71AKG	MDABC	MDA	8
F15 CKT CARD, DISPLAY LOGIC	71AKK	MDABD	MDA	8
F15 POWER SUPPLY	71AKN	MDABE	MDA	A
F15 PANEL, EDGE LIGHT	71AKR	MDABF	MDA	1
F15 HEZEL ASSY	71AKT	MDARG	MDA	0
F15 CKT BKR 72CBE003	42CCA	MDABH	MDA	A
F15 CKT BKR 72CBF004	42CCA	MDABJ	MDA	A
F15 CKT BKR 72CBE005	42CCA	MDABK	MDA	A
F15 FIRE CONTROL RADAR		MDR	MD	888888888
F15 TRANSMITTER	74FAO	MDBA	MDR	8
F15 CHASSIS ASSY	74FAA	MDBAA	MDR	8
F15 CONDITIONER ASSY	74FAB	MDBAB	MDR	8
F15 LOGIC AND SYNC ASSY	74FAC	MDBAC	MDR	8
F15 POWER SUPPLY	74FAD	MDBAD	MDR	8
F15 MODULATOR, TWT	74FAF	MDBAE	MDR	8
F15 PROCESSOR ASSY	74FAG	MDBAF	MDR	8
F15 PREPULSE LEVELER	74FAP	MDBAG	MDR	8
F15 TRANSMITTER BEACON	74FAQ	MDBAH	MDR	8
F15 ELECTRON TUBE	74FAR	MDBAJ	MDR	8
F15 RELAY, LOGIC SWITCH	74FAS	MDBAK	MDR	8
F15 POWER SUPPLY, TWT	74FAX	MDBAL	MDR	8
F15 AMP, GRID TWT	74FA4	MDBAM	MDR	8
F15 ARC DETECTOR	74FA5	MDBAN	MDR	8
F15 FILTER NETWORK	74FA6	MDBAP	MDR	8
F15 RECEIVER	74FCO	MDBB	MDR	8
F15 FILTER ASSY	74FCB	MDRBA	MDR	8
F15 VOLT REG	74FCD	MDBBB	MDR	8
F15 GENERATOR, BEACON	74FCE	MDBBC	MDR	8
F15 AMP, IF	74FCF	MDRBD	MDR	8
F15 MIXER, PREAMP	74FCG	MDBRE	MDR	8
F15 AMP, PARAMETRIC	74FCJ	MDRBF	MDR	8
F15 PROCESSOR, RADAR TARGET	74FFO	MDBC	MDR	8
F15 TIMING AND CONTROL CC	74FFB	MDBCA	MDR	8
F15 TIMING AND CONTROL CC	74FFC	MDBCB	MDR	8
F15 DIGITAL AUTO GAIN CC	74FFD	MDBCD	MDR	8
F15 TIMING AND CONTROL CC	74FFF	MDRCD	MDR	8
F15 CLUTTER CANCEL CC	74FFG	MDBCE	MDR	8
F15 COMP, PULSE COMPR CC	74FFH	MDBCF	MDR	8
F15 MEMORY STORAGE CC	74FFJ	MDBCG	MDR	8
F15 MEMORY CONTROL CC	74FFK	MDBCH	MDR	8

PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

00000000111111112222222233333333334444444455555555666666667777777778
1234567890123456789012345678901234567890123456789012345678901234567890

F15	FILTER PROCESS	CC	74FFL	MDRCJ	MDR	8
F15	BASE 4 BUFFER	CC	74FFM	MDRCJ	MDR	8
F15	COMPLEX MULTIPLEX	CC	74FFN	MDRCJ	MDR	8
F15	TIME AND CONTROL	CC	74FFP	MDRCM	MDR	8
F15	BIT	CC	74FFR	MDRCN	MDR	0
F15	TIME AND CONTROL	CC	74FFS	MDBCP	MDR	8
F15	SLIDING WINDOW	CC	74FFT	MDBCQ	MDR	8
F15	TIME AND CONTROL 38	CC	74FFV	MDRCR	MDR	8
F15	HIT,MISS LOGIC	CC	74FFW	MDRCS	MDR	8
F15	TIME AND CONTROL 2A	CC	74FFX	MDRCT	MDR	8
F15	POST DET INT	CC	74FFY	MDRCU	MDR	8
F15	INTERFACE DATA	CC	74FF1	MDRCV	MDR	8
F15	TIME AND CONTROL 3A2	CC	74FF2	MDRCW	MDR	8
F15	TIME AND CONTROL 3A1	CC	74FF3	MDRCX	MDR	8
F15	TIME AND CONTROL 3C	CC	74FF4	MDRCY	MDR	8
F15	TIME AND CONTROL 4B	CC	74FF5	MDRCZ	MDR	8
F15	TIME AND CONTROL 4A	CC	74FF6	MDRCZA	MDR	8
F15	LOW PULSE REP FREQ	CC	74FF7	MDRCZB	MDR	8
F15	IFF	CC	74FGA	MDRCZC	MDR	0
F15	CURREL AND AGING	CC	74FCB	MDRCZD	MDR	8
F15	MODE LOGIC	CC	74FGC	MDRCZE	MDR	8
F15	SCAN CONVERTER	CC	74FGD	MDRCZF	MDR	8
F15	MEMORY AND TIME	CC	74FGE	MDRCZG	MDR	8
F15	OUTPUT REGISTERS	CC	74FGF	MDRCZH	MDR	8
F15	VOLTAGE REGULATOR		74GGG	MDRCZJ	MDR	8
F15	CONVERT,DC,DC		74FGH	MDRCZK	MDR	8
F15	TIME AND CONTROL 1B3	CC	74FGJ	MDRCZL	MDR	8
F15	LOW PRF	CC	74FGK	MDRCZM	MDR	8
F15	LOW PRF	CC	74FGL	MDRCZN	MDR	8
F15	POWER SUPPLY		74FHO	MDBD	MDR	8
F15	CONTROL,AMP,AZ,ELEV		74FHB	MDBDA	MDR	8
F15	CONTROL,AMP,ROLL		74FHC	MDBDB	MDR	8
F15	FILTER,LOGIC MODULE		74FHD	MDBDC	MDR	8
F15	REGULATOR,SWITCH		74FHE	MDBDD	MDR	8
F15	CONVERTER,DC,DC		74FHF	MDBDE	MDR	8
F15	OSCILLATOR,RF		74FJO	MDBE	MDR	9
F15	VOLT REG		74FJB	MDBEA	MDR	8
F15	CONTROL ASSY,RFGEN		74FJC	MDBER	MDR	8
F15	GEN,RF,RADAR		74FJD	MDBEC	MDR	8
F15	GEN,RF,LOCAL OSC		74FJE	MDBED	MDR	8
F15	FILTER,FMI		74FJJ	MDBEE	MDR	8
F15	CONTROL,RADAR SET		74FKO	MDRF	MDR	8
F15	AMP,FORCE CONTROL		74FKA	MDBFA	MDR	8
F15	HORN,WAVEGUIDE		74FLO	MDBG	MDR	8
F15	DIVIDER,POWER,RF MC9101		74FMA	MDBHA	MDR	8
F15	ANTENNA,RADOME AS 2713		74FMB	MDBHB	MDR	8
F15	ANTENNA,RADOME AS 2714		74FME	MDBHC	MDR	8
F15	ANTENNA,RADOME AS 2749		74FPH	MDBHD	MDR	8
F15	ANTENNA,RADOME AS 2750		74FMJ	MDBHE	MDR	8
F15	ANTENNA,AS 3089		74FMK	MDRHF	MDR	8

PGG095.JIR1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

000000001111111111222222222233333333333344444444445555555555666666666677777777778
12345678901234567890123456789012345678901234567890123456789012345678901234567890

F15	DIVIDER, POWER	74FML	MDHBG	MDR	8
F15	DIVIDER, POWER	74FMM	MDRHH	MDR	8
F15	ISOLATOR, MICROWAVE	74FMN	MDBHJ	MDR	8
F15	WAVEGUIDE ASSY CG-3701	74FPA	MDBJA	MDR	8
F15	WAVEGUIDE ASSY CG-3703	74FPC	MDBJB	MDR	8
F15	WAVEGUIDE ASSY CG-3704	74FPD	MDBJC	MDR	8
F15	WAVEGUIDE ASSY CG-3705	74FPE	MDBJD	MDR	8
F15	WAVEGUIDE ASSY CG-3706	74FPE	MDRJE	MDR	9
F15	PROCESSOR, MX 9099	74FQO	MDBK	MDR	8
F15	DISCRETE OUTPUT CC	74FQB	MDRKA	MDR	8
F15	DISCRETE INPUT CC	74FQC	MDRKB	MDR	8
F15	ANALOG OUTPUT CC	74FQD	MDRKC	MDR	8
F15	ANALOG, DIG, ANALOG CC	74FQE	MDRKD	MDR	8
F15	RADAR SIGNAL PROCESS CC	74FQF	MDRKE	MDR	8
F15	CHANNEL CONTROLLER CC	74FQG	MDRKF	MDR	8
F15	RADAR MULTIPLEX CC	74FQH	MDRKG	MDR	8
F15	MULTIPLEX LOGIC CC	74FQJ	MDRKH	MDR	8
F15	OSC AND TRANSIENT CC	74FQK	MDRKJ	MDR	8
F15	4L4R-3 CC	74FQL	MDRKK	MDR	8
F15	4L4R-2 CC	74FQM	MDRKL	MDR	8
F15	4L4R-1 CC	74FQN	MDRKM	MDR	8
F15	WORKING REGISTERS CC	74FQP	MDRKN	MDR	8
F15	CONTROL 3 CC	74FQQ	MDRKP	MDR	8
F15	CONTROL 2 CC	74FQR	MDRKQ	MDR	8
F15	CONTROL 1 CC	74FQS	MDRKR	MDR	8
F15	SENSE AMP CC	74FQT	MDRKS	MDR	8
F15	Y DECODER CC	74FQU	MDRKT	MDR	8
F15	MEMORY CONTROL CC	74FQV	MDRKU	MDR	8
F15	TEMP TRACK CC	74FQW	MDRKV	MDR	8
F15	X DECODER CC	74FQX	MDRKW	MDR	8
F15	REGULATOR, SWITCHING	74FQY	MDRKX	MDR	8
F15	POWER SUPPLY	74FQZ	MDRKY	MDR	8
F15	INVERTER	74FQ1	MDRKZ	MDR	8
F15	COPE MEMORY UNIT	74FQ2	MDRKZA	MDR	8
F15	MULTIPLEX DRIVER CC	74FQ3	MDRKZB	MDR	8
F15	DISCRETE IO CC	74FQ4	MDRKZC	MDR	8
F15	ADA ELECT CC	74FQ5	MDRKZD	MDR	8
F15	Y DECODER CC	74FQ6	MDRKZE	MDR	8
F15	CC, RDP MULTIPLEX CC	74FQ7	MDRKZF	MDR	8
F15	IO SPECIAL CC	74FQ8	MDRKZG	MDR	8
F15	PROCESSOR, MX 9100	74FSO	MDRL	MDR	8
F15	REGULATOR, LINEAR	74FSB	MDRLA	MDR	8
F15	CONVERTER, AD	74FSC	MDRLB	MDR	8
F15	DETECTOR, FREQ CONTROL	74FSD	MDRLC	MDR	8
F15	AMP, SEARCH	74FSE	MDRLD	MDR	8
F15	AMP, TRACK	74FSF	MDRLE	MDR	8
F15	AMP, WIDE BAND	74FSG	MDRLF	MDR	8
F15	ANTENNA AS 2712	74FUO	MDBM	MDR	8
F15	GIMBAL ASSY	74FUA	MDBMA	MDR	8
F15	GYRO, RATE INT	74FUB	MDBMB	MDR	9

PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

000000001111111122222222333333333344444444445555555555666666666677777777778
12345678901234567890123456789012345678901234567890123456789012345678901234567890

F15	GYRO,RATE ROLL	74FUE	MDRMC	MDR	8
F15	MANIFOLD,ELEVATION	74FUH	MDRMD	MDR	8
F15	COUPLER,ROTARY	74FUL	MDRME	MDR	8
F15	COUPLER,ROTARY	74FUP	MDRBF	MDR	8
F15	CABLE WRAP ASSY,ROLL	74FUT	MDRBMG	MDR	8
F15	COUPLER,ROT,ROLL	74FUW	MDRBMH	MDR	8
F15	TORQUER AND HOUSING	74FUZ	MDRBMJ	MDR	8
F15	INST ASSY,READOUT	74FU5	MDRBMK	MDR	8
F15	CABLE ASSY,BASE	74FVR	MDRBL	MDR	8
F15	BASE,HYD MANIFOLD	74FVH	MDRBMN	MDR	8
F15	MANIFOLD,HYD	74FVK	MDRBMN	MDR	8
F15	CABLE WRAP,AZ	74FVQ	MDRBMQ	MDR	8
F15	CABLE WRAP,ELEV	74FBT	MDRBMQ	MDR	8
F15	INST ASSY,ELEV	74FVW	MDRBMR	MDR	8
F15	INST ASSY AZ	74FVX	MDRBMR	MDR	8
F15	VALVE,HYD SERVO,AZ	74FVZ	MDRBMV	MDR	8
F15	VALVE,HYD SERVO,ELEV	74FV3	MDRBMU	MDR	8
F15	ACTUATOR,HYD,AZ	74FWA	MDRBMV	MDR	8
F15	ACTUATOR,HYD,ELEV	74FWD	MDRBMW	MDR	8
F15	MANIFOLD,HYD	74FWG	MDRBMX	MDR	8
F15	FRAME,AZ AND ELEV	74FWR	MDRBMX	MDR	8
F15	ARRAY ASSY,TWO BAND	74FWV	MDRBMZ	MDR	0
F15	ANTENNA,DIPOLE,IFF	74FWY	MDRBMZA	MDR	0
F15	SWITCH,COUPLER	74FW5	MDRBMZB	MDR	0
F15	SWITCH,CHANNEL SELECT	74FXA	MDRBMZC	MDR	0
F15	4 QUAD SUBASSY ARRY	74FXD	MDRBMZD	MDR	0
F15	HYBRID	74FXG	MDRBMZE	MDR	0
F15	POWER DIVIDER	74FXK	MDRBMZF	MDR	0
F15	BIT COUPLER ASSY	74FXU	MDRBMZG	MDR	0
F15	INDICATOR,IP-1086	74JAO	MDRBN	MDR	8
F15	POWER SUPPLY HI VOLT	74JAA	MDRBNB	MDR	8
F15	AMP,HORIZ DEFLECT	74JAB	MDRBNB	MDR	8
F15	AMP,VERT DEFLECT	74JAC	MDRBNB	MDR	8
F15	AMP,VIDEO	74JAD	MDRBNB	MDR	8
F15	POWER SUPPLY,LO VOLT	74JAE	MDRBNB	MDR	8
F15	ELECTRON TUBE,YOKE ASSY	74JAF	MDRBNB	MDR	8
F15	BEZEL ASSY,IND	74JAG	MDRBNB	MDR	0
F15	RESISTOR ASSY	74JAH	MDRBNB	MDR	8
F15	BIT INTERFACE CC	74JAJ	MDRBNB	MDR	1
F15	CONTROL,BRIGHTNESS	74JAL	MDRBNB	MDR	8
F15	PHOSPHOR PROTECT CC	74JAM	MDRBNB	MDR	8
F15	AMP,LIN CORR CC	74JAN	MDRBNB	MDR	8
F15	FAN ASSY	74JAP	MDRBNB	MDR	8
F15	RELAY	74JAQ	MDRBNB	MDR	8
F15	TRANSFORMER,POWER	74JAR	MDRBNB	MDR	8
F15	PANEL,IND	74JAV	MDRBNB	MDR	1
F15	PROCESSOR,CP-1088	74JCO	MDRBNB	MDR	8
F15	BIT CC	74JCA	MDRBNB	MDR	1
F15	SYMBOL VIDEO MIX CC	74JCB	MDRBNB	MDR	8
F15	X Y DEFLECTION CC	74JCC	MDRBNB	MDR	8

PGG095.JIR1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

00000000111111111222222222333333333344444444445555555555666666666677777777778
12345678901234567890123456789012345678901234567890123456789012345678901234567890

F15	STORKE DEFLECTION	CC	74JCD	MDBPD	MDB	8
F15	STORKE DEFLECTION	CC	74JCE	MDBPE	MDB	8
F15	CHARACTER GENERATOR	CC	74JCF	MDBPF	MDB	8
F15	MASTER IO	CC	74JCG	MDBPG	MDB	8
F15	RADAR DIG. INPUT	CC	74JCH	MDBPH	MDB	8
F15	CCC PARAMETER MEMORY	CC	74JCJ	MDBPJ	MDB	8
F15	PROGRAM MEMORY	CC	74JCK	MDBPK	MDB	8
F15	INSTRUCTION DECODE	CC	74JCL	MDBPL	MDB	8
F15	CONTROL	CC	74JCM	MDBPM	MDB	8
F15	POWER SUPPLY		74JCN	MDBPN	MDB	8
F15	COUPLER	CC	74JCP	MDBPP	MDB	8
F15	VECTOR GEN	CC	74JCR	MDBPR	MDB	8
F15	DECODER 2	CC	74JCT	MDBPT	MDB	8
F15	CKTBKR 64CRE015		42CCA	MDBQA	MDB	A
F15	CKTBKR 64CRE016		42CCA	MDBQB	MDB	A
F15	CKTBKR 64CRE017		42CCA	MDBQC	MDB	A
F15	CKTBKR 64CRE018		42CCA	MDBQD	MDB	A
F15	CKTBKR 64CRE019		42CCA	MDBQE	MDB	A
F15	CKT BKR 64CRE020		42CCA	MDBQF	MDB	A
F15	CKT BKR 64CRE013		42CCA	MDBQG	MDB	A
F15	CKT BKR 64CRE014		42CCA	MDBQH	MDB	A
F15	HUD ATTACK DISPLAYS			MDC	MD	111111111
F15	DISPLAY UNIT		74KAO	MDCA	MDC	8
F15	LIN CORRECTION	CC	74KAB	MDCAA	MDC	8
F15	AUTO BRITE CONTROL	CC	74KAC	MDCAB	MDC	1
F15	STRY RETICLE	CC	74KAD	MDCAC	MDC	1
F15	BORESIGHT CORRECT	CC	74KAE	MDCAD	MDC	8
F15	DEFLECTION AMP	CC	74KAF	MDCAE	MDC	8
F15	POWER SUPPLY, LO VOLT		74KAG	MDCAF	MDC	A
F15	POWER SUPPLY, HI VOLT		74KAH	MDCAG	MDC	A
F15	INT CONT, STRY RETICLE		74KAJ	MDCAH	MDC	1
F15	BLOWER ASSY		74KAK	MDCAJ	MDC	8
F15	ELECTRON TUBE, CATHODE RAY		74KAL	MDCAK	MDC	A
F15	RETICLE ASSY, STANDBY		74KAM	MDCAL	MDC	1
F15	SENSOR ASSY AMBIENT LIGHT		74KAN	MDCAM	MDC	1
F15	PANEL ASSY, CONTROL		74KAP	MDCAN	MDC	8
F15	SENSOR, AUTO BRITE		74KAQ	MDCAP	MDC	1
F15	IND ASSY, RETICLE DEPRESSION		74KAR	MDCAQ	MDC	1
F15	COMBINING GLASS ASSY		74KAS	MDCAR	MDC	8
F15	SENSOR ASSY, BORESIGHT COR		74KAT	MDCAS	MDC	8
F15	BORESIGHT ADJUST	CC	74KAU	MDCAT	MDC	8
F15	COIL, CONNECTOR		74KAV	MDCAU	MDC	A
F15	MOUNTING BASE		74KBO	MDCAV	MDC	0
F15	PROCESSOR, SIG DATA		74KCO	MDCB	MDC	8
F15	IO NO.2	CC	74KCB	MDCBA	MDC	8
F15	IO NO.3	CC	74KCC	MDCBB	MDC	8
F15	DATA MEMORY	CC	74KCD	MDCBC	MDC	8
F15	PROGRAM MEMORY	CC	74KCE	MDCBD	MDC	8
F15	DATA PROC NO.1	CC	74KCF	MDCBE	MDC	8
F15	DATA PROC NO.2	CC	74KCG	MDCBF	MDC	8

PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

000000001111111112222222223333333334444444445555555556666666667777777778
12345678901234567890123456789012345678901234567890123456789012345678901234567890

F15	DATA PROC NO.3	CC	74KCH	MDCBG	MDC	8
F15	DATA PROC NO.4	CC	74KCJ	MDCBH	MDC	8
F15	WAVEFORM GEN NO.1	CC	74KCL	MDCBJ	MDC	8
F15	WAVEFORM GEN NO.2	CC	74KCM	MDCBK	MDC	8
F15	WAVEFORM GEN NO.3	CC	74KCN	MDCBL	MDC	8
F15	WAVEFORM GEN NO.4	CC	74KCP	MDCBM	MDC	8
F15	WAVEFORM GEN NO.5	CC	74KCQ	MDCBN	MDC	8
F15	POWER SUPPLY LO VOLT		74KCR	MDCRP	MDC	A
F15	ID NO.1	CC	74KCS	MDCBQ	MDC	8
F15	ID NO.4	CC	74KCT	MDCBR	MDC	8
F15	FILTER ASSY,POWER		74KCU	MDCBS	MDC	8
F15	MOTHER BOARD		74KCV	MDCBT	MDC	8
F15	SWITCH,AG MODE SELECT		75NAA	MDOCA	MDC	5
F15	SWITCH,VI MODE SELECT		75NAC	MDOCB	MDC	5
F15	WEAPON MODE SWITCH		231BA	MDOCC	MDC	5
F15	CKT BKR MODE SEL 61CBF020		42CDA	MDOCD	MDC	A
F15	CKT BKR 90CBE004		42CCA	MDOCE	MDC	A
F15	CKT BKR 90CBE007		42CCA	MDOCF	MDC	A
F15	CKT BKR 90CBE008		42CCA	MDOCG	MDC	A
F15	CKT BKR 90CBE009		42CCA	MDOCH	MDC	A
F15	HUD DATA RECORDING			MDD	MDC	11111111
F15	CAMERA,MOTION PICTURE		74KEO	MDDA	MDD	8
F15	CHASSIS		74KEA	MDDR	MDD	8
F15	MODULE ASSY		74KER	MDDC	MDD	8
F15	ELECTRONIC MODULE ASSY		74KEC	MDDD	MDD	8
F15	MAGAZINE		74KED	MDEE	MDD	8
F15	LEAD COMPUTING			MDE	MDC	11111111
F15	GYRO,LEAD COMPUTE		74ERO	MDEA	MDE	8
F15	COMPUTER NO.1	CC	74EBA	MDEAA	MDE	8
F15	COMPUTER NO.2	CC	74EBB	MDEAB	MDE	8
F15	PRECESSION AND MAGNET	CC	74EBC	MDEAC	MDE	8
F15	ANALOG INTERFACE	CC	74EBD	MDEAD	MDE	8
F15	ANGLE CONVERSION	CC	74EBF	MDEAE	MDE	8
F15	REGULATOR,FREQ		74ERF	MDEAF	MDE	8
F15	MULTIPLEX INTERFACE	CC	74EBG	MDEAG	MDE	8
F15	LCG TIMING	CC	74ERH	MDEAH	MDE	8
F15	AD,DA	CC	74ERJ	MDEAJ	MDE	8
F15	MULTIPLEX DATA	CC	74ERK	MDEAK	MDE	8
F15	MULTIPLEX DECODING	CC	74ERL	MDEAL	MDE	8
F15	TRANSFORMER,ACCEL		74ERM	MDEAM	MDE	8
F15	ACCELEROMETER		74ERN	MDEAN	MDE	8
F15	POWER SUPPLY		74EHR	MDEAP	MDE	A
F15	HUD TRANSMITTER	CC	74EFS	MDEAQ	MDE	8
F15	CHASSIS		74ERT	MDEAR	MDE	1
F15	GYRO,MINIATURE		74EBX	MDEAS	MDE	8
F15	STIFFEN,REJECT SWITCH		231FA	MDEB	MDE	1
F15	CKT BKR 63CBE003		42CCA	MDECA	MDE	A
F15	CKT BKR 63CBE004		42CCA	MDECB	MDE	A
F15	CKT BKR 63CBE005		42CCA	MDECC	MDE	A
F15	CKT BKR 63CBE002		42CCA	MDECD	MDE	A

PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

00000000011111111122222222233333333334444444445555555556666666667777777778
1234567890123456789012345678901234567890123456789012345678901234567890

F15 GUNS	MGA	MA	1100A0000
F15 SEAL ASSY	75HAB	MGA	0
F15 MOUNT, GUN, FORWARD	75HAD	MGAAA	1
F15 SUPPORT ASSY, GUN, REAR	75HAE	MGAAB	1
F15 GUN FEED AND UNLOAD DRIVE	75HAF	MGAAC	1
F15 UNLOAD DRIVE ASSY	75HBA	MGAAD	1
F15 FEEDER ASSY	75HBD	MGAAG	1
F15 M61A1 20 MM GUN	75HBE	MGAAG	0
F15 LUBRICATOR	75HBF	MGAAG	1
F15 SOLENOID	75HBF	MGAAG	1
F15 ROTOR ASSY	75HBD	MGAAG	1
F15 BARRELS, GUN	75HBE	MGAAG	1
F15 HOUSING ASSY, REAR	75HBF	MGAAG	1
F15 BOLT ASSY, BREECH	75HBJ	MGAAM	1
F15 ADAPTERS, RECOIL	75HDK	MGAAN	1
F15 RETAINER ASSY	75HDL	MGAAP	1
F15 CONTACT ASSY, FIRING	75HDM	MGAAP	1
F15 DRUM ASSY, AMMO HANDLE	75HEA	MGAAB	1
F15 DRUM, AMMO, OUTER	75HEA	MGABA	1
F15 DRUM, AMMO, INNER	75HEB	MGABB	1
F15 EXIT UNIT	75HEC	MGABC	1
F15 ENTRANCE UNIT	75HEF	MGABD	1
F15 FEED AND RETURN CHUTE	75HEG	MGABE	1
F15 FEED CHUTE	75HEJ	MGABF	1
F15 HANDOFF UNIT	75HEK	MGABG	1
F15 DRUM CONVEYER	75HEL	MGABH	1
F15 CHUTE, LOADER ATTACH	75HEM	MGABJ	1
F15 RETURN CHUTE	75HEN	MGABK	1
F15 GEARBOX, AMMO DRUM	75HEQ	MGABL	1
F15 DRUM CONVEYER	75HER	MGABM	1
F15 COVER ASSY, EXIT	75HES	MGABN	0
F15 COVER ASSY, ENTRANCE	75HET	MGABP	0
F15 DISC ASSY, EXIT SCOOP	75HEU	MGABQ	1
F15 DISC ASSY, ENTRANCE SCOOP	75HEV	MGABR	1
F15 CONVEYER ASSY	75HJO	MGAC	1
F15 CHUTE, AMMO	75HJC	MGACA	1
F15 CONVEYER BELT, GUN	75HJD	MGACB	1
F15 TRANSFER UNIT, GUN	75HJF	MGACC	1
F15 INTERFACE UNIT, DRUM	75HJG	MGACD	1
F15 DRIVE UNIT HYD	75HLH	MGAD	1
F15 REGULATOR, HYD FLOW	75HLJ	MGADA	1
F15 GEARBOX DRIVE UNIT	75HQA	MGADB	1
F15 UNIVERSAL JOINT	75HQC	MGADC	1
F15 SHAFT ASSY	75HQD	MGADD	1
F15 CABLE ASSY	75HRE	MGADE	1
F15 GEARBOX ASSY, UNLOAD	75HQB	MGADE	1
F15 GUN FIRE CONTROL		MGB	0000A0000
F15 TRIGGER SWITCH	14AAA	MGBA	A
F15 CKT BKR 61CBF036 CONT	42CDB	MGBB	A
F15 CKT BKR 61CBF044 PWR	42CDA	MGBC	A

PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

0000000001111111112222222222333333333344444444445555555555666666666677777777778
12345678901234567890123456789012345678901234567890123456789012345678901234567890

F15	CKT BKR 61CRF043 CLR	42CDA	MGBD	MGB	1
F15	GUN SELECT SW	75MA0	MGBE	MGB	A
F15	ROUNDS SELECT	75MA0	MGBF	MGB	1
F15	GUN CONTROL LOGIC CC	75MDD	MGBG	MGB	8
F15	GUN CONTROL POWER CC	75MDE	MGBH	MGB	8
F15	INDICATOR,CUM ROUNDS	75HEP	MGBJ	MGB	1
F15	CABLE ASSY, LAST ROUND	75HRA	MGRK	MGB	1
F15	SENSOR ASSY,MAG	75HRC	MGBL	MGB	1
F15	GUN SAFETY CONTROL		MGC	MGA	110000011
F15	ARM SAFETY SW	75NAD	MGCA	MGC	1
F15	MASTER ARM SW	75MA0	MGCB	MGC	1
F15	CABLE ASSY SAFETY SW	75HRB	MGCC	MGC	1
F15	LAND GEAR CONTROL SW	13FAF	MGCD	MGC	1
F15	WEAPONS JETTISON		MJA	FG	111111111
F15	ARMAMENT CONTROL PANEL	75MAC	MJAA	MJA	1
F15	CONVERTER PROGRAMMER	75MCO	MJAB	MJA	1
F15	CKT CARD,MASTER JETT	75MAG	MJAC	MJA	1
F15	EMERGENCY JETTISON		MJB	MJA	K MJC AAAAAAAAAA
F15	CKT BKR 61CBC029	42CCG	MJBA	MJB	1
F15	CKT BKR 61CBC030	42CCG	MJBB	MJB	1
F15	FMER JETT SW	75NAE	MJBC	MJB	A
F15	SELECTIVE JETTISON		MJC	MJA	MJB 111111111
F15	SELECT JETT SW	75MA0	MJCA	MJC	A
F15	JETT SW	75MA0	MJCH	MJC	A
F15	STATION SELECT	75MA0	MJCC	MJC	A
F15	CKT BKR 61CRF023,AG	42CDB	MJCD	MJC	1
F15	CKT BKR 61CRF024,AG	42CDB	MJCE	MJC	1
F15	CKT BKR 61CRC031,ST REL	42CCG	MJCF	MJC	1
F15	CKT BKR 61CBC032,ST REL	42CCG	MJCG	MJC	1
F15	CKT BKR 61CRF027 AIM9	42CDB	MJCH	MJC	1
F15	CKT BKR 61CRF028 AIM9	42CDB	MJCJ	MJC	1
F15	CKT BKR 61CBF025 AIM7	42CDB	MJCK	MJC	1
F15	CKT HKR 61CBF026 AIM7	42CDB	MJCL	MJC	1
F15	CKT BKR 61CBC033 AIM7	42CCG	MJCM	MJC	1
F15	CKT BKR 61CBC034 AIM7	42CCG	MJCN	MJC	1
F15	MISSILES		MMA	MA	1100A0000
F15	WEAPON RELEASE SWITCH	14AAA	MMAA	MMA	A
F15	CKT BKR 61CBF022	42CDB	MMAB	MMA	A
F15	CKT BKR 61CBF020	42CDA	MMAC	MMA	A
F15	AIR TO AIR CKT CARD	75MAA	MMAD	MMA	1
F15	AIM-7 MISSILES		MMB	MMA	111111111
F15	MODE SELECT SWITCH	12ABB	MMBA	MMB	A
F15	AIM-7 STATIONS CONFIGURED		MMC	MBG	111111111
F15	AIM-7 STATIONS CONFIGURED		MMC	MMB	AAAAAAAAA
F15	LAUNCHERS, LAU-106, 4EA	75BR0	MMCA	MMC	1
F15	LINKAGE ASSY	75BRA	MMCB	MMC	2
F15	CYLINDER ASSY, FORWARD	75BBB	MMCC	MMC	2
F15	BREECH BLOCK ASSY	75BRC	MMCD	MMC	2
F15	GAS TUBE	75BRD	MMCE	MMC	2
F15	WIRE BUNDLE UMBILICAL	75BRE	MMCF	MMC	2

PGG095.JIR1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

0000000001111111112222222222333333333344444444445555555555666666666677777777778
12345678901234567890123456789012345678901234567890123456789012345678901234567890

F15	SWITCH, MOTOR FIRE	75BBF	MMCG	MMC	2
F15	MODULE, RESISTOR	75BBG	MMCH	MMC	2
F15	AUDIO TRANSFORMER	75BBH	MMCJ	MMC	1
F15	PISTON ASSY, AFT	75BBJ	MMCK	MMC	2
F15	WIRE BUNDLE	75BBK	MMCL	MMC	2
F15	SWITCH, SAFETY	75BBL	MMCM	MMC	1
F15	BASE ASSY, LAUNCHER	75BBM	MMCN	MMC	1
F15	TOP ASSY, LAUNCHER	75BBN	MMCP	MMC	1
F15	AIM-7 MISSILE CONTROL		MMD	MMB	AAAAAAAAA
F15	AIM-7 TIMER	CC	75MCF	MMDA	8
F15	BATT ARMED	CC	75MCV	MMDB	8
F15	SIMULATED DOPPLER	CC	75MCW	MMDC	8
F15	RELAY POWER	CC	75MC7	MMDD	8
F15	EJECTOR	CC	75MC8	MMDE	8
F15	MOTOR FIRE	CC	75MDB	MMDF	8
F15	BATT ACTIVATE	CC	75MDC	MMDG	8
F15	POWER RELAY, STA6		42CHA	MMDH	2
F15	POWER RELAY, STA3		42CH5	MMDJ	2
F15	POWER RELAY, STA4		42CH5	MMDK	2
F15	POWER RELAY, STA7		42CH5	MMDL	2
F15	CKT BKR, STA 6,7 61CBF047		42CDB	MMDM	5
F15	CKT BKR, STA 6,7 61CBF048		42CDB	MMDN	5
F15	CKT BKR, STA 6,7 61CBF049		42CDB	MMDP	5
F15	CKT BKR, STA 3,4 61CBF051		42CDB	MMDQ	5
F15	CKT BKR, STA 3,4 61CBF052		42CDB	MMDR	5
F15	CKT BKR, STA 3,4 61CBF053		42CDB	MMDS	5
F15	CKT BKR, MTR FIRE 61CBF045		42CDB	MMDT	1
F15	CKT BKR, MTR FIRE 61CBF046		42CDB	MMDU	1
F15	CKT BKR, 61CBC033		42CCG	MMDV	1
F15	CKT BKR, 61CBC034		42CCG	MMDW	1
F15	AIM-9 MISSILES			MME	111111111
F15	MODE SELECT SWITCH	12ABB	MMEA	MME	A
F15	AIM-9 STATIONS CONFIGURED		MMF	MRG	111111111
F15	AIM-9 STATIONS CONFIGURED		MMF	MME	AAAAAAAAA
F15	PYLONS, INBOARD, 2 EA	75DA0	MMFA	MMF	1
F15	LATCH MECH	75DAA	MMFB	MMF	5
F15	BREECH ASSY	75DAB	MMFC	MMF	5
F15	FITTING	75DAC	MMFD	MMF	5
F15	WIRE CABLE ASSY, BREECH	75DAD	MMFE	MMF	5
F15	PYLON STRUCTURE	75DAE	MMFF	MMF	1
F15	RESISTOR BOX ASSY	75DAF	MMFG	MMF	5
F15	WIRE CABLE ASSY, AIM-9	75DAJ	MMFH	MMF	5
F15	LAUNCHER, AER/-3B, 2 EA	75BC0	MMFJ	MMF	1
F15	COVER ASSY, NOSE	75BCB	MMFK	MMF	0
F15	COVER ASSY, CENTER	75BCC	MMFL	MMF	0
F15	FAIRING ASSY, AFT	75BCD	MMFM	MMF	0
F15	HARNESSE, ELECTRICAL	75BCE	MMFN	MMF	5
F15	POWER SUPPLY	75BCF	MMFP	MMF	5
F15	HOOK ASSY	75BCG	MMFQ	MMF	5
F15	DETENT, SNUB ASY	75BCH	MMFR	MMF	5

PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

000000000111111112222222223333333334444444445555555556666666667777777778
12345678901234567890123456789012345678901234567890123456789012345678901234567890

F15	FITTING ASSY,AFT	75BCJ	MMFS	MMF	5
F15	RAIL ASSY	75BCK	MMFT	MMF	5
F15	ADAPTER,MISSILE 4EA	75BFO	MMFU	MMF	2
F15	AIM-9 MISSILE CONTROL		MMG	MME	AAAAAAAA
F15	AIM-9 OPTION MONITOR CC	75MAF	MMGA	MMG	1
F15	AIM-9 RELAY SWITCHING CC	75MCA	MMGB	MMG	8
F15	AIM-9 LOGIC SWITCHING CC	75MCP	MMGC	MMG	8
F15	AIM-9 POWER SWITCHING CC	75MDJ	MMGD	MMG	8
F15	POWER RELAY,STA 2A	42CHY	MMGE	MMG	2
F15	POWER RELAY,STA 2B	42CHY	MMGF	MMG	2
F15	POWER RELAY,STA 8A	42CHS	MMGG	MMG	2
F15	POWER RELAY,STA 8B	42CHS	MMGH	MMG	2
F15	CKT BKR 61CBF071 STA2	42CDB	MMGJ	MMG	5
F15	CKT BKR 61CBF070 STA2	42CDB	MMGK	MMG	5
F15	CKT BKR 61CBF069 STA2	42CDB	MMGL	MMG	5
F15	CKT BKR 61CBF068 STA2	42CDB	MMGM	MMG	5
F15	CKT BKR 61CBF057 STA8	42CDB	MMGN	MMG	5
F15	CKT BKR 61CBF058 STA8	42CDB	MMGP	MMG	5
F15	CKT BKR 61CBF059 STA9	42CDB	MMGQ	MMG	5
F15	CKT BKR 61CBF060 STA8	42CDB	MMGR	MMG	5
F15	IFF INTERROGATE		MX	M	000000000
F15	REC,TRANS	65BAO	MXA	MX	8
F15	RECEIVER	65BAA	MXAA	MX	8
F15	BOARD,SELF TEST	65BAC	MXAB	MX	0
F15	BOARD,VIDEO	65BAD	MXAC	MX	8
F15	BOARD,MODE	65BAE	MXAD	MX	8
F15	BOARD,REC SIDE LOAD SUPP	65BAF	MXAE	MX	8
F15	POWER SUPPLY	65BAL	MXAF	MX	8
F15	AMP ASSY	65BAM	MXAG	MX	8
F15	COMPUTER,INTERROGATOR,KIR	65BEO	MXH	MX	8
F15	PROCESSOR,RADAR TARGET	65BHO	MXC	MX	8
F15	CKT CARD,SYNC MONITOR	65BHA	MXCA	MX	8
F15	CKT CARD TGT REPLY DET	65BHB	MXCB	MX	8
F15	CKT CARD PROC NO 1	65BHC	MXCC	MX	8
F15	CKT CARD PROC NO 2	65BHD	MXCD	MX	8
F15	CKT CAPD BUFFER	65BHE	MXCE	MX	8
F15	CKT CARD CONTROL	65BHF	MXCF	MX	8
F15	POWER SUPPLY	65BHG	MXCG	MX	8
F15	FRONT PANEL ASSY	65BHH	MXCH	MX	8
F15	CONTROL PANEL,C9C13	63EFO	MXD	MX	8
F15	CHASSIS	63BEA	MXDA	MX	8
F15	PANEL,EDGE LIGHT	63BEH	MXDB	MX	1
F15	CKT BKR 81CBF002	42CCA	MXEA	MX	A
F15	CKT BKR 102CBEO02	42CCA	MXEB	MX	A
F15	CKT BKR 103CBEO02	42CCA	MXEC	MX	A
F15	CKT BKR 103CBEO03	42CCA	MXED	MX	A
F15	TACTICAL ELECT WARFARE		MY	M	000000000
F15	COUNTERMEASURES RECEIVING		MYA	MY	555555555
F15	RECEIVER,CM,R-1866 CC	76AAO	MYAA	MYA	8
F15	SYN CONT NO.1 CC	76AAB	MYAAA	MYA	8

PGG095.JIR1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

0000000001111111122222222233333333344444444455555555566666666667777777778
 1234567890123456789012345678901234567890123456789012345678901234567890

F15	SYN CONT NO.2	CC	76AAC	MYAAB	MYA	8
F15	PRIME VIDEO PROCESS	CC	76AAD	MYAAC	MYA	8
F15	TIME CONTROL	CC	76AAF	MYAAD	MYA	8
F15	MULTIPLEXER	CC	76AAG	MYAAE	MYA	8
F15	MULTIPLEX CONT	CC	76AAK	MYAAF	MYA	8
F15	NOISE GAIN CONT	CC	76AAM	MYAAG	MYA	8
F15	COMPUTE INPUT DATA	CC	76AAP	MYAAH	MYA	8
F15	VIDEO PROCESS	CC	76AAQ	MYAAJ	MYA	8
F15	FINE FREQ	CC	76AAR	MYAAK	MYA	8
F15	INPUT DATA LINK	CC	76AAT	MYAAL	MYA	8
F15	CLOCK GEN DISP	CC	76AAU	MYAAM	MYA	8
F15	BIT,AUDIO	CC	76AAV	MYAAN	MYA	8
F15	SWITCH DRIVER	CC	76AAW	MYAAP	MYA	8
F15	tone FILTER	CC	76AAX	MYAAQ	MYA	8
F15	YIG DRIVER	CC	76AAZ	MYAAR	MYA	8
F15	COMPUTE OUTPUT DATA	CC	76AAZ	MYAAS	MYA	8
F15	PW AND AMP CONV	CC	76AA3	MYAAT	MYA	8
F15	LIMITER,IF		76AA7	MYAAU	MYA	8
F15	MIXER,PREAMP		76AA8	MYAAV	MYA	8
F15	PROCESSOR,DIGITAL		76ABA	MYAB	MYA	8
F15	MICRO PROCESS	CC	76ARB	MYABA	MYA	8
F15	CPU NO.1	CC	76ARC	MYABB	MYA	8
F15	CPU NO.2	CC	76ABD	MYARC	MYA	8
F15	AUTO CONTROL	CC	76ABE	MYABD	MYA	8
F15	CORE STACK	CC	76ABF	MYABE	MYA	8
F15	MEMORY CONTROL	CC	76ABG	MYABF	MYA	8
F15	MEMORY ADDRESS	CC	76ABH	MYABG	MYA	8
F15	MEMORY DATA	CC	76ABJ	MYABH	MYA	8
F15	MOTHERBOARD		76ABK	MYABJ	MYA	8
F15	AMP,LIMITER FILTER		76ABL	MYABK	MYA	8
F15	BIT OSC. LO BAND		76ABM	MYABL	MYA	8
F15	IF SWITCH		76ABN	MYABM	MYA	8
F15	FIXED DIVIDER		76ABP	MYABN	MYA	8
F15	POST AMP		76ABQ	MYABP	MYA	8
F15	FILTER,HI PASS		76ABR	MYABQ	MYA	8
F15	YIG PRESELECTION		76ABS	MYABR	MYA	8
F15	FRONT END ASST		76ABT	MYABS	MYA	8
F15	POWER LEVELER		76ABU	MYABT	MYA	8
F15	LOG ASSY,IF		76ABV	MYABU	MYA	8
F15	VOLT CONT OSC		76ABW	MYABV	MYA	8
F15	REG AND MEMORY PROTECT	CC	76ABX	MYABW	MYA	8
F15	CHASSIS ASSY		76ABY	MYABX	MYA	8
F15	CONT AUTO GAIN	CC	76AB1	MYABY	MYA	8
F15	BIT CONTROL	CC	76AB2	MYABZ	MYA	8
F15	TRACKER	CC	76AB3	MYABZA	MYA	8
F15	RECEIVER,CM,R1867		76AC0	MYAC	MYA	8
F15	TUNER SUBASSY		76ACA	MYACA	MYA	8
F15	YIG PRESELECTION		76ACB	MYACB	MYA	8
F15	BIT OSC		76ACC	MYACC	MYA	8
F15	MIXER PREAMP		76ACD	MYACD	MYA	8

PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

000000001111111112222222223333333334444444445555555556666666667777777778
1234567890123456789012345678901234567890123456789012345678901234567890

F15	VOLT CONT OSC		76ACE	MYACE	MYA	8
F15	FREQ DIVIDER		76ACF	MYACF	MYA	8
F15	HEATSINK		76ACG	MYACG	MYA	8
F15	SYN CONT NO.1	CC	76ACJ	MYACJ	MYA	8
F15	SYN CONTNO.2		76ACK	MYACK	MYA	8
F15	SWITCH DRIVER		76ACL	MYACL	MYA	8
F15	VAR DIVIDER		76ACM	MYACM	MYA	8
F15	REF SUPPLY		76ACN	MYACN	MYA	8
F15	INPUT DATA CONT		76ACP	MYACP	MYA	8
F15	DUAL YIG DRIVER		76ACQ	MYACQ	MYA	8
F15	FREQ DIVIDER		76ACR	MYACR	MYA	8
F15	CHASSIS		76ACS	MYACS	MYA	8
F15	POWER SUPPLY,DP 6968		76ADC	MYAD	MYA	8
F15	MODULE, &- 15V,-25V		76ADA	MYADA	MYA	8
F15	MODULE, -25V,-100V		76ADB	MYADR	MYA	8
F15	MODULE, &5V,&-15V		76ADC	MYADC	MYA	8
F15	MODULE,FREQ INV		76ADD	MYADD	MYA	8
F15	BIT ANALOG 1 CC		76ADE	MYADE	MYA	0
F15	MODULE,BIT PWR SUPPLY		76ADF	MYADF	MYA	0
F15	MODULE,-5V,&100V		76ADG	MYADG	MYA	0
F15	MODULE,&5V,-100V		76ADH	MYADH	MYA	0
F15	CHASSIS ASSY		76ADJ	MYADJ	MYA	8
F15	CAPACITOR ASSY		76ADM	MYADM	MYA	8
F15	HEATSINK ASSY		76ADN	MYADN	MYA	8
F15	FILTER ASSY		76ADP	MYADP	MYA	8
F15	FILTER ASSY		76ADQ	MYADQ	MYA	8
F15	BIT LOGIC CC		76ADR	MYADR	MYA	0
F15	BIT ANALOG 2 CC		76ADS	MYADS	MYA	0
F15	SWITCH CARD ASSY		76ADT	MYADT	MYA	8
F15	CONTRL,REC C-9428		76AFC	MYAF	MYA	8
F15	DISPLAY,CM,IP-1164		76AGC	MYAG	MYA	8
F15	LINELOCK CC		76AGA	MYAGA	MYA	8
F15	DISPLAY CONTROL CC		76AGB	MYAGB	MYA	8
F15	CONVERTER CC		76AGC	MYAGC	MYA	8
F15	DISPLAY DATA REG CC		76AGD	MYAGD	MYA	8
F15	STROKE GEN CC		76AGE	MYAGE	MYA	8
F15	PREAMP CC		76AGF	MYAGF	MYA	8
F15	Z AXIS CC		76AGG	MYAGG	MYA	8
F15	CATHODE RAY TUBE ASSY		76AGJ	MYAGJ	MYA	8
F15	POWER SUPPLY,HI VOLT		76AGK	MYAGK	MYA	8
F15	PHOSPHOR PROTECT CC		76AGP	MYAGP	MYA	8
F15	YOKE DRIVER ASSY		76AGQ	MYAGQ	MYA	8
F15	CHASSIS ASSY,DISPLAY		76AGR	MYAGR	MYA	8
F15	PANEL,ILLUMINATED		76AGS	MYAGS	MYA	8
F15	CONTROL,C-9429		76AHO	MYAH	MYA	8
F15	LINES,RF		76AJO	MYAJ	MYA	8
F15	ANTENNA GROUP,OE-167		76AKO	MYAK	MYA	8
F15	ANTENNA GROUP,OE-166		76ALC	MYAL	MYA	8
F15	ANTENNA GROUP,OE-169		76AMO	MYAM	MYA	8
F15	ANTENNA GROUP,OE-168		76ANO	MYAN	MYA	8

PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

0000000001111111112222222222333333333344444444445555555555666666666677777777778
1234567890123456789012345678901234567890123456789012345678901234567890

F15	ANTENNA, AS-2934		76APO	MYAP	MYA	8
F15	CKT BKR, 65CBF020		42CDA	MYAQ	MYA	A
F15	CKT BKR, 65CBF021		42CDA	MYAR	MYA	A
F15	CKT BKR, 65CBF022		42CCA	MYAS	MYA	A
F15	CKT BKR, 65CBF024		42CDA	MYAT	MYA	A
F15	INTERFERENCE BLANKING			MYB	MY	111111111
F15	BLANKER INTERFERENCE		76CAO	MYBA	MYB	8
F15	PROGRAMMER	CC	76CAA	MYBAA	MYB	8
F15	BIT	CC	76CAB	MYBAB	MYB	8
F15	ID NO.1	CC	76CAC	MYBAC	MYB	8
F15	ID NO.2	CC	76CAD	MYBAD	MYB	8
F15	ID NO.3	CC	76CAE	MYBAE	MYB	8
F15	ID NO.4	CC	76CAF	MYBAF	MYB	8
F15	ID NO.5	CC	76CAG	MYBAG	MYB	8
F15	PWR SUPPLY NO 1	CC	76CAH	MYBAH	MYB	8
F15	MOTHERBOARD ASSY	CC	76CAJ	MYBAJ	MYB	8
F15	PWR SUPPLY NO 2	CC	76CAL	MYBAL	MYB	8
F15	CKT BKR 67CBL002		42CFA	MYBB	MYB	A
F15	EWWS			MYC	MY	555555555
F15	ANTENNA, AS-2958		76GBU	MYCAA	MYC	8
F15	ANTENNA, AS-2957		76GCO	MYCAB	MYC	8
F15	ANTENNA, AS-2958		76GDC	MYCAC	MYC	8
F15	REC, TRANS GROUP OP-132		76GFO	MYCB	MYC	8
F15	CHASSIS		76GFA	MYCBA	MYC	8
F15	PWR SUPPLY		76GFG	MYCBB	MYC	8
F15	REGULATOR		76GFH	MYCBC	MYC	8
F15	VIDEO 2,3	CC	76GFR	MYCBD	MYC	8
F15	VIDEO 2	CC	76GFT	MYCBE	MYC	8
F15	VIDEO 3	CC	76GFU	MYCBF	MYC	8
F15	GEN CKTS	CC	76GFV	MYCBG	MYC	8
F15	TYPE 3 DET	CC	76GFW	MYCBH	MYC	8
F15	INTERFACE	CC	76GFX	MYCBJ	MYC	8
F15	PULSE SPACE DET	CC	76GFY	MYCBK	MYC	8
F15	TYPE 2 DET	CC	76GFZ	MYCBL	MYC	8
F15	PASSIVE INT	CC	76GF1	MYCBM	MYC	8
F15	DEFROUTER	CC	76GF2	MYCBN	MYC	8
F15	ENCODER	CC	76GF3	MYCBP	MYC	8
F15	BIT EVALUATE	CC	76GF5	MYCRO	MYC	8
F15	CLOCK GEN	CC	76GF6	MYCBR	MYC	8
F15	PROGRAM CONTROL	CC	76GF7	MYCRS	MYC	8
F15	PROGRAMMER	CC	76GF8	MYCBT	MYC	8
F15	DUPLEXER, S16 DIST		76GGG	MYCBU	MYC	8
F15	CHASSIS ASSY		76GGH	MYCBV	MYC	8
F15	COMPARATOR	CC	76GGP	MYCBW	MYC	8
F15	REC, CM, TYPE 2		76GHE	MYCC	MYC	8
F15	GAIN TIME	CC	76GHF	MYCCA	MYC	8
F15	AUTO GAIN	CC	76GHH	MYCCB	MYC	8
F15	FI AMP	CC	76GHH	MYCCC	MYC	8
F15	VIDEO AMP	CC	76GHJ	MYCCD	MYC	8
F15	REC, CM, TYPE 3		76GHY	MYCD	MYC	8

PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

00000000011111111112222222222333333333344444444445555555555666666666677777777778
12345678901234567890123456789012345678901234567890123456789012345678901234567890

F15	RF PREAMP	CC	76GHZ	MYCDA	MYC	8
F15	AUTO GAIN	CC	76GH1	MYCDB	MYC	8
F15	RF AMP	CC	76GH2	MYCDC	MYC	8
F15	VIDEO AMP	CC	76GH3	MYCDD	MYC	8
F15	TRANSMITTER,CM		76GJK	MYCE	MYC	8
F15	OSC ASSY		76GJL	MYCEA	MYC	8
F15	MODULATOR	CC	76GJS	MYCEB	MYC	8
F15	REGULATOR	CC	76GJT	MYCEC	MYC	8
F15	DC CONV	CC	76GJU	MYCED	MYC	8
F15	DIPLEXER		76GKA	MYCEE	MYC	8
F15	CABLE GROUP		76GMO	MYCF	MYC	8
F15	TX LINE 221		76GMA	MYCFA	MYC	8
F15	TX LINE 223		76GME	MYCFB	MYC	8
F15	TX LINE 225		76GMJ	MYCFC	MYC	8
F15	TX LINE 227		76GMN	MYCFD	MYC	8
F15	TX LINE 229		76GMS	MYCFE	MYC	8
F15	ELECTRONIC SWITCH		76GNO	MYCG	MYC	8
F15	DIPLEXER ASSY		76GPO	MYCH	MYC	8
F15	CKT BKR 115CBE007		42CCA	MYCJA	MYC	A
F15	CKT BKR 115CBE008		42CCA	MYCJB	MYC	A
F15	CKT BKR 115CBE009		42CCA	MYCJC	MYC	A
F15	ECM TRANSMISSION			MYD	MY	55555555
F15	AMP,RF,AM6597		76HA0	MYDA	MYD	8
F15	SET CONTROL CC		76HAA	MYDAA	MYD	8
F15	PWR SUPPLY,LOW VOLT		76HAB	MYDAB	MYD	8
F15	AUTO LEVEL CONT CC		76HAG	MYDAC	MYD	8
F15	PWR SUPPLY,FINAL TWT		76HAH	MYDAD	MYD	8
F15	SWITCH MODE REG CC		76HAJ	MYDAE	MYD	8
F15	SWITCH MODE REG ASSY		76HAL	MYDAF	MYD	8
F15	INVERTER		76HAM	MYDAG	MYD	8
F15	PWR SUPPLY		76HAN	MYDAH	MYD	8
F15	ANALOG CC		76HAQ	MYDAJ	MYD	8
F15	PWR TRANS ASSY		76HAR	MYDAK	MYD	8
F15	PWR SUPPLY,DRIVER TWT		76HAW	MYDAL	MYD	8
F15	MODULATOR,TWT		76HA4	MYDAM	MYD	8
F15	FILTER,COUPLER		76HA5	MYDAN	MYD	8
F15	TWT BANDI DRIVER		76HA6	MYDAP	MYD	8
F15	TWT BANDI FINAL		76HA7	MYDAQ	MYD	8
F15	AMP SUB ASSY,RF		76HA8	MYDAR	MYD	8
F15	CONTROL,OSC LRV BAND 1		76HBO	MYDB	MYD	8
F15	PROGRAMMER MX-9412		76HBA	MYDBA	MYD	8
F15	TUNING UNIT		76HBD	MYDBB	MYD	8
F15	SHORT WORD LOGIC	CC	76HBE	MYDBC	MYD	8
F15	FUNCTION GEN NO1	CC	76HBF	MYDBD	MYD	8
F15	FUNCTION GEN NO2	CC	76HBG	MYDBE	MYD	8
F15	DECODER	CC	76HBH	MYDBF	MYD	8
F15	MEMORY	CC	76HBJ	MYDBG	MYD	8
F15	SINENOISE GEN	CC	76HBK	MYDBH	MYD	8
F15	SINENOISE CONT	CC	76HBL	MYDBJ	MYD	8
F15	TUNING UNIT SUBASSY		76HBM	MYDBK	MYD	8

PGG095.JIR1 DATE = C9/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

00000000111111112222222222333333333344444444445555555555666666666677777777778
1234567890123456789012345678901234567890123456789012345678901234567890

F15	CONTRNL, OSC C9341		76HCC	MYDC	MYD	8
F15	INTERFACE	CC	76HCA	MYOCA	MYD	8
F15	CMD LOGIC	CC	76HCB	MYDCB	MYD	8
F15	STATUS GEN	CC	76HCC	MYDCC	MYD	8
F15	PULSE MOD GEN	CC	76HCD	MYDCD	MYD	8
F15	PWR SUPPLY LO VOLT		76HCE	MYDCE	MYD	8
F15	LOVOLT CONT		76HCF	MYDCF	MYD	8
F15	REG CONT		76HCG	MYDCG	MYD	8
F15	SWITCH MODE		76HCH	MYDCH	MYD	8
F15	PS SUBASSY		76HCJ	MYDCJ	MYD	8
F15	FAULT LOCATOR, BAND 1		76HCP	MYDCK	MYD	0
F15	FAULT LOCATE MEMORY	CC	76HCO	MYDCL	MYD	0
F15	FAULT LOCATE CONTROL	CC	76HCR	MYDCM	MYD	0
F15	AM DETECT	CC	76HCS	MYDCN	MYD	0
F15	FAULT DETECT	CC	76HCT	MYDCP	MYD	0
F15	FM DETECT	CC	76HCU	MYDCQ	MYD	0
F15	FAULT LOCATE SUB ASSY		76HCX	MYDCR	MYD	0
F15	FAULT COUNT	CC	76HCY	MYDCS	MYD	0
F15	CONT OSC SUB ASSY		76HDA	MYDCT	MYD	8
F15	AMPLIFIER, AM 6598		76HFC	MYDD	MYD	8
F15	SET CONTROL	CC	76HFA	MYDDA	MYD	8
F15	PWR SUPPLY		76HFB	MYddb	MYD	8
F15	AUTO LEVEL CONT	CC	76HFG	MYDDC	MYD	8
F15	PWR SUPPLY BAND 2		76HFH	MYDDD	MYD	8
F15	SWITCH MODE REG	CC	76HFJ	MYDDE	MYD	8
F15	SWITCH MODE REG ASSY		76HFL	MYDDF	MYD	8
F15	INVERTER		76HFM	MYDDG	MYD	8
F15	PWR SUPPLY SUBASSY		76HFN	MYDDH	MYD	8
F15	ANALOG CC		76HFO	MYDDJ	MYD	8
F15	POWER TRANSFORMER ASSY		76HFR	MYDDK	MYD	8
F15	POWER SUPPLY, DRIVER TWT		76HFW	MYDDL	MYD	8
F15	MOD, TWT BAND 2		76HF4	MYDDM	MYD	8
F15	FILTER		76HF5	MYDDN	MYD	8
F15	TWT, BAND 2 DRIVER		76HF6	MYDDP	MYD	8
F15	TWT, BAND 2 FINAL		76HF7	MYDDQ	MYD	8
F15	AMPSUBASSY		76HF8	MYDDR	MYD	8
F15	CONT OSC LRU BAND 2		76HGO	MYDE	MYD	8
F15	PROGRAMMER MX9412		76HGA	MYDEA	MYD	8
F15	TUNING UNIT TN551		76HGC	MYDEB	MYD	8
F15	SHORT WORD LOGIC	CC	76HGE	MYDEC	MYD	8
F15	FUNC GEN 1	CC	76HGF	MYDED	MYD	8
F15	FUNC GEN 2	CC	76HGG	MYDEE	MYD	8
F15	DECODER	CC	76HGH	MYDEF	MYD	8
F15	MEMORY	CC	76HGI	MYDEG	MYD	8
F15	SINENOISE GEN	CC	76HGL	MYDEH	MYD	8
F15	SINENOISE CONTROL	CC	76HGL	MYDEJ	MYD	8
F15	TUNE UNIT SUBASSY		76HGM	MYDEK	MYD	8
F15	TUNING UNIT, TN-552		76HGT	MYDEL	MYD	8
F15	SHORTWORD LOGIC	CC	76HGU	MYDEM	MYD	8
F15	FUNC GEN 1	CC	76HGV	MYDEN	MYD	8

PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

00000000111111112222222222333333333344444444445555555555666666666677777777778
12345678901234567890123456789012345678901234567890123456789012345678901234567890

F15	FUNC GEN 2	CC	76HGW	MYDEP	MYD	8
F15	DECODER	CC	76HGX	MYDEQ	MYD	8
F15	MEMORY	CC	76HGY	MYDER	MYD	8
F15	SINENOISE GEN	CC	76HGZ	MYDES	MYD	8
F15	SINENOISE CONTROL	CC	76HG1	MYDET	MYD	8
F15	TUNING UNIT SUBASSY		76HG2	MYDEU	MYD	8
F15	CONTROL OSC C-9342		76HH0	MYDF	MYD	8
F15	INTERFACE	CC	76HHA	MYDFA	MYD	8
F15	CMD LOGIC	CC	76HHB	MYDFB	MYD	8
F15	STATUS GEN	CC	76HHC	MYDFC	MYD	8
F15	PULSE MOD GEN	CC	76HHD	MYDFD	MYD	8
F15	PWR SUPPLY		76HHE	MYDFE	MYD	8
F15	LO VOLT CNTRL	CC	76HHF	MYDFF	MYD	8
F15	REG CONTROL	CC	76HHG	MYDFG	MYD	8
F15	SWITCH MODE	CC	76HHH	MYDFH	MYD	8
F15	PWR SUPPLY SUBASSY		76HHJ	MYDFJ	MYD	8
F15	FAULT LOCATER BAND2		76HHP	MYDFK	MYD	8
F15	FAULT LOCATE MEMORY	CC	76HHQ	MYDFL	MYD	0
F15	FAULT LOCATE CONTROL	CC	76HHR	MYDFM	MYD	0
F15	AM DETECT	CC	76HHS	MYDFN	MYD	0
F15	FAULT DETECT	CC	76HHT	MYDFP	MYD	0
F15	FM DET AMPCT	CC	76HHU	MYDFQ	MYD	0
F15	FAULT DET SUBASSY		76HHX	MYDFR	MYD	0
F15	FAULT CONTROL	CC	76HHY	MYDFS	MYD	0
F15	CONT OSC SUBASSY		76HJA	MYDFT	MYD	8
F15	ANTENNA AS 2902		76HLA	MYDGA	MYD	8
F15	ANTENNA AS 2903		76HLB	MYDGB	MYD	8
F15	WAVEGUIDE ASSY 1 SEG A		76HMA	MYDHA	MYD	8
F15	WAVEGUIDE ASSY 1 SEG B		76HMB	MYDHB	MYD	8
F15	WAVEGUIDE ASSY 1 SEG D		76HMC	MYDHC	MYD	8
F15	WAVEGUIDE ASSY 2 SEG A		76HMD	MYDHD	MYD	8
F15	WAVEGUIDE ASSY 2 SEG B		76HME	MYDHE	MYD	8
F15	WAVEGUIDE ASSY 3 SEG A		76HMF	MYDHF	MYD	8
F15	WAVEGUIDE ASSY 3 SEG B		76HMG	MYDHG	MYD	8
F15	WAVEGUIDE ASSY 1 SEG C		76HMH	MYDHH	MYD	8
F15	WAVEGUIDE ASSY 2 SEG C		76HMJ	MYDHJ	MYD	8
F15	RF CABLE ASSY NO 1		76HMK	MYDHK	MYD	8
F15	RF CABLE ASSY NO 2		76HML	MYDHL	MYD	8
F15	RF CABLE ASSY NO 3		76HMM	MYDHM	MYD	8
F15	NETWORK SUMMATION		76HMQ	MYDHN	MYD	8
F15	CKT BKR 69CBF011		42CDA	MYDJA	MYD	A
F15	CKT BKR 69CBF012		42CDA	MYDJB	MYD	A
F15	CKT BKR 69CBF013		42CDA	MYDJC	MYD	A
F15	CKT BKR 69CBF014		42CDA	MYDJD	MYD	A
F15	CKT BKR 69CBF015		42CDA	MYDJE	MYD	A
F15	CKT BKR 69CBF016		42CDA	MYDJF	MYD	A
F15	CKT BKR 69CBF017		42CDA	MYDJG	MYD	A
F15	CKT BKR 69CBF018		42CDA	MYDJH	MYD	A
F15	CKT BKR 69CBF019		42CDA	MYDJJ	MYD	A
F15	PDD SUSPENSION		MYE	MY		AAAAAAAAA

PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

000000001111111122222222333333333344444444555555556666666677777777778
12345678901234567890123456789012345678901234567890123456789012345678901234567890

F15	PODS,TAC ELECT WARFARE	76FCO	MYFA	MYE	8
F15	PYLON ASSY,SUU-61A	76JAO	MYEB	MYE	8
F15	CABLE ASSY,16	76JAA	MYEBA	MYE	8
F15	CABLE ASSY 18	76JAB	MYEBB	MYE	8
F15	LINK ASSY,LOWER	76JAC	MYEBC	MYE	8
F15	HOOK	76JAD	MYEBD	MYE	8
F15	CKT BKR 71CRE003 LH	42CCA	MYECA	MYE	5
F15	CKT BKR 71CE004 LH	42CCA	MYECB	MYE	5
F15	CKT BKR 71CE005 LH	42CCA	MYECC	MYE	5
F15	CKT BKR 71CE006 LH	42CCA	MYECD	MYE	5
F15	CKT BKR 71CRF007 CONT	42CDA	MYECE	MYE	A
F15	CKT BKR 71CBF013 RH	42CDA	MYECF	MYE	5
F15	CKT BKR 71CBF014 RH	42CDA	MYECG	MYE	5
F15	CKT BKR 71CBF015 RH	42CDA	MYECH	MYE	5
F15	CKT BKR 71CBF016 RH	42CDA	MYECJ	MYE	5
F15	LANDING GEAR		N		AAAAAAAAA
F15	EXTEND LANDING GEAR		NA	N	0000000AO
F15	EXTEND MAIN GEAR		NAA	NA	AAAAAAAAA
F15	TURING HYDRAULIC	13FBB	NAAA	NAA	1
F15	EXTEND NOSE GEAR		NAB	NA	AAAAAAAAA
F15	LEFT MLG EQUIPMENT		NAC	NAA	AAAAAAAAA
F15	LG RETRACTABLE MAIN LH	13AAO	NACA	NAC	1
F15	SWIVEL MECHANISM LH	13AAA	NACB	NAC	A
F15	BRACE ASSY UPPER DRAG LH	13AEO	NACC	NAC	A
F15	RIGHT MLG EQUIPMENT		NAD	NAA	AAAAAAAAA
F15	LG RETRACTABLE MAIN RH	13AEO	NADA	NAD	8
F15	SWIVEL MECHANISM RH	13AEA	NADB	NAD	A
F15	BRACE ASSY UPPER DRAG RH	13AEO	NADC	NAD	A
F15	MLG DOWN ACTUATE EA OF 2		NAE	NAA	AAAAAAAAA
F15	VALVE LINEAR DIRECT CONT	13FPA	NAEA	NAE	A
F15	MLG FWD DOOR-GEAR UNLCK ACT		NAF	NAA	AAAAAAAAA
F15	UPLATCH MECHANISM	13AHC	NAFA	NAF	A
F15	CYL ASSY UPLATCH AND DOOR	13AHD	NAFB	NAF	A
F15	DOOR MECHANISM	13AHL	NAFC	NAF	8
F15	NORMAL CONTROL		NAG	NA	NAO 111111111
F15	HANDLE CONTROL	13FAR	NAGA	NAG	A
F15	SWITCH CONTROL RELAY	13FAC	NAGB	NAG	5
F15	CIRCUIT BREAKER	9913B	NAGC	NAG	1
F15	DIODE PANEL NLG	13FCA	NAGD	NAG	1
F15	NLG FWD DOOR-GEAR UNLCK ACT		NAH	NAB	AAAAAAAAA
F15	CYL ASSY ACT LIN DR-UPLTCH	13BDA	NAHA	NAH	A
F15	UPLATCH MECH FWD DOOR	13RDE	NAHB	NAH	A
F15	LOCK MECH NLG	13BFC	NAHC	NAH	8
F15	NLG EQUIPMENT		NAJ	NAB	AAAAAAAAA
F15	SHOCK ABSORBER DIR ACT	13BAO	NAJA	NAJ	A
F15	BRACE ASSY DRAG NLG	13BBO	NAJB	NAJ	A
F15	NLG DOWN ACTUATE		NAK	NAB	AAAAAAAAA
F15	VALVE LINEAR DIR CONT NLG	13FBD	NAKA	NAK	A
F15	MLG ROTATE DWN LOCK EAOF2		NAL	NAE	NAN 111111111
F15	CYC ASSY ACT LINEAR MLG	13ACO	NALA	NAL	8

PGG095.JIR1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

```

000000000111111111222222222233333333333344444444445555555555666666666677777777778
12345678901234567890123456789012345678901234567890123456789012345678901234567890
F15 SWITCH DOOR OPEN MLG 13AGD NALB NAL A
F15 VALVE RESTRICTOR MLG 13FBB NALC NAL 1
F15 VALVE CHECK COMP MLG 13FBH NALD NAL 1
F15 PANEL RELAY MISC NO 9 42CH7 NALF NAL A
F15 PANEL RELAY MISC NO 10 42CH8 NALF NAL A
F15 FWD DOORS CLOSE LOCK NAM NAL 000000000
F15 SWITCH DOWN LIMIT MLG 13AGB NAMA NAM A
F15 CYL ASSY 13AHD NAMB NAM A
F15 DOOR MECHANISM 13AHL NAMC NAM A
F15 MLG ROTATE AND LOCK BACKUP NAN NAE K NAL AAAAAAAAAA
F15 DOOR-GEAR UNLOCK MLG EAOF2 NAP NAF NAQ 111111111
F15 VALVE LINEAR DIR CONT MLG 13FBA NAPA NAP A
F15 VALVE RESTRICTOR MLG 13FBB NAPB NAP 1
F15 CONTROL-UNLOCK BACKUP NAQ NA K NAG AAAAAAAAAA
F15 CONTROL-UNLOCK BACKUP NAQ NAF K NAP AAAAAAAAAA
F15 CONTROL-UNLOCK BACKUP NAQ NAH K NAR AAAAAAAAAA
F15 NLG DOOR-GEAR UNLOCK NAR NAH NAQ 111111111
F15 VALVE LINEAR DIR CONT NLG 13FBD NARA NAR A
F15 VALVE RESTRICTOR CHECK 13FBE NARB NAR 1
F15 VALVE CHECK COMP NLG 13FBJ NARC NAR 1
F15 NLG ROTATE AND LOCK BACKUP NAS NAK K NAT AAAAAAAAAA
F15 NLG ROTATE AND LOCK NAT NAK NAS 111111111
F15 LINK DOWNLOCK 13BBA NATA NAT 8
F15 CYL ASS ACT LINEAR NLG 13RCO NATB NAT A
F15 LOCK MECHANISM NLG 13BFO NATC NAT 8
F15 SWITCH DOOR OPEN 13BGC NATD NAT A
F15 VALVE RESTRICTOR CHECK 13FRE NATE NAT 1
F15 PANEL RELAY MISC NO 9 42CH7 NATF NAT A
F15 FWD NLG DOOR CLOSE LOCK NAU NAT 000000000
F15 CYL ASSY ACT DOOR UPLATCH 13BDA NAUA NAU A
F15 UPLATCH MECH FWD DOOR 13BDE NAUB NAU A
F15 SWITCH NLG DOWN LIMIT 13BGB NAUC NAU A
F15 EMERGENCY CONTROL NAW NAN AAAAAAAAAA
F15 EMERGENCY CONTROL NAW NAQ AAAAAAAAAA
F15 EMERGENCY CONTROL NAW NAS AAAAAAAAAA
F15 LG EMERGENCY RELEASE 13EAO NAWA NAW 0
F15 CONTROL ASSY EMERGENCY LG 13EAG NAWB NAW A
F15 VALVE SHUTOFF EMERGENCY 13EAF NAWC NAW A
F15 EXTEND INDICATION NAY NAW AAAAAAAAAA
F15 SWITCH DOWN LIMIT 2FA 13AGB NAYA NAY 5
F15 SWITCH DOOR CLOSE LIM 2EA 13AGC NAYB NAY 0
F15 SWITCH DOOR OPEN 2EA 13AGD NAYC NAY 0
F15 SWITCH UP LIMIT 2EA 13AGE NAYD NAY 0
F15 SWITCH NLG UP LIMIT 13BGA NAYE NAY 0
F15 SWITCH NLG DOWN LIMIT 13BGB NAYF NAY 5
F15 SWITCH DOOR OPEN 13BGC NAYG NAY 0
F15 SWITCH DOOR CLOSE 13RGE NAYH NAY 0
F15 CONTROL INDICATOR LG 13FAC NAYJ NAY 0
F15 LAMP GEAR POSITION 13FAD NAYK NAY 1
F15 LAMP GEAR HANDLE 13FAE NAYL NAY 1

```

PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

000000001111111122222222333333333344444444445555555555666666666677777777778
12345678901234567890123456789012345678901234567890123456789012345678901234567890

F15 SWITCH GEAR POSITION	13FAF	NAYM	NAY	0
F15 RELAY 3EA	13FAG	NAYN	NAY	3
F15 PANEL RELAY MISC NO 7	42CH5	NAYQ	NAY	0
F15 CRCT BRKR ESS BUS DOOR 6L	42CCG	NAYR	NAY	A
F15 RETRACT LANDING GEAR		NB	NX	010000000
F15 RETRACT CONTROL		NBA	NB	AAAAAAAAA
F15 SWITCH LIMIT PROX 2EA	13AGA	NBAA	NBA	A
F15 HANDLE CONTROL	13FAB	NBAB	NBA	A
F15 SWITCH CONTROL RELAY	13FAC	NBAC	NBA	A
F15 PANEL DIODE MLG	13FCA	NBAD	NBA	1
F15 PANEL RELAY MISC NO 7	42CH5	NBAE	NBA	1
F15 CRCT BRKR CENT INST PANEL	9913B	NBAF	NBA	1
F15 CRCT BRKR ESS BUS PNL 6L	42CCG	NBAG	NBA	A
F15 TURNING HYDRAULIC	13FBF	NBAH	NBA	1
F15 RETRACT MAIN GEAR		NBB	NB	AAAAAAAAA
F15 RETRACT NOSE GEAR		NBC	NB	AAAAAAAAA
F15 LEFT MAIN EQUIPMENT		NBD	NBB	AAAAAAAAA
F15 LG RETRACTABLE MAIN LH	13AAO	NBOA	NBD	8
F15 SWIVEL MECH LH	13AAA	NBDB	NBD	A
F15 BRACE ASSY UP DRAG MLG LH	13APO	NBDC	NBD	A
F15 DOOR MLG INBOARD LH	13AHA	NBDD	NBD	A
F15 DOOR MLG AFT LH	13AHB	NBDE	NBD	A
F15 DOOR MLG OUTBOARD LH	13AHG	NBDF	NBD	A
F15 MAIN DOOR OPE GEAR UNLCK 2		NBE	NBB	AAAAAAAAA
F15 UPLATCH MECHANISM	13AHC	NBEA	NBE	8
F15 CYL ASSY UPLTCH AND DOOR	13AHD	NBEB	NBE	8
F15 DOOR MECHANISM	13AHL	NBEC	NBE	8
F15 VALVE LINEAR DIR CONT MLG	13FBA	NBED	NBE	A
F15 VALVE RESTRICTOR MLG	13FBB	NBEE	NBE	1
F15 MAIN GEAR ROTATE EA OF 2		NBF	NBB	AAAAAAAAA
F15 CYL ASSY ACT LINEAR MLG	13ACO	NBFA	NBF	8
F15 SWITCH DOOR OPEN	13AGO	NBFB	NBF	A
F15 VALVE LINEAR DIR CONT MLG	13FBA	NBFC	NBF	A
F15 VALVE CHECK COMP MLG	13FRH	NBFD	NBF	1
F15 PANEL RELAY MISC NO 9	42CH7	NBFE	NBF	1
F15 PANEL RELAY MISC NO 10	42CH8	NBFF	NBF	1
F15 RIGHT MAIN EQUIPMENT		NBG	NBH	AAAAAAAAA
F15 MLG RETRACTABLE RH	13AEO	NBGA	NBG	8
F15 SWIVEL MECHANISM RH	13AEA	NGBB	NBG	A
F15 BRACE ASSY UP DRAG MLG RH	13AFO	NBGC	NBG	A
F15 DOOR MLG INBOARD RH	13AHE	NBGD	NBG	A
F15 DOOR MLG AFT RH	13AHF	NBGE	NBG	A
F15 DOOR MLG OUTBOARD RH	13AHH	NBGF	NBG	A
F15 DOOR CLOSE LOCK EA OF 2		NBH	NBB	AAAAAAAAA
F15 SWITCH UP LIMIT	13AGE	NBHA	NBH	A
F15 UPLATCH MECHANISM	13AHC	NBHB	NBH	8
F15 CYL ASSY UPLATCH AND DOOR	13AHD	NBHC	NBH	8
F15 DOOR MECHANISM	13AHL	NBHD	NBH	8
F15 VALVE LINEAR DIR CONT MLG	13FBA	NBHE	NBH	A
F15 PANEL RELAY MISC NO 9	42CH7	NBHF	NBH	1

PGG095.JIR1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

```

0000000001111111111222222222333333333344444444445555555555666666666677777777778
12345678901234567890123456789012345678901234567890123456789012345678901234567890
F15 NOSE GEAR EQUIPMENT NBJ NRC AAAAAAAAAA
F15 SHOCK ABSORBER DIR ACT NG 13BA0 NBJA NBJ 8
F15 BRACE ASSY DRAG NLG 13BR0 NBJB NBJ A
F15 DOOR SUBASSY NLG FORWARD 13BDC NBJC NBJ A
F15 DOOR NLG AFT 13BFD NBJD NBJ A
F15 FWD DOOR OPE GEAR UNLOCK NBK NRC AAAAAAAAAA
F15 CYL ASSY LINEAR DR UPLTCH 13BDA NBKA NBK 8
F15 UPLATCH MECH FWD DOOR 13RDE NBKB NBK 8
F15 LOCK MECHANISM NLG 13BFO NBKC NBK 8
F15 VALVE LINEAR DIR CONT NLG 13FBD NBKD NBK A
F15 VALVE RESTRICTOR CK NLG 13FBE NBKE NBK 1
F15 VALVE CHECK COMPENSATOR 13FBJ NBKF NBK 1
F15 NOSE GEAR ROTATE NBL NRC AAAAAAAAAA
F15 LINK DOWNLOCK 13BEA NBLA NBL 1
F15 CYL ASSY ACT LINEAR NLG 13RC0 NBLB NBL 8
F15 LOCK MECHANISM NLG 13BFO NBLC NBL 8
F15 SWITCH DOOR OPEN 13BGC NBLD NBL A
F15 VALVE LINEAR DIR CONT NLG 13FBD NBLE NBL A
F15 PANEL RELAY MISC NO 9 42CH7 NBLF NBL 1
F15 DOOR CLOSE AND LOCK NBM NRC AAAAAAAAAA
F15 CYL ASSY ACT LNR DR UPLTCH 13EDA NBMA NBM 8
F15 UPLATCH MECH FWD DOOR 13BDE NBMB NBM 8
F15 SWITCH NLG UP LIMIT 13EGA NBMC NBM A
F15 VALVE LINEAR DIR CONT NLG 13FBD NBMD NBM A
F15 VALVE RESTRICTOR CK NLG 13FBE NBME NBM 1
F15 PANEL RELAY MISC NO 9 42CH7 NBMF NBM 1
F15 RETRACT INDICATION NBN NX I NB 010000000
F15 SWITCH MLG DOWN LIMIT 13AGB NBNB NBN 1
F15 SWITCH MLG DOOR CLOSE LIM 13AGC NBNC NBN A
F15 SWITCH MLG UP LIMIT 13AGE NBNE NBN 1
F15 SWITCH NLG UP LIMIT 13BGA NBNE NBN 1
F15 SWITCH NLG DOWN LIMIT 13BGB NBNG NBN 1
F15 SWITCH DOOR CLOSE 13BGE NBNK NBN A
F15 CONTROL INDICATOR LG 13FAC NBNL NBN 1
F15 LAMP GEAR POSITION 13FAD NBNM NBN 1
F15 LAMP GEAR HANDLE 13FAE NBNN NBN 1
F15 SWITCH GEAR POSITION 13FAF NBNP NBN A
F15 RELAY ONE OF THREE 13FAG NBNQ NBN 3
F15 PANEL RELAY MISC NO 7 42CH5 NBNR NBN A
F15 CRCT BRKR CENT INST PNL 9913B NBNS NBN 1
F15 CRCT BRKR ESS BUS PNL 6L 42CCG NBNT NBN A
F15 ROLLING SUPPORT NC N 1A00000A1
F15 MLG WHEEL EA OF 2 NCA NC AAAAAAAAAA
F15 WHEEL MLG TIRED 13AJ0 NCA NCA 0
F15 TIRE MLG 13AJA NCAB NCA 8
F15 WHEEL MLG 13AJB NCAC NCA 8
F15 BEARING 13AJC NCAD NCA 3
F15 VALVE INFLATION 13AJD NCA NCA 0
F15 NLG WHEEL NCB NC AAAAAAAAAA
F15 WHEEL NLG TIRED 13BJ0 NCB NCB 0

```


PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

0000000001111111111222222222333333333344444444445555555555666666666677777777778
12345678901234567890123456789012345678901234567890123456789012345678901234567890

F15 TIRE NLG	13BJA	NCBH	NCB	8
F15 WHEEL NLG	13BJB	NCBC	NCB	8
F15 BEARINGS	13BJC	NCBD	NCB	3
F15 EXT RET EFFECT AVG		ND	NAC	AAAAA
F15 EXT RET EFFECT AVG		ND	NBA	AAAAA
F15 EMERGENCY HYDR PRESSURE		NEB	NAW	AAAAA
F15 ACCUMULATOR HYDR JFS	24DAD	NEBA	NEB	A
F15 RETRACT ATTENUATION		NX	N	111111111
F15 ESSENTIAL DIST		UAA	B	S05AAAAA90
F15 ESSENTIAL PWR DISTRIBUTION		UAA	HCU	FAAAAAA
F15 ESSENTIAL PWR DISTRIBUTION		UAA	BFD	FAAAAAA
F15 ESSENTIAL PWR DISTRIBUTION		UAA	RNB	FAAAAAA
F15 ESSENTIAL PWR DISTRIBUTION		UAA	BNC	FAAAAAA
F15 ESSENTIAL PWR DISTRIBUTION		UAA	RNK	FAAAAAA
F15 ESSENTIAL PWR DISTRIBUTION		UAA	BNL	FAAAAAA
F15 ESSENTIAL PWR DISTRIBUTION		UAA	BRH	FAAAAAA
F15 ESSENTIAL PWR DISTRIBUTION		UAA	BSR	FAAAAAA
F15 ESSENTIAL PWR DISTRIBUTION		UAA	LBSW	FAAAAAA
F15 ESSENTIAL PWR DISTRIBUTION		UAA	RBSW	FAAAAAA
F15 ESSENTIAL PWR DISTRIBUTION		UAA	BTB	FAAAAAA
F15 ESSENTIAL PWR DISTRIBUTION		UAA	BTT	FAAAAAA
F15 ESSENTIAL PWR DISTRIBUTION		UAA	BTW	FAAAAAA
F15 ESSENTIAL PWR DISTRIBUTION		UAA	BTZ	FAAAAAA
F15 ESSENTIAL PWR DISTRIBUTION		UAA	BXC	FAAAAAA
F15 ESSENTIAL PWR DISTRIBUTION		UAA	BXE	FAAAAAA
F15 ESSENTIAL DIST		UAA	CAC	FAAAAAA
F15 ESSENTIAL DIST		UAA	CAH	AAAAA
F15 ESSENTIAL DIST		UAA	CBC	FAAAAAA
F15 ESSENTIAL DIST		UAA	CBE	AAAAA
F15 ESSENTIAL DIST		UAA	CRH	FAAAAAA
F15 ESSENTIAL DIST		UAA	CRKC	AAAAA
F15 ESSENTIAL POWER DIST		UAA	CBKD	AAAAA
F15 ESSENTIAL POWER DIST		UAA	CBMC	AAAAA
F15 ESSENTIAL POWER DIST		UAA	CBQC	AAAAA
F15 ESSENTIAL DIST		UAA	CCA	AAAAA
F15 ESSENTIAL DIST		UAA	DACB	FAAAAAA
F15 ESSENTIAL DIST		UAA	DACC	AAAAA
F15 ESSENTIAL DIST		UAA	FAN	AAAAA
F15 ESSENTIAL DIST		UAA	EAW	FAAAAAA
F15 ESSENTIAL DIST		UAA	ECR	AAAAA
F15 ESSENTIAL DIST		UAA	FDC	FAAAAAA
F15 ESSENTIAL DIST		UAA	EFF	AAAAA
F15 ESSENTIAL DIST		UAA	EP	FAAAAAA
F15 ESSENTIAL AC DC DISTRIBUT		UAA	FA	AAAAA
F15 ESSENTIAL AC DC DISTRIBUT		UAA	FBB	AAAAA
F15 ESSENTIAL AC DC DISTRIBUT		UAA	FCK	AAAAA
F15 ESSENTIAL AC DC DISTRIBUT		UAA	FDN	AAAAA
F15 ESSENTIAL AC DC DISTRIBUT		UAA	FDR	AAAAA
F15 ESSENTIAL AC DC DISTRIBUT		UAA	FF	AAAAA
F15 ESSENTIAL POWER DIST		UAA	FG	S111111111

PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

```

0000000001111111112222222223333333333444444444555555555666666666777777777
1234567890123456789012345678901234567890123456789012345678901234567890
F15 ESSENTIAL DISTRIBUTION      UAA      GDC      AAAAAAAAAA
F15 ESSENTIAL DISTRIBUTION      UAA      GFB      AAAAAAAAAA
F15 ESSENTIAL DIST.             UAA      GHA      000000000
F15 ESSENTIAL DIST             UAA      MBF      000000000
F15 ESSENTIAL POWER DIST        UAA      MDB      AAAAAAAAAA
F15 ESSENTIAL DIST             UAA      MJB      AAAAAAAAAA
F15 ESSENTIAL DIST             UAA      MMD      AAAAAAAAAA
F15 ESSENTIAL DIST             UAA      NAG      AAAAAAA1AA
F15 ESSENTIAL DIST             UAA      NAY      FAAAAAAAAA
F15 ESSENTIAL DIST             UAA      NBA      AAAAAAAAAA
F15 ESSENTIAL DIST             UAA      NBN      FAAAAAAAAA
F15 NON-ESSENTIAL DISTRIBUTION  UAB      BCD      AAAAAAAAAA
F15 NON-ESSENTIAL DISTRIBUTION  UAB      BCNA     AAAAAAAAAA
F15 NON-ESSENTIAL DISTRIBUTION  UAB      RCR      AAAAAAAAAA
F15 NONESSENTIAL POWER DIST     UAB      RFB      AAAAAAAAAA
F15 NON ESSENTIAL DIST         UAB      RRC      SAAAAAAAAA
F15 NON-ESSENTIAL DISTRIBUTION  UAB      BRD      FAAAAAAAAA
F15 NON-ESSENTIAL DISTRIBUTION  UAB      BRG      FAAAAAAAAA
F15 NON-ESSENTIAL DISTRIBUTION  UAB      BRH      FAAAAAAAAA
F15 NON ESSENTIAL DIST         UAB      BSE      S00001000
F15 NON-ESSENTIAL DISTRIBUTION  UAB      BSG      FAAAAAAAAA
F15 NON-ESSENTIAL DISTRIBUTION  UAB      BSK      FAAAAAAAAA
F15 NON-ESSENTIAL DISTRIBUTION  UAB      BSP      FAAAAAAAAA
F15 NONESSENTIAL POWER DIST     UAB      HUA      AAAAAAAAAA
F15 NONESSENTIAL DIST         UAB      CAD      AAAAAAAAAA
F15 NONESSENTIAL DIST         UAB      CAJ      FAAAAAAAAA
F15 NON ESSENTIAL DIST         UAB      CBB      FAAAAAAAAA
F15 NONESSENTIAL DIST         UAB      CBA      S1111111A
F15 NONESSENTIAL DIST         UAB      CBD      FAAAAAAAAA
F15 NONESSENTIAL DIST         UAB      CRF      FAAAAAAAAA
F15 NONESSENTIAL DIST         UAB      CBG      FAAAAAAAAA
F15 NONESSENTIAL DIST         UAB      CRKE     AAAAAAAAAA
F15 NONESSENTIAL DIST         UAB      CBLA     AAAAAAAAAA
F15 NONESSENTIAL DIST         UAB      CBMB     S66666666
F15 NONESSENTIAL DIST         UAB      CRMD     FAAAAAAAAA
F15 NONESSENTIAL DIST         UAB      CRME     FAAAAAAAAA
F15 NONESSENTIAL DIST         UAB      CBPC     AAAAAAAAAA
F15 NONESSENTIAL DIST         UAB      CBQE     AAAAAAAAAA
F15 NONESSENTIAL DIST         UAB      CCA      111111111
F15 NONESSENTIAL DIST         UAB      DACD     AAAAAAAAAA
F15 NONESSENTIAL DIST         UAB      DAD      AAAAAA
F15 NON ESSENTIAL DIST         UAB      DADE     FAAAAAAAAA
F15 NONESSENTIAL DIST         UAB      DAEC     AAAAAAAAAA
F15 NONESSENTIAL DIST         UAB      DBA      FAAAAAAAAA
F15 NON ESSENTIAL DIST         UAB      DBRC     AAAAAAAAAA
F15 NONESSENTIAL DIST         UAB      DC       AAAAAAAAAA
F15 NONESSENTIAL DIST         UAB      DD       AAAAAAAAAA
F15 NONESSENTIAL DIST         UAB      EAB      AAAAAAAAAA
F15 NONESSENTIAL DIST         UAB      EAU      AAAAAAAAAA
F15 NON ESSENTIAL DIST         UAB      EBC      AAAAAAAAAA

```

PG095.JIR1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

```

000000001111111122222222333333333344444444555555556666666677777777778
1234567890123456789012345678901234567890123456789012345678901234567890
F15 NON ESSENTIAL DIST UAB FCL AAAAAAAAAA
F15 NON ESSENTIAL DIST UAB EDB AAAAAAAAAA
F15 NON ESSENTIAL DIST UAB EFB FAAAAAAAAA
F15 NON ESSENTIAL AC DC DIST UAB FBJ AAAAAAAAAA
F15 NON ESSENTIAL AC DC DIST UAB FDWA AAAAAAAAAA
F15 NON ESSENTIAL DIST UAB MCB AAAAAAAAAA
F15 NON ESSENTIAL DIST UAB MD AAAAAAAAAA
F15 NON ESSENTIAL DIST UAB MX AAAAAAAAAA
F15 NON ESSENTIAL DIST UAB MY AAAAAAAAAA
F15 NON ESSENTIAL AC DC DIST UAB UHBB 000000000
F15 26VAC DISTRIBUTION UAC BND AAAAAAAAAA
F15 26VAC DISTRIBUTION UAC BNE AAAAAAAAAA
F15 26VAC DISTRIBUTION UAC BNJ AAAAAAAAAA
F15 26VAL DISTRIBUTION UAC FCL AAAAAAAAAA
F15 26VAC DIST UAC UHAC AAAAAAAAAA
F15 26VAC DIST UAC UHBF AAAAAAAAAA
F15 26VAC DIST UAC UHCF AAAAAAAAAA
F15 TRANSFORMER 42AKF UACA UAC A
F15 NORMAL POWER SOURCES UAD UAA UDC 111111111
F15 NORMAL POWER SOURCES UAD UAB AAAAAAAAAA
F15 NORMAL POWER SOURCES UAD UAC AAAAAAAAAA
F15 CONNECTORS,ELECTRICAL 42EAA UADA UAD 1
F15 RELAY,AC PRESENT 6K-L006 42CHA UADB UAD A
F15 CKT BKR,AC PRES 6CRE011 42CCG UADC UAD A
F15 CKT BKR,EMGR GEN SOL 6CBE042CCG UADD UAD A
F15 NORMAL AC SOURCE UAF UAD AAAAAAAAAA
F15 LEFT AC SOURCE LUAF UAF KRUF AAAAAAAAAA
F15 RIGHT AC SOURCE RUAF UAF KLUAF AAAAAAAAAA
F15 GEN,CSD ASSY 42ADD LUAF LUAF A
F15 GEN,CSD ASSY 42ADQ RUAF RUAF A
F15 GENERATOR 42ADA LUAF LUAF A
F15 GENERATOR 42ADB RUAF RUAF A
F15 DRIVE 42ADB LUAF LUAF A
F15 DRIVE 42ADB RUAF RUAF A
F15 CONTROL UNIT 42AFQ LUAF LUAF 8
F15 CONTROL UNIT 42AFQ RUAF RUAF 8
F15 BOARD,PC1 42AFA LUAF LUAF 8
F15 BOARD,PC1 42AFA RUAF RUAF 8
F15 BOARD,PC2 42AFB LUAF LUAF 8
F15 BOARD,PC2 42AFB RUAF RUAF 8
F15 BOARD,PC3 42AFC LUAF LUAF 8
F15 BOARD,PC3 42AFC RUAF RUAF 8
F15 MODULE 42AFD LUAF LUAF 8
F15 MODULE 42AFD RUAF RUAF 8
F15 TRANSFORMER ASSY,CURRENT 42AHQ LUAF LUAF A
F15 TRANSFORMER ASSY,CURRENT 42AHQ RUAF RUAF A
F15 LIMITER,CURRENT 42AKG LUAF LUAF A
F15 LIMITER,CURRENT 42AKG RUAF RUAF A
F15 CONTACTOR,AC BUS 42AKA LUAF LUAF A
F15 CONTACTOR,AC BUS 42AKA RUAF RUAF A

```


PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

000000000111111111222222222333333333344444444455555555566666666677777777778
12345678901234567890123456789012345678901234567890123456789012345678901234567890

F15	GENERATOR SWITCH	231BF	LUAFM	LUAF	A
F15	GENERATOR SWITCH	231BF	RUAFM	RUAF	A
F15	TUBING OIL,CSD,LH	42AKM	LUAFN	LUAF	5
F15	TUBING OIL,CSD,RH	42AKN	RUAFN	RUAF	5
F15	GEN OOT	CAUT LIGHT 44EAO	LUAFP	LUAF	0
F15	GEN OOT	CAUT LIGHT 44EAO	RUAFP	RUAF	0
F15	HARNESS	CAUT LIGHT 44EAA	LUAFQ	LUAF	0
F15	HARNESS	CAUT LIGHT 44EAA	RUAFQ	RUAF	0
F15	LOGIC UNIT	CAUT LIGHT 44ECO	LUAFR	LUAF	0
F15	LOGIC UNIT	CAUT LIGHT 44ECO	RUAFR	RUAF	0
F15	BOARD ASSY	CAUT LIGHT 44ECA	LUAFS	LUAF	0
F15	BOARD ASSY	CAUT LIGHT 44ECA	RUAFS	RUAF	0
F15	BOARD ASSY	CAUT LIGHT 44ECB	LUAFU	LUAF	0
F15	BOARD ASSY	CAUT LIGHT 44ECB	RUAFU	RUAF	0
F15	BOARD ASSY	CAUT LIGHT 44ECC	LUAFV	LUAF	0
F15	BOARD ASSY	CAUT LIGHT 44ECC	RUAFV	RUAF	0
F15	PWR SUP	CAUT LIGHT 44ECE	LUAFW	LUAF	0
F15	PWR SUP	CAUT LIGHT 44ECE	RUAFW	RUAF	0
F15	PWR SUP	CAUT LIGHT 44ECF	LUAFX	LUAF	0
F15	PWR SUP	CAUT LIGHT 44ECF	RUAFX	RUAF	0
F15	CABLE ASSY	CAUT LIGHT 44EDD	LUAFY	LUAF	0
F15	CABLE ASSY	CAUT LIGHT 44EDD	RUAFY	RUAF	0
F15	WIRE BUNDLE	CAUT LIGHT 24EAB	LUAFZ	LUAF	2
F15	WIRE BUNDLE	CAUT LIGHT 24EAB	RUAFZ	RUAF	2
F15	GROUND AC SOURCE		UAG	UAE	000000000
F15	MONITOR UNIT	42BAO	UAGA	UAG	8
F15	RECEPTACLE	42BPA	UAGB	UAG	5
F15	CONTACTOR	42BBB	UAGC	UAG	A
F15	NORMAL DC SOURCE		UDA	UAD	AAAAAAAAA
F15	LEFT TR SOURCE		LUDB	UDA	KLADB AAAAAAAAAA
F15	RIGHT TR SOURCE		RUDB	UDA	KLADB AAAAAAAAAA
F15	TRANS RECT	42DRC	LUDBA	LUDB	A
F15	TRANS RECT	42DRO	RUDBA	RUDB	A
F15	CONTACTOR	42DCA	LUDBB	LUDB	A
F15	CONTACTOR	42DCA	RUDBB	RUDB	A
F15	LIMITER,CURRENT	42DCC	LUDBC	LUDB	A
F15	LIMITER,CURRENT	42DCC	RUDBC	RUDB	A
F15	CKT BKR LEFT TR 3CBEO07	42CCA	LUDBD	LUDB	A
F15	CKT BKR RT TR 3CBFO13	42CDA	RUDBD	RUDB	A
F15	CKT BKR LEFT TR 3CBEO08	42CCA	LUDBE	LUDB	A
F15	CKT BKR RT TR 3CBFO14	42CDA	RUDBE	RUDB	A
F15	CKT BKR LEFT TR 3CBEO09	42CCA	LUDBF	LUDB	A
F15	CKT BKR RT TR 3CBFO15	42CDA	RUDBF	RUDB	A
F15	EMERGENCY POWER SOURCE		UDC	UAA	K UAD AAAAAAAAAA
F15	CONNECTORS,ELECTRICAL	42EAA	UDCA	UDC	1
F15	CONTACTOR	42FDD	UDCB	UDC	A
F15	CONTACTOR,ELECTRICAL	42FDM	UDCC	UDC	A
F15	MOTOR GEN,HYD	42FEO	UDCD	UDC	A

PGG095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

0000000001111111112222222222333333333344444444445555555555666666666677777777778
12345678901234567890123456789012345678901234567890123456789012345678901234567890

F15 GENERATOR	42FFA	UDCE	UDC	A
F15 MOTOR	42FEB	UDCF	UDC	A
F15 CONTROL, MOTOR GEN	42FFC	UDCG	UDC	8
F15 BOARD, PC A1	42FFA	UDCH	UDC	8
F15 BOARD, PC A2	42FFB	UDCJ	UDC	8
F15 BASE SUB ASSY	42FFC	UDCK	UDC	8
F15 CONTROL SWITCH	231BF	UDCL	UDC	A
F15 VALVE, EMER GEN, STAB SEL	14AFB	UDCM	UDC	5
F15 EMER GEN STATUS		UDD	UDC	000000000
F15 GEN ON CAUTION LIGHT	44EAO	UDDA	UDD	A
F15 HARNESS ASSY	44EAA	UDDB	UDD	8
F15 LOGIC UNIT	44ECO	UDDC	UDD	8
F15 BOARD ASSY	44ECA	UDDD	UDD	8
F15 BOARD ASSY	44ECB	UDD E	UDD	8
F15 BOARD ASSY	44ECC	UDDF	UDD	8
F15 PWR SUPPLY	44ECD	UDDG	UDD	8
F15 PWR SUPPLY	44ECE	UDDH	UDD	8
F15 CABLE ASSY	44ECF	UDDJ	UDD	8
F15 WIRE BUNDLE	44EDO	UDDK	UDD	8
F15 CKT BKR LT RESET 6CR0010	42CCG	UDDL	UDD	A
F15 PCIA HYD DISTRIBUTION		UHAA	RFCJ	111111111
F15 TUBING HYDRAULIC	45AAC	UHAAA	UHAA	5
F15 PCIB HYD DISTRIBUTION		UHAB	LF AF	UHBA 111111111
F15 PCIB HYD DISTRIBUTION		UHAB	LF CJ	UHBB 111111111
F15 TUBING HYDRAULIC	45AAC	UHABA	UHAB	5
F15 PRESS SENSING INDICATION		UHAC	I UHAF	111111111
F15 INDICATOR HYD PRESS	45AAK	UHACA	UHAC	1
F15 SWITCH PRESS MANIFOLD	45AFC	UHACB	UHAC	1
F15 TRANSMITTER PRESS GAUGE	45ABD	UHACC	UHAC	1
F15 INDICATOR TEMP VOL	45ADD	UHACD	UHAC	0
F15 LOGIC UNIT CAUTION LITE	44ECC	UHACE	UHAC	1
F15 PANEL CKT BKR GRD SW RH	42CFB	UHACF	UHAC	1
F15 DISPLAY UNIT CAUTION LITE	44EAO	UHACG	UHAC	1
F15 HYDRAULIC COOLING		UHAD	UHAG	000000000
F15 VALVE TEMP REGULATING	45AAF	UHADA	UHAD	A
F15 HEAT EXCHANGER FUEL/OIL	46ADE	UHADB	UHAD	A
F15 HYDRAULIC FILTERING		UHAE	UHAG	111111111
F15 FILTER ELEMENT RETURN	45ABA	UHAEA	UHAE	1
F15 FILTER ELEMENT PRESSURE	45ARJ	UHAE B	UHAF	1
F15 HYDRAULIC PRESS GENERATION		UHAF	UHAG	AAAAAAAAA
F15 PUMP ASSY AXIAL VARIABLE	45AEO	UHAF A	UHAF	8
F15 MANIFOLD HYD	45AEB	UHAFB	UHAF	1
F15 PUMP HYDRAULIC PCI	45AFC	UHAF C	UHAF	A
F15 PCI HYD PRESS AND SUPPLY		UHAG	FXX K UHCC	SAAAAAAAAAA
F15 PCI HYD PRESS AND SUPPLY		UHAG	UHAA	FAAAAAAAAAA
F15 PCI HYD PRESS AND SUPPLY		UHAG	UHAB	FAAAAAAAAAA
F15 RESERVOIR HYD	45AIC	UHAGA	UHAG	8
F15 CYLINDER RESERVOIR	45AIF	UHAGB	UHAG	5
F15 COUPLING HALF QUICK CON	45AAF	UHAGC	UHAG	1
F15 MANIFOLD HYD SYSTEM ACC	45AFC	UHAGD	UHAG	8

PGG095.J1P1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

```

0000000001111111112222222223333333334444444445555555556666666667777777778
1234567890123456789012345678901234567890123456789012345678901234567890
F15 VALVE CHECK 45AFB UHAGE UHAG 1
F15 VALVE RELIEF 45ARE UHAGF UHAG 1
F15 MANIFOLD 45AFK UHAGG UHAG 1
F15 UTILITY A DIST UHBA RCD SAAAAAAAAA
F15 UTILITY "A" DISTRIBUTION UHBA BCE FAAAAAAAAA
F15 UTILITY "A" DISTRIBUTION UHBA BCH FAAAAAAAAA
F15 UTILITY A DIST UHBA BTA SAAAAAAAAA
F15 UTILITY "A" DISTRIBUTION UHBA BTC FAAAAAAAAA
F15 UTILITY "A" DISTRIBUTION UHBA BTE FAAAAAAAAA
F15 UTILITY A HYD DIST UHBA EPF AAAAAAAAAA
F15 UTILITY A DISTRIBUTION UHBA LFAF K UHAB AAAAAAAAAA
F15 UTILITY A DISTRIBUTION UHBA FDWA AAAAAAAAAA
F15 UTILITY A DISTRIBUTION UHBA FFB AAAAAAAAAA
F15 UTILITY HYDA UHBA GDB AAAAAAAAAA
F15 UTIL HYD A UHBA GFB AAAAAAAAAA
F15 UTILITY A HYD DIST UHBA MDR AAAAAAAAAA
F15 UTILITY A DIST UHBA ND 555555555
F15 TUBING HYDRAULIC 45CAC UHBA UHBA 5
F15 UTILITY NON RLS DIST CONT UHBB LFCJ K UHAB AAAAAAAAAA
F15 UTILITY NON RLS DIST CONT UHBB RFCJ K UHCB AAAAAAAAAA
F15 UTILITY NON RLS DIST UHBB UDC AAAAAAAAAA
F15 TUBING HYDRAULIC 45CAC UHBA UHBB 5
F15 VALVE LIN DIRECT CONT EMER 14AFB UHBB UHBB A
F15 SWITCH PRESSURE RESERVOIR 45ADF UHBB UHBB A
F15 PANEL CKT BKR NO 1 10R 42CDA UHBB UHBB A
F15 SWITCH PRESS REG 45BFE UHBB UHBB A
F15 UTILITY B DIST UHBC RCD SAAAAAAAAA
F15 UTILITY B DIST UHBC BCE FAAAAAAAAA
F15 UTILITY B DIST UHBC BCH FAAAAAAAAA
F15 UTILITY B DISTRIBUTION UHBC RFAF K UHCB AAAAAAAAAA
F15 UTILITY HYD B UHBC GHC AAAAAAAAAA
F15 UTILITY B HYD DIST UHBC MGR AAAAAAAAAA
F15 TUBING HYDRAULIC 45CAC UHRC UHRC 5
F15 HYDRAULIC COOLING UHBD UHBD 000000000
F15 VALVE TEMP REGULATING 45CAL UHBD UHBD A
F15 HEAT EXCHANGER FUEL/OIL 46ADE UHBD UHBD A
F15 HYDRAULIC FILTERING UHBE UHBD 111111111
F15 FILTER ELEMENT PRESSURE 45CDA UHBE UHBE 1
F15 FILTER ELEMENT RETURN 45CDC UHBE UHBE 1
F15 PRESS SENSING INDICATION UHBF UHBE 1
F15 INDICATOR HYD PRESSURE 45CAN UHBF UHBF 1
F15 SWITCH PRESS MANIFOLD 2EA 45CDH UHBF UHBF 1
F15 TRANSMITTER PRESS GAUGE 45CDE UHBF UHBF 1
F15 INDICATOR TEMP VOLUME 45CFD UHBF UHBF 1
F15 DISPLAY UNIT CAUTION LITE 45EAO UHBF UHBF 1
F15 LOGIC UNIT CAUTION LITE 44ECO UHBF UHBF 1
F15 PANEL CKT BKR GRD SW RN 42CFB UHBF UHBF 1
F15 HYD PRESS GENERATION UHBG UHBD AAAAAAAAAA
F15 LEFT HYD PRESS GENERATION LUHGB UHGB KRUHGB AAAAAAAAAA
F15 RIGHT HYD PRESS GENERATION RUHGB UHGB KLUHGB AAAAAAAAAA

```


PG0095.J1R1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

```

0000000001111111112222222223333333334444444445555555556666666667777777778
1234567890123456789012345678901234567890123456789012345678901234567890
F15 PUMP ASSY 45CRO LUHBGA LUHBG A
F15 PUMP ASSY 45CRO RUHBGA RUHBG A
F15 MANIFOLD HYD 45CBB UHBGB UHBG 1
F15 PUMP HYD UTILITY 45CBC LUHBGC LUHBG A
F15 PUMP HYD UTILITY 45CBC RUHBGC RUHBG A
F15 UTILITY PRESS AND SUPPLY UHBH BCD SAAAAAAAAA
F15 UTILITY PRESS AND SUPPLY UHBH RTA SAAAAAAAAA
F15 UTILITY PRESS AND SUPPLY UHBH FPF SAAAAAAAAA
F15 UTILITY PRESS AND SUPPLY UHBH F K FXX SOAAAAAAAAO
F15 UTILITY PRESS AND SUPPLY UHBH GDB SAAAAAAAAA
F15 UTILITY PRESS AND SUPPLY UHBH GER SAAAAAAAAA
F15 UTILITY PRESS AND SUPPLY UHBH GHC SAAAAAAAAA
F15 UTILITY PRESS AND SUPPLY UHBH MDR SAAAAAAAAA
F15 UTILITY PRESS AND SUPPLY UHBH MGB SAAAAAAAAA
F15 UTILITY PRESSURIZATION SUPP UHBH ND S55555555
F15 UTILITY PRESS AND SUPPLY UHBH UDC SAAAAAAAAA
F15 UTILITY PRESS AND SUPPLY UHBH UHBA FAAAAAAAAA
F15 UTILITY PRESS AND SUPPLY UHBH UHBH FAAAAAAAAA
F15 UTILITY PRESS AND SUPPLY UHBH UHBC FAAAAAAAAA
F15 RESERVOIR HYD UTILITY 45CFO UHBHA UHBH 8
F15 CYLINDER RESERVOIR 45CFF UHBHB UHBH 5
F15 COUPLING HALF QUICK CON 45CAE UHBHC UHBH 1
F15 MANIFOLD HYD SYSTEM ACC 45CDO UHBHD UHBH 8
F15 VALVE CHECK 45CDG UHBHE UHBH 1
F15 VALVE RELIEF 45CDD UHBHF UHBH 1
F15 MANIFOLD 45CDK UHBHG UHBH 1
F15 PCZA HYD DISTRIBUTION UHCA LFCJ 11111111
F15 PCZA HYD DISTRIBUTION UHCA FDWB AAAAAAAAAA
F15 TUBING HYDRAULIC 45BAE UHCAA UHCA 5
F15 PCZB HYD DISTRIBUTION UHCB RFAF UHBC 11111111
F15 PCZB HYD DISTRIBUTION UHCB RFCJ UHBH 11111111
F15 TUBING HYDRAULIC 45BAE UHCBA UHCB 5
F15 PCZ HYD PRESS AND SUPPLY UHCC K UHAG SAAAAAAAAA
F15 PCZ HYD PRESS AND SUPPLY UHCC UHCA FAAAAAAAAA
F15 PCZ HYD PRESS AND SUPPLY UHCC UHCB FAAAAAAAAA
F15 RESERVOIR HYD PCZ 45RFO UHCCA UHCC 8
F15 CYLINDER RESERVOIR 45BFF UHCCB UHCC 5
F15 COUPLING HALF QUICK CONN 45BAC UHCCC UHCC 1
F15 MANIFOLD HYD SYSTEM ACC 45BBO UHCCD UHCC 8
F15 VALVE CHECK 45BBB UHCC E UHCC 1
F15 VALVE RELIEF 45BBE UHCC F UHCC 1
F15 MANIFOLD 45BRK UHCC G UHCC 1
F15 HYDRAULIC FILTERING UHCD 11111111
F15 FILTER ELEMENT RETURN 45BEA UHCDA UHCD 1
F15 FILTER ELEMENT PRESSURE 45BBJ UHCDB UHCD 1
F15 HYDRAULIC COOLING UHCE 00000000
F15 VALVE TEMP REGULATING 45RAF UHCEA UHCE A
F15 HEAT EXCHANGER FUEL/OIL 46ADE UHCEB UHCE A
F15 PRESS SENSING INDICATION UHCF I UHCG 11111111
F15 INDICATOR HYD PRESSURE 45BAK UHCFA UHCF 1

```

PG0095.JIR1 DATE = 09/09/76

FLIGHT SAFETY PREDICTION TECHNIQUE

00000000011111111112222222223333333334444444445555555556666666667777777778
 1234567890123456789012345678901234567890123456789012345678901234567890

F15	SWITCH PRESS MANIFOLD	45BBC	UHCFB	UHCF	1	
F15	TRANSMITTER PRESS GAUGE	45BBD	UHCFB	UHCF	1	
F15	INDICATOR TEMP VOLUME	45BFD	UHCFD	UHCF	0	
F15	LOGIC UNIT CAUTION LITE	44ECO	UHCFE	UHCF	1	
F15	PANEL CKT BKR NO 1 10R	42CDA	UHCFG	UHCF	1	
F15	PANEL CKT BKR GRD SW RH	42CFB	UHCFH	UHCF	1	
F15	CAUT LIGHT DISPLAY PANEL	44EAG	UHCFJ	UHCF	1	
F15	HYDRAULIC PRESS GENERATION		UHCG	UHCC		AAAAAAAAA
F15	PUMP ASSY AXIAL VARIABLE	45BEO	UHCGA	UHCG	8	
F15	MANIFOLD HYD	45EFB	UHCGB	UHCG	1	
F15	PUMP HYDRAULIC PCZ	45BEC	UHCGC	UHCG	A	

CARD COUNT IS 00004360. CARDS WITH ERRORS 00000000